

A

Accel dial switch	3-18
After engine start	4-5
Air breather element	6-29
Air cleaner filter	6-24
Air conditioner & heater	3-47
Air conditioner filter	6-39
Attachment lowering	4-18

B

Battery	6-36
Before starting engine	4-2
Bluetooth	3-72
Boom lowering	4-18
Bucket replacement	6-33
Bucket selection guide	2-9
Bucket tooth replacement	6-34

C

Cab air filter	6-39
Cab device	3-1
Cluster	3-2
Coolant	6-20
Cooling fan	6-24

D

Dozer control	4-7
---------------------	-----

E

Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-37
Engine stop	4-5

F

Fan belt	6-23
Fuel filter	6-26
Fuel leakage	6-27
Fuel system bleeding	6-26
Fuel tank	6-25
Fuse box	3-60

G

Gauge	3-3
-------------	-----

H

Hydraulic breaker	8-1
Hydraulic oil changing	6-27-1
Hydraulic oil filling	6-27-1
Hydraulic oil level	6-27

L

Levers & pedals	3-44
Lifting capacities	2-5
Lubricant specification	6-10

M

Maintenance check list	6-11
Major component	2-1
Monitor panel	3-2
Mounting and dismounting	1-19

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
------------------	------

P

Pedals	3-45
Periodical replacement parts	6-5
Pin & bushing lubrication	6-35
Prefilter	6-25
Pilot line filter	6-29

Q

Quick coupler	8-10
---------------------	------

R

Radiator flushing	6-20
Radio and USB player	3-62
RCV lever lubricate	6-31
Recommended oils	6-10
Relieving pressure	6-3
Return filter	6-29

S

Safety hints	1-1
Safety labels	0-7
Safety parts	6-5
Seat	3-52
Service meter	3-61
Service socket	3-51
Speciation for major component	2-11
Specification	2-2
Start switch	3-37
Storage	4-19
Suction strainer	6-28
Swing bearing grease	6-30
Swing reduction gear oil	6-30
Switch panel	3-37
Switches	3-37

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-10
Track adjustment	6-32
Track shoe	2-8
Transportation	5-1
Travel reduction gear oil	6-31
Travelling machine	4-8
Troubleshooting guide	7-1

U

Undercarriage	2-10
---------------------	------

W

Warming up operation	4-5
Warning lamps	3-4
Weight	2-4
Wind shield	3-60
Working device operation	4-7
Working method	4-11
Working range	2-3