



# WARNING

## CALIFORNIA PROPOSITION 65

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to [www.P65warnings.ca.gov/diesel](http://www.P65warnings.ca.gov/diesel).

91K4-07310-EN

**▲ Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.**

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

**※ For more information go to [www.P65warnings.ca.gov/diesel](http://www.P65warnings.ca.gov/diesel).**

# CONTENTS

|                                            |      |                                              |      |
|--------------------------------------------|------|----------------------------------------------|------|
| EC declaration of conformity.....          | 0-1  | 6. Efficient working method.....             | 4-11 |
| Foreword .....                             | 0-2  | 7. Operation in the special work sites ..... | 4-15 |
| Before servicing this machine .....        | 0-4  | 8. Normal operation of excavator .....       | 4-17 |
| EC regulation approved .....               | 0-5  | 9. Attachment lowering .....                 | 4-18 |
| Table to enter S/No and distribution ..... | 0-6  | 10. Storage .....                            | 4-19 |
| Safety labels .....                        | 0-7  | 11. RCV lever operating pattern .....        | 4-21 |
| Machine data plate .....                   | 0-24 | 12. Handling the rubber tracks .....         | 4-23 |
| Guide (direction, S/No, Symbol) .....      | 0-25 |                                              |      |

## 1. SAFETY HINTS

|                                    |     |
|------------------------------------|-----|
| 1. California proposition 65 ..... | 1-1 |
| 2. Safety instructions .....       | 1-2 |

## 2. SPECIFICATIONS

|                                             |      |
|---------------------------------------------|------|
| 1. Major components .....                   | 2-1  |
| 2. Specifications .....                     | 2-2  |
| 3. Working range .....                      | 2-9  |
| 4. Weight .....                             | 2-11 |
| 5. Lifting capacities .....                 | 2-13 |
| 6. Bucket selection guide .....             | 2-53 |
| 7. Undercarriage .....                      | 2-56 |
| 8. Specification for major components ..... | 2-58 |
| 9. Recommended oils .....                   | 2-61 |

## 3. CONTROL DEVICES

|                                     |      |
|-------------------------------------|------|
| 1. Cab devices .....                | 3-1  |
| 2. Cluster .....                    | 3-2  |
| 3. Switches .....                   | 3-40 |
| 4. Levers and pedals .....          | 3-47 |
| 5. Air conditioner and heater ..... | 3-50 |
| 6. Others .....                     | 3-54 |

## 4. OPERATION

|                                           |     |
|-------------------------------------------|-----|
| 1. Instruction for new machine .....      | 4-1 |
| 2. Check before starting the engine ..... | 4-2 |
| 3. Starting and stopping the engine ..... | 4-3 |
| 4. Operation of the working device .....  | 4-7 |
| 5. Traveling of the machine .....         | 4-8 |

## 5. TRANSPORTATION

|                                         |      |
|-----------------------------------------|------|
| 1. Preparation for transportation ..... | 5-1  |
| 2. Dimension and weight .....           | 5-2  |
| 3. Loading the machine .....            | 5-8  |
| 4. Fixing the machine .....             | 5-10 |
| 5. Loading and unloading by crane ..... | 5-11 |

## 6. MAINTENANCE

|                                       |      |
|---------------------------------------|------|
| 1. Instruction .....                  | 6-1  |
| 2. Tightening torque .....            | 6-6  |
| 3. Fuel, coolant and lubricants ..... | 6-9  |
| 4. Maintenance check list .....       | 6-10 |
| 5. Maintenance chart .....            | 6-15 |
| 6. Service instruction .....          | 6-17 |
| 7. Electrical system .....            | 6-37 |
| 8. Air conditioner and heater .....   | 6-40 |

## 7. TROUBLESHOOTING GUIDE

|                            |     |
|----------------------------|-----|
| 1. Engine .....            | 7-1 |
| 2. Electrical system ..... | 7-2 |
| 3. Others .....            | 7-3 |

## 8. HYDRAULIC BREAKER AND QUICK COUPLER

|                                               |      |
|-----------------------------------------------|------|
| 1. Selecting hydraulic breaker .....          | 8-1  |
| 2. Circuit configuration .....                | 8-2  |
| 3. Maintenance .....                          | 8-3  |
| 4. Precaution when operating the breaker .... | 8-4  |
| 5. Quick coupler .....                        | 8-10 |