

A

After engine start	4-5
Air breather element	6-30
Air cleaner filter	6-23
Air conditioner & heater	3-50
Air conditioner filter	6-40
Attachment lowering	4-18

B

Battery	6-37
Before starting engine	4-2
Boom lowering	4-18
Boom swing cylinder grease	6-31
Bucket clearance adjustment	6-34
Bucket replacement	6-34
Bucket selection guide	2-53
Bucket tooth replacement	6-35

C

Cab air filter	6-40
Cab device	3-1
Changing machine control pattern	4-21
Cigar lighter	3-54
Cluster	3-2
Cooling fan	6-23
Crankcase breather system	6-24

D

Data plate	0-24
Dozer control	3-49
DPF	6-26

E

Engine oil filter	6-17
Engine oil level	6-17
Engine starting & stop	4-4
Engine starting by booster	6-38
Engine stop	4-6

F

Fan belt	6-22
Fuel filter pump filter	6-26
Fuel filter	6-25
Fuel leakage	6-26
Fuel system bleeding	6-25
Fuel tank	6-24
Fuse & relay box	3-56

G

Gauge	3-4
-------------	-----

H

Hydraulic breaker	8-1
Hydraulic oil changing	6-28
Hydraulic oil filling	6-27
Hydraulic oil level	6-27
Hydraulic oil return filter	6-29

L

LCD	3-2
Levers & pedals	3-47
Lifting capacities	2-13
Lubricant specification	2-61

M

Maintenance check list	6-10
Major component	2-58
MCU (Machine Control Unit)	3-57
Monitor panel	3-2

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-22
Operating pattern	4-21

P

Pattern change valve	4-22
Pedals	3-47
Periodical replacement parts	6-5
Pilot line filter element	6-30
Pin & bushing lubrication	6-36
Pilot lamps	3-14
Power mode	3-20

Q

Quick coupler	8-10
---------------------	------

R

Radiator coolant	6-19
Radiator flushing	6-20
Radio & USB player	3-58
RCV lever lubricate	6-32
Recommended oils	2-61
Relieving pressure	6-3

RCV lever operating pattern	4-21
-----------------------------------	------

S

Safety instructions	1-2
Safety labels	0-6
Safety parts	6-5
Seat	3-55
Seat belt	3-55
Specification for major component	2-58
Specification	2-2
Start switch	3-40
Storage	4-20
Suction strainer	6-29
Swing bearing grease	6-31
Swing reduction gear oil	6-31
Switch panel	3-40
Switches	3-40

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-10
Track adjustment	6-33
Track shoe selection	2-56
Transportation	5-1
Travel reduction gear oil	6-32
Traveling machine	4-8
Troubleshooting guide	7-1

U

Undercarriage	2-58
---------------------	------

W

Warming up operation	4-5
Warning lamps	3-8
Water separator	6-24
Weight	2-11
Working device operation	4-7
Working method	4-11
Working range	2-9