

A

After engine start	4-5
Air breather element	6-29
Air cleaner filter	6-24
Air conditioner & heater	3-43
Air conditioner filter	6-40
Attachment lowering	4-18

B

Battery	6-36
Before starting engine	4-2
Boom lowering	4-18
Boom swing cylinder grease	6-31
Bucket clearance adjustment	6-33
Bucket replacement	6-33
Bucket selection guide	2-16
Bucket tooth replacement	6-34

C

Cab air filter	6-40
Cab device	3-1
Changing machine control pattern	4-21
Cigar lighter	3-46
Cluster	3-2
Cooling fan	6-24

D

Data plate	0-15
------------------	------

E

Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-4
Engine starting by booster	6-37
Engine stop	4-6

F

Fan belt	6-23
Fuel filter	6-26
Fuel leakage	6-27
Fuel system bleeding	6-26
Fuel tank	6-25
Fuse & relay box	3-55

G

Gauge	3-3
-------------	-----

H

Hydraulic breaker	8-1
Hydraulic oil changing	6-28
Hydraulic oil filling	6-27-1
Hydraulic oil level	6-27
Hydraulic oil return filter	6-29

L

LCD	3-2
Levers & pedals	3-41
Lifting capacities	2-8
Lubricant specification	2-21

M

Maintenance check list	6-11
Major component	2-12
MCU (Machine Control Unit)	3-49
Monitor panel	3-2

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
Operating pattern	4-21

P

Pattern change valve	4-22
Pedals	3-41
Periodical replacement parts	6-5
Pilot line filter element	6-29
Pin & bushing lubrication	6-35
Pilot lamps	3-10

Q

Quick coupler	8-6
---------------------	-----

R

Radiator coolant	6-20
Radiator flushing	6-20
Radio & USB player	3-57
RCV lever lubricate	6-31
Recommended oils	2-21, 6-10
Relieving pressure	6-3
RCV lever operating pattern	4-21

S

Safety instructions	1-2
Safety labels	0-5
Safety parts	6-5
Seat	3-48
Seat belt	3-48
Specification for major component	2-18
Specification	2-2
Start switch	3-35
Storage	4-19
Suction strainer	6-28
Swing bearing grease	6-30
Swing reduction gear oil	6-31
Switch panel	3-35
Switches	3-35

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-10
Track adjustment	6-32
Track shoe selection	2-17
Transportation	5-1
Travel reduction gear oil	6-31
Traveling machine	4-8
Troubleshooting guide	7-1

U

Undercarriage	2-17
---------------------	------

W

Warming up operation	4-5
Warning lamps	3-5
Water separator	6-25
Weight	2-7
Working device operation	4-7
Working method	4-11
Working range	2-5