


SAFETY LABELS

1. LOCATION

Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

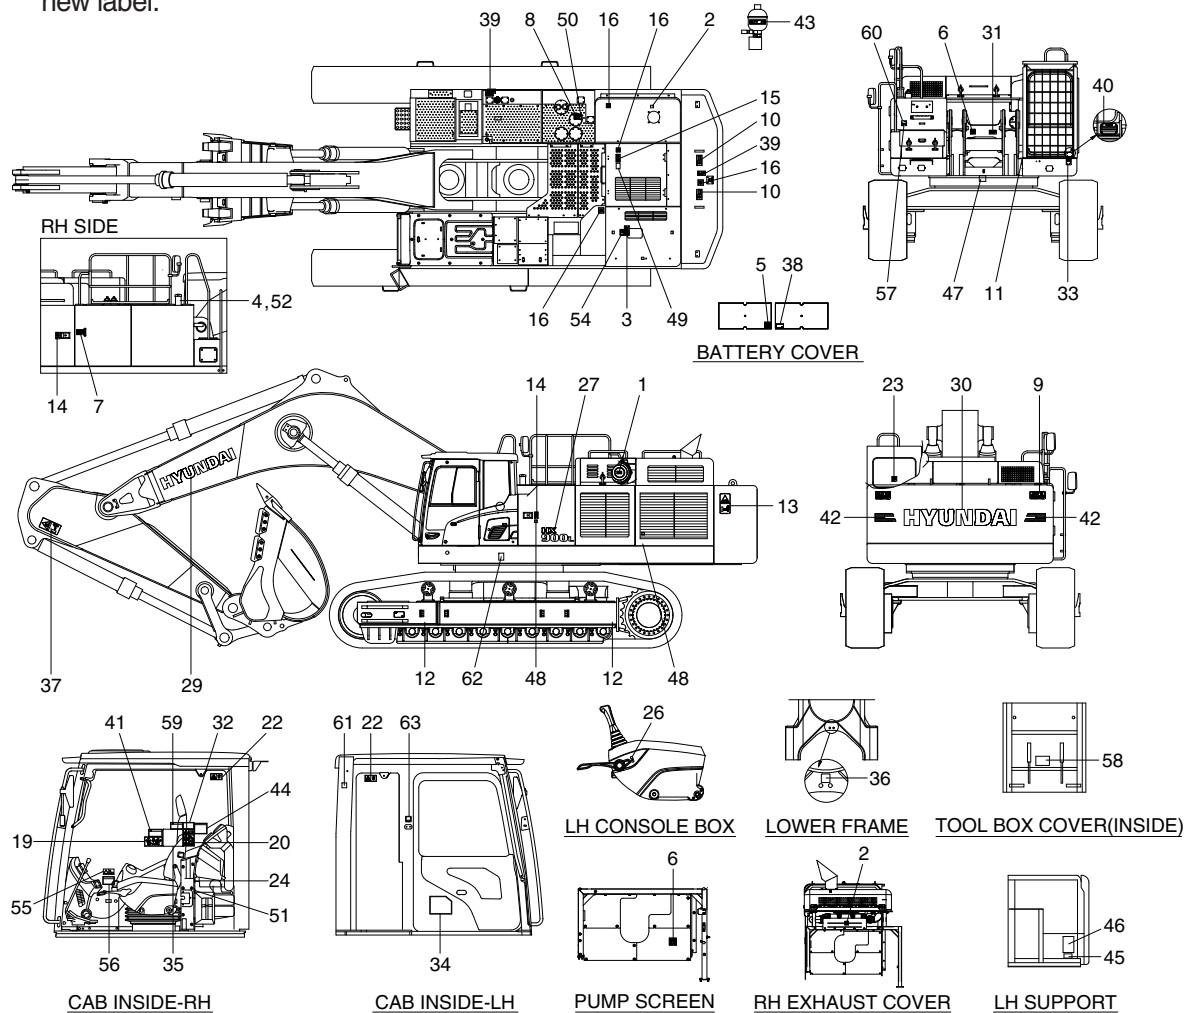

900F0SL01

1 Air cleaner filter	24 Air conditioner filter	45 M/control pattern change-w/o valve
2 Turbocharger cover	26 Safety knob	46 M/control pattern change-w/valve
3 Radiator cap	27 Model name	47 Swing bearing grease
4 Fueling	29 Trade mark (boom)	48 Battery position
5 Battery accident	30 Trade mark (CWT)	49 Lubrication oil
6 High pressure hose	31 Reduction gear grease	50 Fuel shut off
7 Hydraulic oil level	32 Clamp locking	51 MCU/ECM connector
8 Hydraulic oil lub	33 Noise level LWA	52 Ultra low sulfur diesel
9 Keep clear-rear	34 Service instruction	54 Surge tank
10 Lifting eye	35 Lifting chart	55 Key off caution
11 Name plate	36 Tie	56 RCV lever
12 Sliding ideogram	37 Keep clear-boom/arm	57 Diesel exhaust fluid
13 Keep clear-side	38 Electric welding	58 Air compressor
14 Stay fix	39 Falling	59 Air compressor cab
15 Engine hood shearing	40 FOPS FOG plate	60 DEF/AdBlue® tank fill-up
16 No step	41 Caution	61 Fire extinguisher
19 M/control pattern	(water separator, turbocharger)	62 Emergency switch
20 Ref operator's manual	42 Reflecting	63 Hammer
22 Safety front window	43 Accumulator	
23 Safety rear window	44 M/control pattern change valve	

2. DESCRIPTION


There are several specific warning labels on this machine please become familiarized with all warning labels.

Replace any safety label that is damaged, or missing. If a safety label is attached to a part that is replaced, install a safety label on the replacement part.

1) AIR CLEANER FILTER (item 1)

This warning label is positioned on the air cleaner cover.

- ※ **Periodic and proper inspection, cleaning and change of elements prolong engine life time and maintain the good performance of engine.**

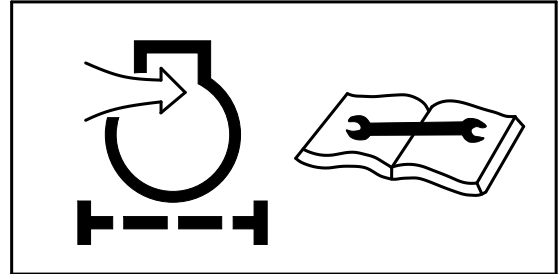

21070FW01

2) TURBOCHARGER COVER (item 2)

This warning label is positioned on the right top side of the engine hood and RH exhaust cover.

- ⚠ **Do not touch turbocharger or it may cause severe burn. When the engine is running or immediately after engine shut down.**



21070FW02

3) RADIATOR CAP (item 3)

This warning label is positioned on the left top side of the engine hood.

- ⚠ **Never open the filler cap while engine running or at high coolant temperature. Hot coolant can cause serious burns, injury or death.**




14070FW03

4) FUELING (item 4)

This warning label is positioned on the right side of fuel filler neck.

- ⚠ **Stop the engine when refueling. All lights or flames shall be kept at a safe distance while refueling.**

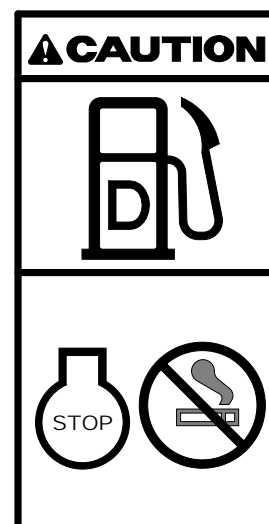

290F0FW02

5) BATTERY ACCIDENT (item 5)

This warning label is positioned on the battery cover.

⚠ **Electrolyte containing sulfuric acid cause severe burns. Avoid being in contact with skin, eyes or clothes. In the event of accident flush with sufficient water, call a physician immediately.**

※ **Maintain the electrolyte at the recommended level. Add distilled water to the battery only when starting up, never when shutting down.**


With electrolyte at proper level, less space may cause the gases to be accumulated in the battery.

⚠ **Extinguish all smoking materials and open flames before checking the battery.**

⚠ **Do not use matches, lighters or torches as a light source near the battery for the probable presence of explosive gas.**

⚠ **Do not allow unauthorized personnel to change the battery or to use booster cables.**

⚠ **For safety from electric shock, do not battery terminal with a wet hand.**

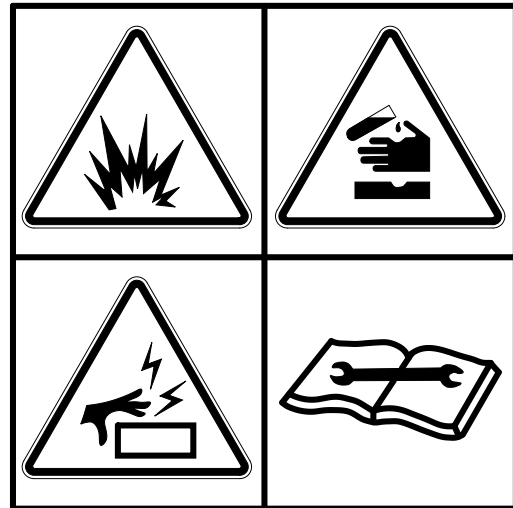

36070FW05

6) HIGH PRESSURE HOSE (item 6)

This warning label is positioned on the front of the upper frame and the pump screen.

⚠ **Escaping fluid under pressure can penetrate the skin causing serious injury.**

⚠ **Avoid the hazard by relieving pressure before disconnecting hydraulic lines or other lines.**

※ **See the maintenance section for details.**




14070FW29

7) HYDRAULIC OIL LEVEL (item 7)

This warning label is positioned on the RH side cover.

- ▲ Place the bucket on the ground whenever servicing the hydraulic system.
- ※ Check oil level on the level gauge.
- ※ Refill the recommended hydraulic oil up to specified level if necessary.

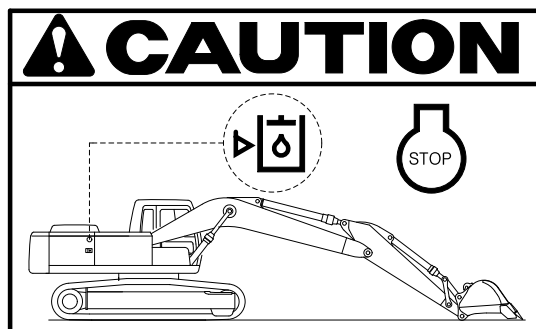

21070FW07

8) HYDRAULIC OIL LUBRICATION (item 8)

This warning label is positioned on the top side of the hydraulic tank.

- ※ Do not mix with different brand oils.
- ▲ Never open the filler cap while high temperature.
- ▲ Loosen the cap slowly and release internal pressure completely.




14070FW08

9) KEEP CLEAR-REAR (item 9)

This warning label is positioned on the rear side of the counterweight.

- ▲ To prevent serious personal injury or death keep clear of machine swing radius.
- ▲ Do not deface or remove this label from the machine.

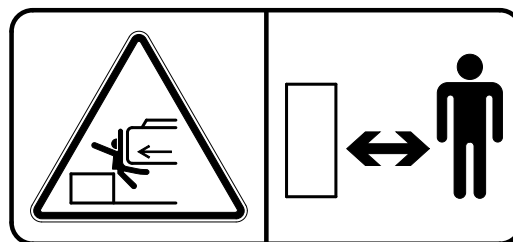


21090FW09

10) LIFTING EYE (item 10)

This warning label is positioned on the top of the counterweight.

- ▲ Do not lift the machine by using lifting eyes on the counterweight or the lifting eyes may be subject to overload causing its breaking and possible personal injury.
- ※ See page 5-1 for proper lifting method of the machine.

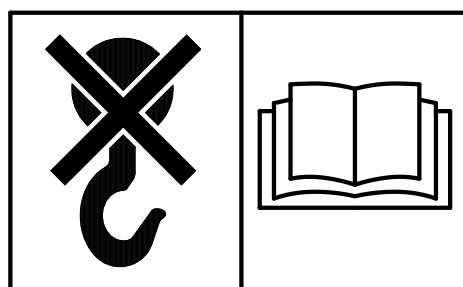


21070FW10

11) KEEP CLEAR-SIDE (item 13)

This warning label is positioned on the left and right side of the counterweight.

- ⚠ **To prevent serious personal injury or death keep clear of machine swing radius.**
- ⚠ **Do not deface or remove this label from the machine.**

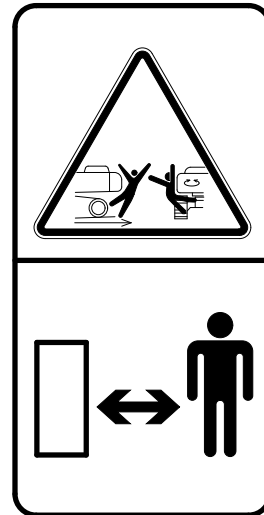


21070FW13

12) STAY FIX (item 14)

This warning label is positioned on the left and right side cover.

- ⚠ **Be sure to support the stay when the door needs to be opened.**
- ⚠ **Be careful that the opened door may be closed by the external or natural force like strong wind.**

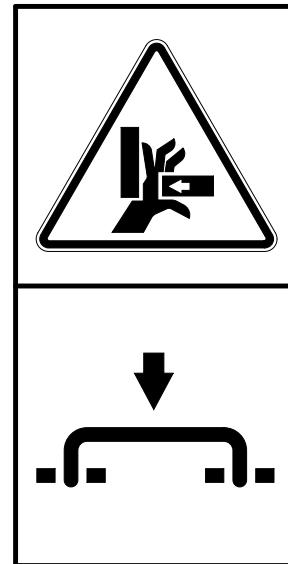


21070FW14

13) ENGINE HOOD SHEARING (item 15)

This warning label is positioned on the engine hood.

- ⚠ **Don't open the engine hood during the engine's running. Stay clear of rotating parts.**
- ⚠ **Don't touch exhaust pipe or it may cause severe burn.**

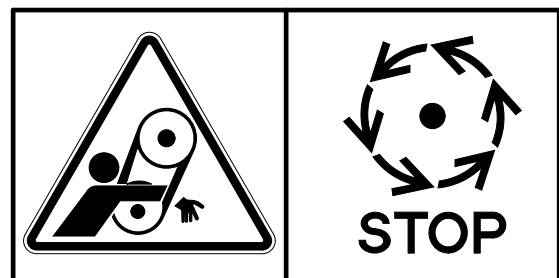


21070FW15

14) NO STEP (item 16)

This warning label is positioned on the engine hood and counterweight.

- ⚠ **Don't step on the engine hood and counterweight.**

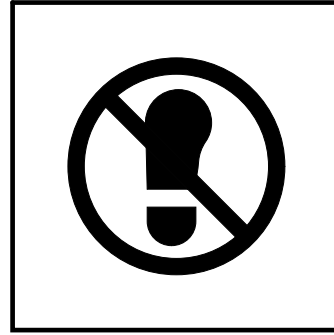


21070FW16

15) MACHINE CONTROL PATTERN (item 19)

This warning label is positioned in right side window of the cab.

- ⚠ **Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.**
- ⚠ **Failure to do so could result in injury or death.**

See page 4-12 for details.

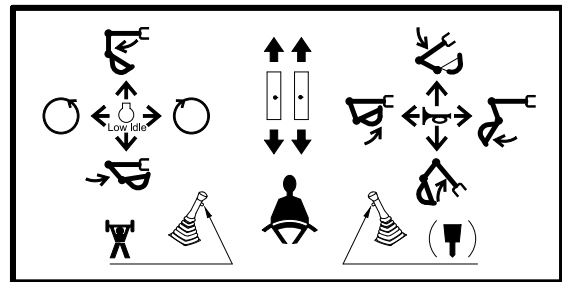

36070FW19

16) REF OPERATOR'S MANUAL (item 20)

This warning label is positioned on the right side window of the cab.

(1) Ref operator manual


- ⚠ **Study the operator's manual before starting and operating machine.**
- ⚠ **Do not operate this machine unless you have read and understand the instructions and warnings in this manual.**
- Failure to follow the instructions or warnings could result in injury or death.

(2) Max height

- ⚠ **Serious injury or death can result from contact with electric lines.**
- An electric shock being received by merely coming into the vicinity of an electric lines, the minimum distance should be kept considering the supply voltage as page 1-16.

(3) Interference

- ⚠ **Be careful to operate machine equipped with quick clamp or extensions.**
- Bucket may hit cab or boom, boom cylinders when it reached vicinity of them.

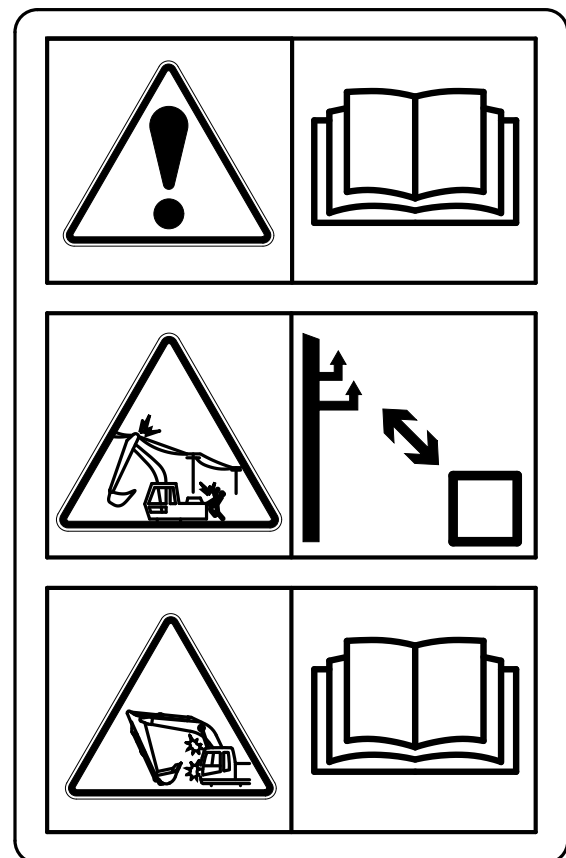


2609A0SL05

17) SAFETY FRONT WINDOW (item 22)

This warning label is positioned on the both side window of the cab.

- ⚠ **Be careful that the front window may be promptly closed.**
- ※ **See page 3-69 for details.**

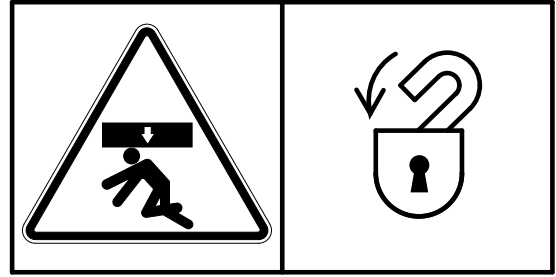

21070FW24

18) SAFETY REAR WINDOW (item 23)

This warning label is positioned on the inside of rear window.

- ※ **The rear window serves as an alternate exit.**
- ※ **To remove rear window, pull the ring and push out the glass.**




2609A0SL02

19) AIR CONDITIONER FILTER (item 24)

This warning label is positioned on the air conditioner cover.

- ※ **Periodic and proper inspection, cleaning and change of filter prolong air conditioner life time and maintain good performance.**

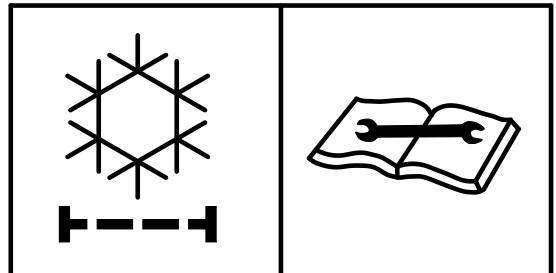


21070FW26

20) SAFETY KNOB (item 26)

This warning label is positioned on the cover of the safety knob.

- ⚠ **Before you get off the machine be sure to place the safety knob LOCKED position.**

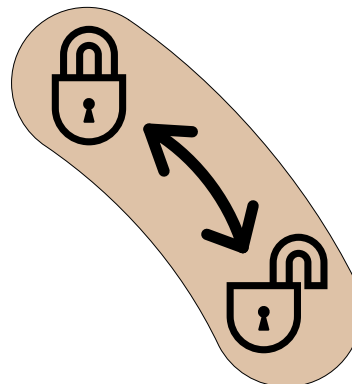


30007A1FW07A

21) REDUCTION GEAR GREASE (item 31)

This warning label is positioned in the front of upper frame.

- ⚠ **Grease is under high pressure.**
Grease coming out of the grease plug under pressure can penetrate the body causing injury or death.

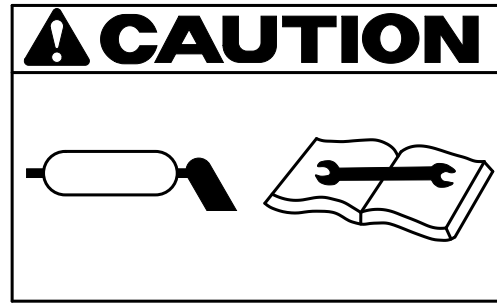


21070FW35

22) CLAMP LOCKING (item 32)

This warning label is positioned on the right side window of cab.

- ⚠ **Serious injury or death can result from dropping bucket.**
- ⚠ **Operating the machine with quick clamp switch unlocked or without safety pin of moving hook can cause the bucket to drop off.**

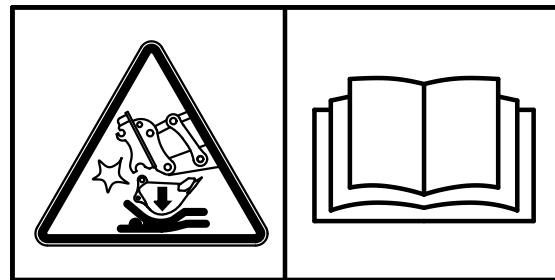


14070FW60

23) TIE (item 36)

This warning label is positioned on the lower frame.

- ⚠ **Never tow the machine using tie hole, because this may break.**
- ⚠ **See page 4-15 for detail.**

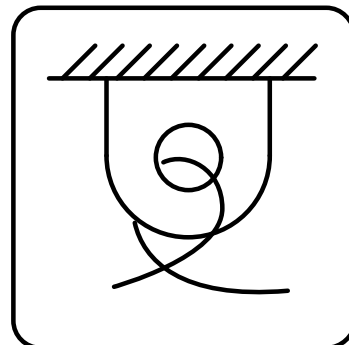

4507A0FW02

24) KEEP CLEAR-BOOM/ARM (item 37)

This warning label is positioned on both side of the arm.

- ⚠ **Serious injury or death can result from falling of the attachment.**
- ⚠ **To prevent serious injury or death, keep clear the underneath of attachment.**



14070FW31


25) ELECTRIC WELDING (item 38)

This warning label is positioned on the battery cover.

⚠ Before carrying out any electric welding on this machine, follow the below procedure.

- Pull the connector out of all electric control units.
- Connector the ground lead of the welding equipment as close to the welding point as possible.

※ See page 6-48 for detail.

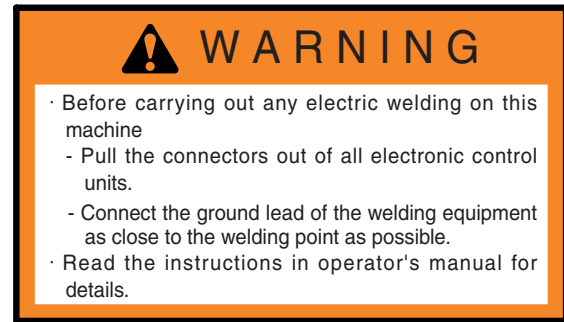

7807AFW20

26) FALLING (item 39)

This warning label is positioned on the top of the hydraulic tank and counterweight.

⚠ Falling is one of the major cause of personal injury.

⚠ Be careful of slippery conditions on the platforms, steps and handrails when standing on the machine.




14070FW30

27) CAUTION (W/SEPARATOR, TURBOCHARGER) (item 41)

This warning label is positioned on the right window of the cab.

⚠ In order to protect high pressure fuel system, please drain water in water separator before starting the engine.

⚠ In order to prevent turbocharger failure, please allow more than 5 minutes' cool down period (no load low idle operation) before shutting the engine off.

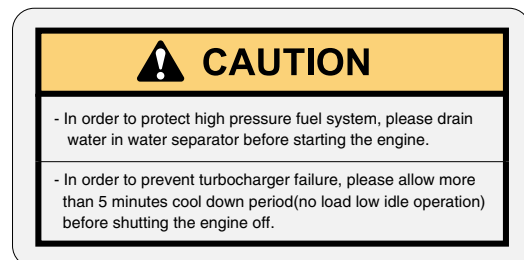

120090SL02

28) REFLECTING (item 42)

This warning label is positioned on the rear of counterweight.

⚠ To prevent serious personal injury or death keep clear of machine swing radius.

⚠ Do not deface or remove this label from the machine.

 


290F0FW01

29) ACCUMULATOR (item 43)

This warning label is positioned on the accumulator of the solenoid valve.

- ※ The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.
- ▲ Never make any hole in the accumulator expose it to flame or fire.
- ▲ Do not weld anything to the accumulator.
- ※ When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your HD Hyundai Construction Equipment distributor.




1107A0FW46

30) MACHINE CONTROL PATTERN CHANGE VALVE (item 44)

This warning label is positioned on the right side window of the cab.

- ▲ The machine control pattern can easily be changed to the "ISO type" or to the "A type" by changing the position of the lever of the pattern change valve.
- ▲ Before starting this machine, check the lever pattern valve.
- ※ See page 4-27 for detail.

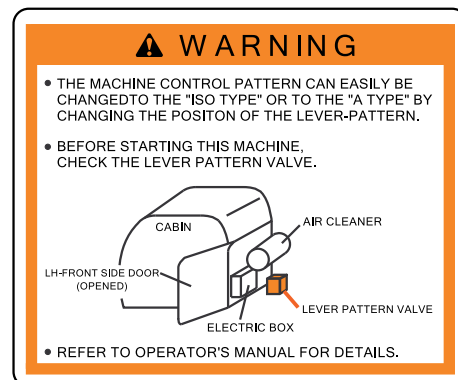


2609A0SL11

31) MACHINE CONTROL PATTERN CHANGE-W/O VALVE (item 45)

This warning label is positioned on the LH support of cowl.

- ▲ Check the machine control pattern before starting this machine.
- ※ See page 4-26 for detail.

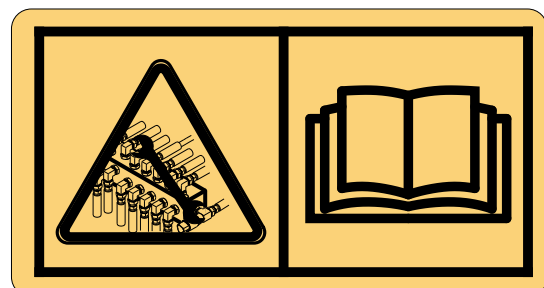

14W90FW47


32) MACHINE CONTROL PATTERN CHANGE- W/VALVE (item 46)

This warning label is positioned on the LH support of cowl.

⚠ **Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.**

⚠ **Failure to do so could result in injury or death.**

※ See page 4-27 for details.

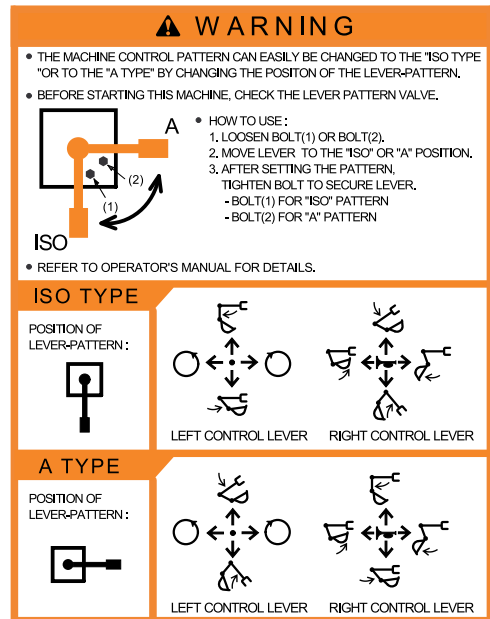


38090FW01A

33) SWING BEARING GREASE (item 47)

This warning label is positioned in the front of swing ring gear.


※ See page 6-39 for details.

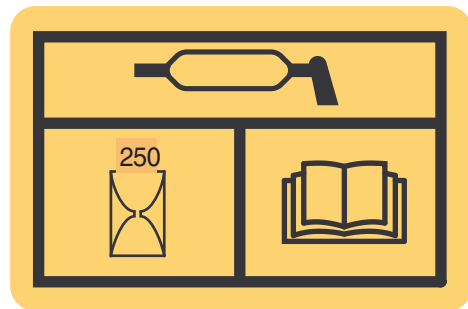

38090FW02

34) BATTERY POSITION (item 48)

This warning label is positioned left inside of side cover.

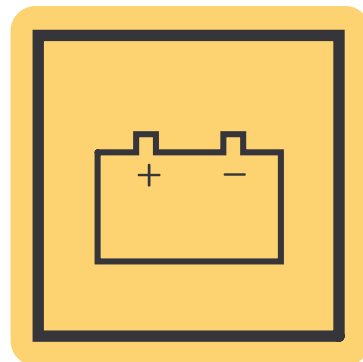


38090FW03

35) LUBRICATION OIL (item 49)

This warning label is positioned on the top side of the engine hood.

- ※ Recommended lubrication oil ACEA-E9 is equivalent to API CJ-4.
- ※ See page 6-10 for details.

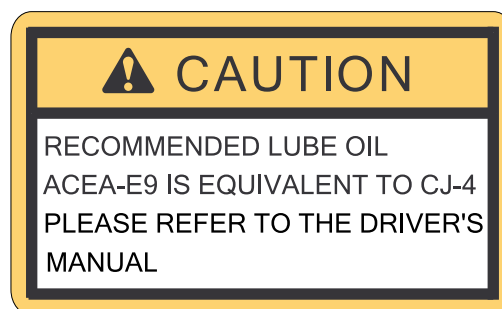


290F0SL03

36) FUEL SHUT OFF (item 50)

This warning label is positioned on the top side of the hydraulic tank.

- ※ Fill only the hydraulic oil.
- ※ Do not fill the diesel fuel.
- ⚠ Relieve tank pressure with the engine off by removing the cap slowly to prevent burns from hot oil.

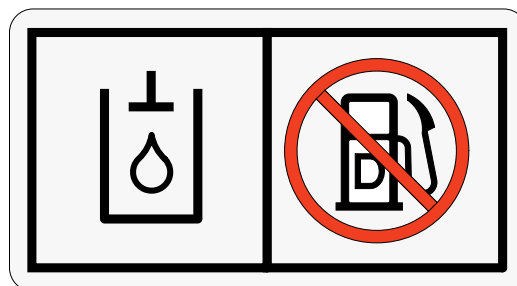


140WH90FW51

37) MCU/ECM CONNECTOR (item 51)

This warning label is positioned on the low cover of the air conditioner in the cab.

- ※ MCU communicates the machine data with Laptop computer through RS232 service socket.
- ※ ECM communicates the engine data with cummins INSITE tool adapter through J1939 service socket.
- ※ See page 3-69 for details.

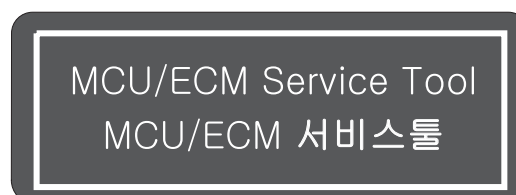


235Z90FW52

38) ULTRA LOW SULFUR DIESEL (item 52)

This warning label is positioned on the light side of fuel filler neck.

- ※ Use ultra low sulfur fuel only.
- ※ Ultra low sulfur fuel sulfur content ≤ 15 ppm

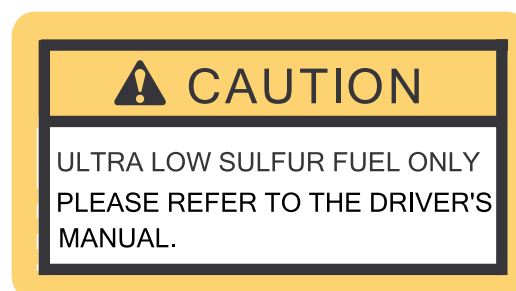


2609A0SL03

39) SURGE TANK (item 54)

This warning label is positioned on the top side of the engine hood.

This system must be filled slowly to prevent air locks.

- ※ Fill rate ≤ 11 lpm

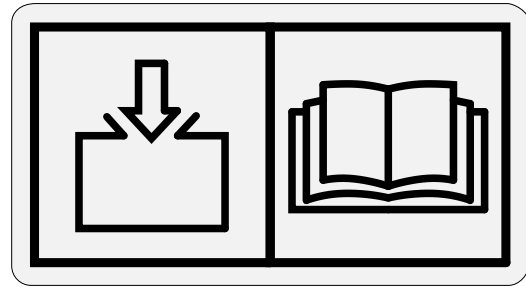


3009A0FW54

40) KEY OFF CAUTION (item 55)

This warning label is positioned on the right side window of the cab.

- ※ Park on a flat place and stop the engine for inspecting and repairing. Properly TAG machine is not operational. (remove start key)

Extreme care shall be taken during maintenance work.

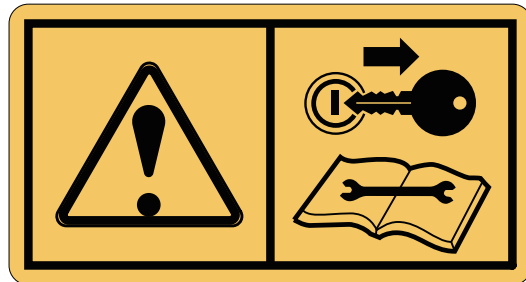

290F0FW05

41) RCV LEVER (item 56)

This warning label is positioned on the right side window of the cab.

- ※ When you work by moving the seat to the front of cab, it is possible to take place interference between cluster and RCV lever at specific position.

To prevent this interference, handle below works.

- (1) Rotate cluster.
- (2) Adjust seat position for up-and-downward using seat height adjuster knob in suspension.
- (3) Lower the console box height using knob between RH console box and seat cushion.
- (4) Push back console and seat position using seat and console box adjust knob between LH console box and seat cushion.



290F0FW04


42) DIESEL EXHAUST FLUID (item 57)

This warning label is positioned on the front of DEF/AdBlue® tank.

- ※ Fill only the DEF/AdBlue® (Diesel Exhaust Fluid, standardised as ISO 22241).

Aqueous urea solution made with 32.5% high-purity urea and 67.5% deionized water.

- ※ Do not fill the diesel fuel.

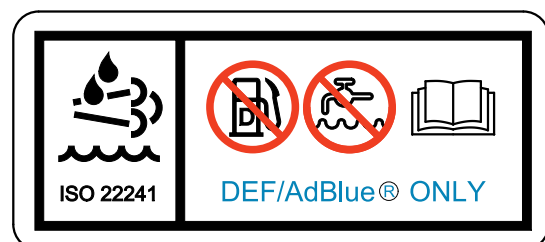

290F0SL04

43) AIR COMPRESSOR (item 58)

This warning label is positioned on the inside of the tool box cover.

- ⚠ Do not touch air compressor or it may cause server burn.




480F0SL04

44) AIR COMPRESSOR (CAB) (item 59)

This warning label is positioned on the right window of cab.

- ※ Park on a flat place to use the air compressor.
- ※ Be sure the engine working during the use of air compressor. After the use, make sure the compressor switch off.
- ※ During the operation, do not use the other electrical devices (air conditioner, lights, stereo etc.)
- ※ Lower the air breather.
- ※ After the use, completely drain the water and the air inside the air tank.
- ※ Do not change the setting of the operating switch or the harness.
- ※ Do not touch the cylinder head during the operation.

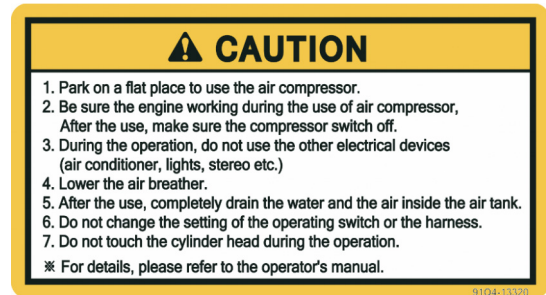


480F0SL05

45) DEF/AdBlue® TANK FILL-UP (item 60)

This warning label is positioned on the front of DEF/AdBlue® tank.

- ※ Warning lamp turns on when the tank is completely filled with DEF/AdBlue®. After turning light on, do not pour DEF/AdBlue® any more. Otherwise DEF/AdBlue® tank may freeze and burst in winter season.
- ※ Fill the tank with DEF/AdBlue® after key on and then turn off the start key.

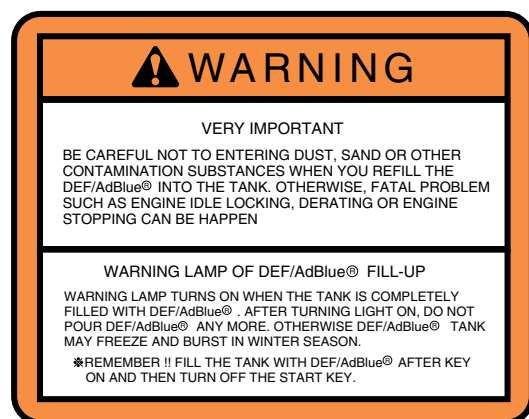

480F0SL06

46) FIRE EXTINGUISHER (item 61)

This warning label is located on the left rear of the cab inside.

- ※ **Read and understand the instructions adhered decal on the fire extinguisher.**




91Q6-07290

47) EMERGENCY SWITCH (item 62)

This warning label is located on the left front side of the upper frame.

- ※ **This switch is used to emergency stop the engine.**
- ※ **See page 3-37 for details.**

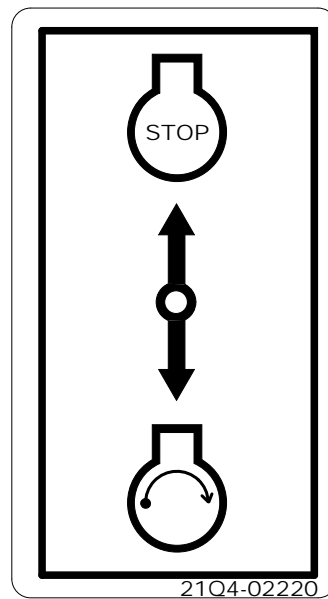

900F0SL02

48) HAMMER (item 63)

This label is located on the left stay of the cab inside.

- ※ **The window serves as an alternate exit.**



91Q6-07280