

A

Accel dial switch	3-24
After engine start	4-4
Air breather element	6-34
Air cleaner filter	6-29
Air conditioner & heater	3-30
Air conditioner filter	6-46
Alternate exit	0-11
Attachment lowering	4-23

B

Battery	6-43
Before starting engine	4-2
Boom lowering	4-23
Bucket clearance adjustment	6-41
Bucket replacement	6-39
Bucket selection guide	2-6
Bucket tooth replacement	6-37

C

Cab air filter	6-46
Cab device	3-1
Changing machine control pattern	8-1
Cigar lighter	4-26
Cluster	3-34
Coolant	3-2
Cooling fan	6-26
Corrosion resister	6-20

D

Disassembling for transportation	5-5
Drain filter	6-34

E

Emergency engine speed control connector ..	3-54
Engine oil filter	6-37
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-43
Engine stop	4-5

F

Fan belt	6-25
Fixing the machine	5-4
Fuel filter	6-30
Fuel leakage	6-31

Fuel tank	6-29
Fuse & relay box	3-53

G

Gauge	3-3
Gear box oil level	6-28

H

Handsfree	3-35
Hydraulic oil changing	6-32
Hydraulic oil filling	6-32
Hydraulic oil level	6-32

L

LCD	3-2
Levers & pedals	3-28
Lifting capacities	2-5
Lubricant specification	2-12

M

Maintenance check list	6-11
Major component	2-9
MCU (Machine Control Unit)	3-53
Mode selection system	4-7
Monitor panel	3-2
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-24
------------------	------

P

Pedals	3-28
Periodical replacement parts	6-5
Pilot filter	6-34
Pin & bushing lubrication	6-42
Prefilter	6-31
Pilot lamps	3-7

Q

Quick clamp	8-6
-------------------	-----

R

Radiator flushing	6-22
Radio & USB player	3-39
RCV lever lubricate	6-37

Recommended oils	2-12, 6-10
Relieving pressure	6-3
Remote controller	3-37
Return filter	6-33

S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
Seat	3-52
Seat belt	3-52
Service meter	3-54
Service socket	3-35, 3-54
Specification for major component	2-9
Specification	2-2
Start switch	3-23
Storage	4-24
Suction strainer	6-33
Swing bearing grease	6-35
Swing gear & pinion grease	6-36
Swing reduction gear oil	6-35
Switch panel	3-23
Switches	3-9, 3-23

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-15
Track adjustment	6-38
Track shoe selection	2-8
Transportation	5-1
Travel reduction gear oil	6-37
Traveling machine	4-13
Troubleshooting guide	7-1

U

Undercarriage	2-7
USB socket	3-35

W

Warming up operation	4-4
Warning lamps	3-4
Water filter	6-20
Weight	2-4
Windshield	3-55
Working device operation	4-11
Working method	4-16
Working range	2-3