


## 5. AIR CONDITIONER AND HEATER


Air conditioner and heater are equipped for pleasant operation against outside temperature.

### • Location of air flow ducts

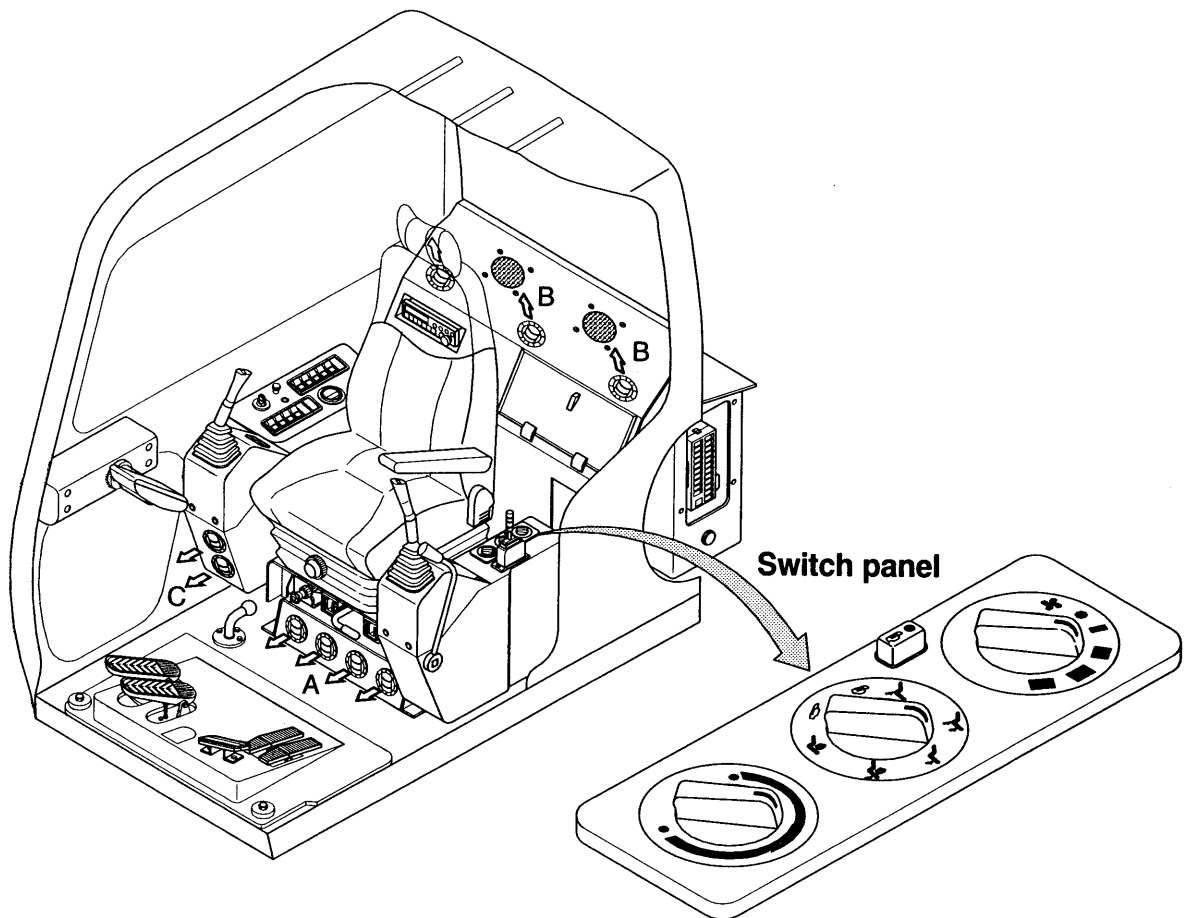

13W03CD04


### 1) FAN SWITCH

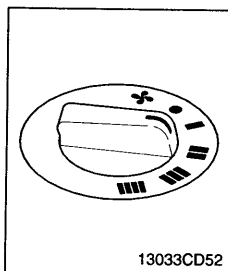

It is possible to control the fan to four steps.


- I : Low
- II : Medium-Low
- III : Medium-High
- IIII : High

## 2) OUTLET CHANGE OVER SWITCH

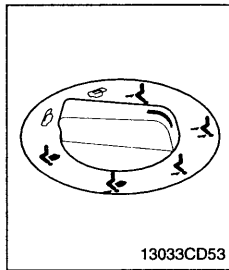

Switch position						
Outlet	A	●	●			
	B		●	●	●	
	C				●	●

## 3) INLET CHANGE OVER SWITCH

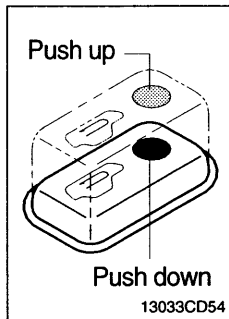

### (1) Push down

- ① The air circulates in the cab.
- ② Indicator lamp.


ON	ON

### (2) Push up

- ① Fresh air intake.
- ② Indicator lamp.

OFF	ON

## 4) TEMPERATURE CONTROL SWITCH

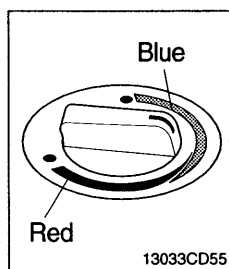


### (1) Cooling(Air conditioner switch : ON)

- ① Turned ON the air conditioner switch on the switch panel.
- ② Turn the control switch into blue range to decrease output air temperature.

### (2) Heating(Air conditioner switch : OFF)

- ① Turned OFF the air conditioner switch on the switch panel.
- ② Turn the control switch into red range to increase temperature.

## 5) OUTLET CONTROL LOUVER

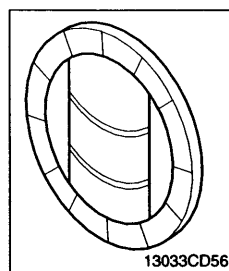

The direction of air can be controlled.  
It can be closed or opened.