3. OTHERS

| Trouble | Service | Remark |
|--|--|--------|
| Bucket either rises slowly or not at all | · Add oil to specified level. | |
| Slow speed of travel, swing, boom, arm and bucket. | · Add oil to specified level. | |
| Unusual noise emitted from pump. | · Clean the hydraulic tank strainer. | |
| Excessive oil temperature rise of hydraulic oil. | Clean the oil cooler.Adjust fan belt tension.Add oil to specified level. | |