

CONTENTS

1. SAFETY HINTS

1. Before operating the machine	1-1
2. During operating the machine	1-6
3. During maintenance	1-13
4. Parking	1-16

2. SPECIFICATIONS

1. Major component	2-1
2. Specifications	2-3
3. Working range	2-5
4. Weight	2-8
5. Lifting capacities	2-9
6. Bucket selection guide	2-18
7. Specification for major components	2-20
8. Recommended oils	2-24

3. CONTROL DEVICES

1. Cab devices	3-1
2. Cluster	3-2
3. Switches	3-8
4. Levers and pedals	3-15
5. Air conditioner and heater	3-19
6. Others	3-21

4. OPERATION

1. Suggestion for new machine	4-1
2. Check before starting the engine	4-2
3. Starting and stop the engine	4-3
4. Mode selection(CAPO) system	4-7
5. Operation of working device	4-11
6. Traveling of the machine	4-12

7. Efficient working method	4-18
8. Operation in the special work sites	4-23
9. Normal operation of excavator	4-25
10. Attachment lowering	4-26
11. Storage	4-27
12. RCV lever operating pattern	4-29

5. TRANSPORTATION

1. Road traveling	5-1
2. Preparation for transportation	5-2
3. Loading the machine	5-3
4. Fixing the machine	5-5

6. MAINTENANCE

1. Instruction	6-1
2. Tightening torque	6-6
3. Specification of fuel, coolant and lubricants	6-9
4. Maintenance check list	6-11
5. Maintenance chart	6-15
6. Service instruction	6-17
7. Electrical system	6-45
8. Air conditioner and heater	6-48

7. TROUBLESHOOTING GUIDE

1. Engine	7-1
2. Electrical system	7-2
3. Others	7-3

8. HYDRAULIC BREAKER

1. Selecting hydraulic breaker	8-1
2. Circuit configuration	8-2
3. Maintenance	8-3
4. Precaution when operating the breaker	8-4