


SAFETY LABELS

1. LOCATION

Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

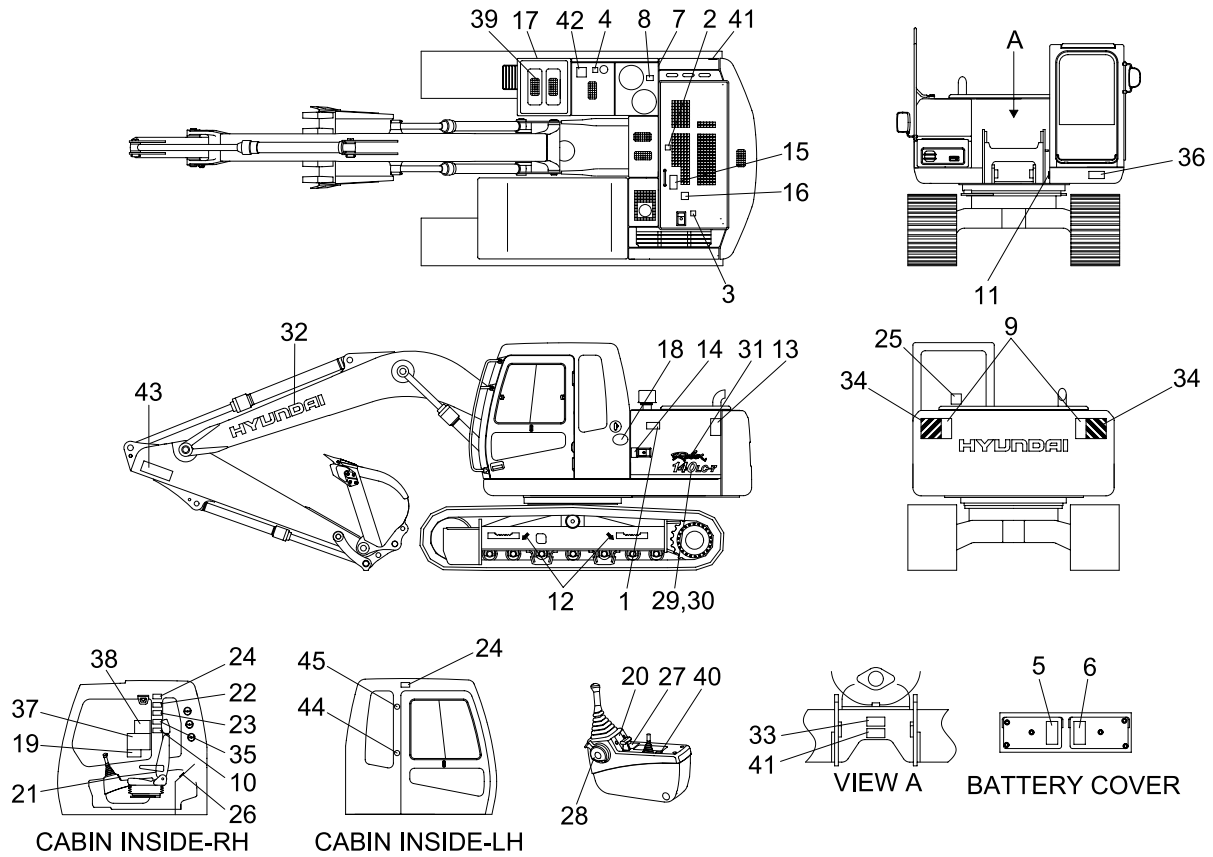

14070SL01A

- | | | |
|-----------------------------|---------------------------|--------------------------------|
| 1 Air cleaner filter | 16 No step-engine hood | 31 Logo(ROBEX) |
| 2 Turbo charger cover | 17 Transporting | 32 Trade mark(Boom) |
| 3 Radiator cap | 18 Low emission engine | 33 Grease-reduction gear |
| 4 Fueling | 19 Control ideogram | 34 Keep clear-work area |
| 5 Battery corrosive | 20 Control ideogram(LH) | 35 Interference |
| 6 Battery explosion(-#1000) | 21 Control ideogram(RH) | 36 Noise level LWA |
| 7 Hydraulic oil level | 22 Ref operator manual | 37 Service instruction |
| 8 Hydraulic oil lub | 23 Max height | 38 Lifting chart |
| 9 Keep clear | 24 Safety front window | 39 Step tread |
| 10 Clamp-locking | 25 Alternate exit | 40 Control ideogram-Dozer |
| 11 Name plate | 26 Air conditioner filter | 41 Hose-pressure(#1001-) |
| 12 Sliding ideogram | 27 Console box tilting | 42 Falling(#1001-) |
| 13 Side keep clear | 28 Safety lever | 43 Keep clear-Boom/Arm(#1001-) |
| 14 Stay fix | 29 Model name(LH) | 44 Hammer(#1001-) |
| 15 Shearing-engine hood | 30 Model name(RH) | 45 Fire extinguisher(#1001-) |

2. DESCRIPTION


There are several specific warning labels on this machine please become familiarized with all warning labels.

Replace any safety label that is damaged, or missing.

1) AIR CLEANER FILTER(Item 1)

This warning label is positioned on the air cleaner cover.

Periodic and proper inspection, cleaning and change of elements prolong engine life time and maintain the good performance of engine.

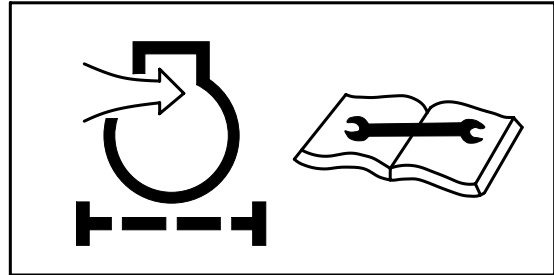

21070FW01

2) TURBO CHARGER COVER(Item 2)

This warning label is positioned on the turbo charger cover.

⚠ Do not touch turbo charger or it may cause severe burn.



21070FW02

3) RADIATOR CAP(Item 3)

This warning label is positioned on the radiator.

⚠ Never open the filler cap while engine running or at high coolant temperature.




14070FW03

4) FUELING(Item 4)

This warning label is positioned on the right side of fuel filler neck.

⚠ Stop the engine when refueling. All lights or flames shall be kept at a safe distance while refueling.

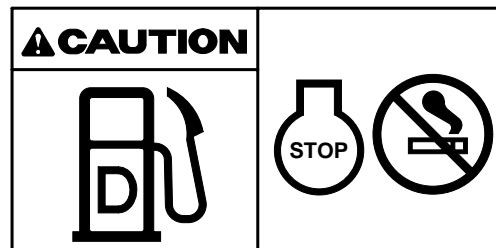


21070FW04

5) BATTERY CORROSIVE(Item 5, -#1000)

This warning label is positioned on the battery cover.

- ▲ **Electrolyte containing sulfuric acid cause severe burns. Avoid being in contact with skin, eyes or clothes. In the event of accident flush with sufficient water, call a physician immediately. Maintain the electrolyte at the recommended level. Add distilled water to the battery only when starting up, never when shutting down. With electrolyte at proper level, less space may cause the gases to be accumulated in the battery.**

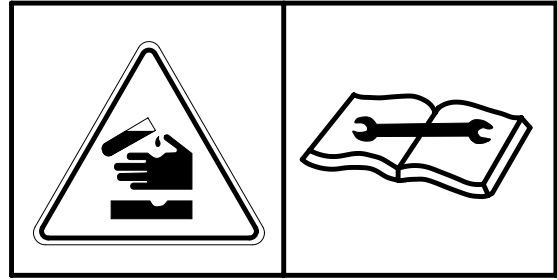


21070FW05

6) BATTERY EXPLOSION(Item 6, -#1000)

This warning label is positioned on the battery cover.

- ▲ **Extinguish all smoking materials and open flames before checking the battery.**
- ▲ **Do not use matches, lighters or torches as a light source near the battery for the probable presence of explosive gas.**
- ▲ **Do not allow unauthorized personnel to change the battery or to use booster cables.**

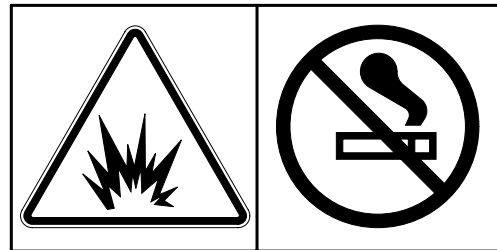


21070FW06

7) HYDRAULIC OIL LEVEL(Item 7)

This warning label is positioned on the left side of hydraulic oil level.

- ▲ **Place the bucket on the ground whenever servicing the hydraulic system. Check oil level on the level gauge. Refill the recommended hydraulic oil up to specified level if necessary.**

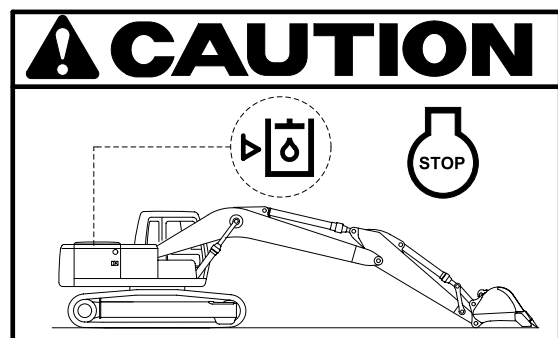


14070FW07

8) HYDRAULIC OIL LUBRICATION(Item 8)

This warning label is positioned on the right side of air breather.

Do not mix with different brand oils.

- ⚠ **Never open the filler cap while engine running or at high coolant temperature.**
- ⚠ **Loosen the cap slowly and release internal pressure completely.**

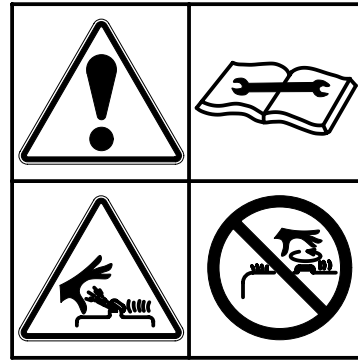

14070FW08

9) KEEP CLEAR(Item 9)

This warning label is positioned on the counterweight.

- ⚠ **To prevent serious personal injury or death keep clear of machine swing radius.**
- ⚠ **Do not deface or remove this label from the machine.**




21070FW28

10) CLAMP-LOCKING(Item 10)

This warning label is positioned on the right side window of cab.

- ⚠ **Serious injury or death can result from dropping bucket.**
- ⚠ **Operating the machine with quick clamp switch unlocked or without safety pin of moving hook can cause the bucket to drop off.**

See page 8-6 for details.

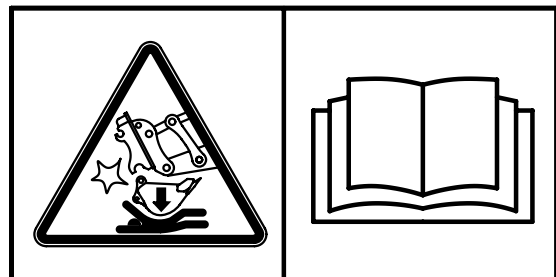

14070FW60

11) SIDE KEEP CLEAR (Item 13)

This warning label is positioned on the side of counterweight.

- ⚠ **To prevent serious personal injury or death keep clear of machine swing radius.**
- ⚠ **Do not deface or remove this label from the machine.**




21070FW13

12) STAY FIX (Item 14)

This warning label is positioned on the side cover.

- ⚠ **Be sure to support the stay when the door needs to be opened.**
- ⚠ **Be careful that the opened door may be closed by the external or natural force like strong wind.**

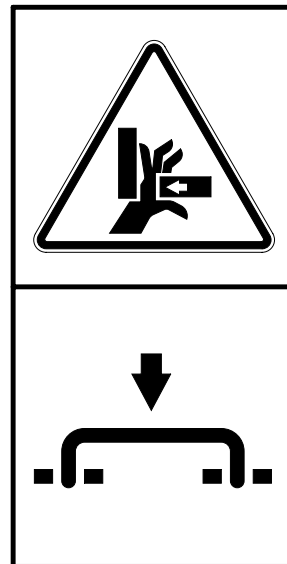


21070FW14

13) SHEARING-ENGINE HOOD (Item 15)

This warning label is positioned on the engine hood.

- ⚠ **Don't open the engine hood during the engine's running.**
- ⚠ **Don't touch exhaust pipe or it may cause severe burn.**

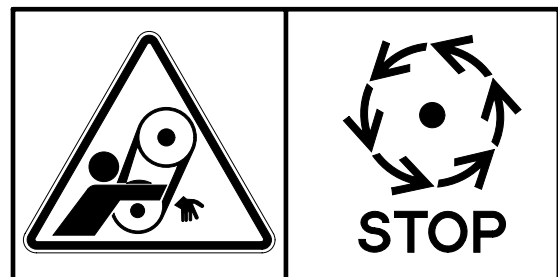


21070FW15

14)NO STEP-ENGINE HOOD(Item 16)

This warning label is positioned on the engine hood.

△ Don't step on the engine hood.

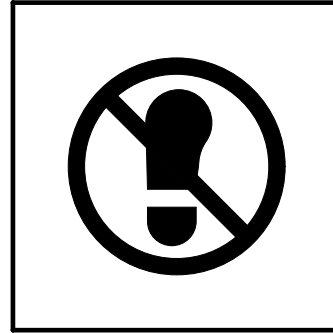


21070FW15

15)TRANSPORTING(Item 17)

This warning label is positioned right side of upper frame.

⚠ Study the operator's manual before transporting the machine, if provided and tie down arm and track to the carrier with lashing wire.

See page 5-6 for details.

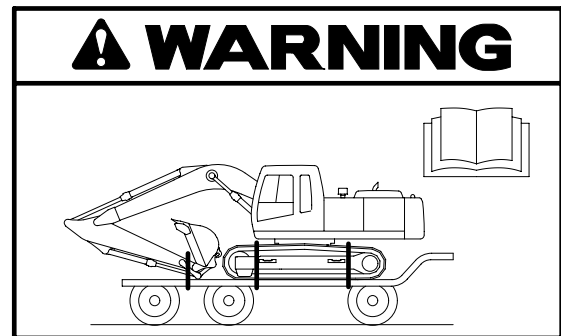

14070FW17


16) CONTROL IDEOGRAM (Item 19)

This warning label is positioned in right window of the cab.

⚠ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.

⚠ Failure to do so could result in injury or death.

See page 4-13 for details.

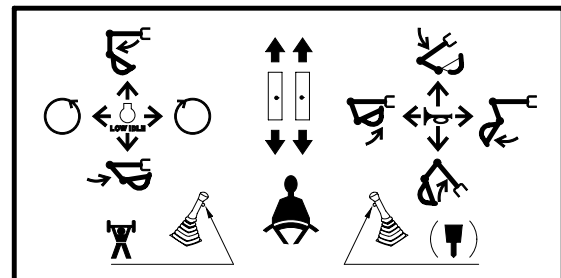

290071FW19


17) CONTROL IDEOGRAM-LH(Item 20)

This warning label is positioned on the LH console box.

⚠ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.

⚠ Failure to do so could result in injury or death.

See page 4-13 for details.

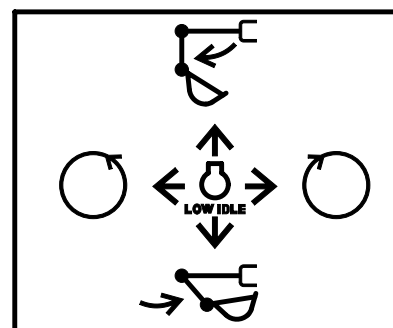

290070FW20


18)CONTROL IDEOGRAM-RH(Item 21)

This warning label is positioned on the RH console box.

- ▲ **Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.**

- ▲ **Failure to do so could result in injury or death.**

See page 4-13 for details.

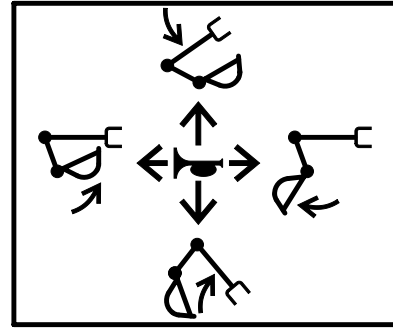


21070FW21

19)REF OPERATOR MANUAL(Item 22)

This warning label is positioned on the right side window of the cab.

- ▲ **Study the operator's manual before starting and operating machine.**

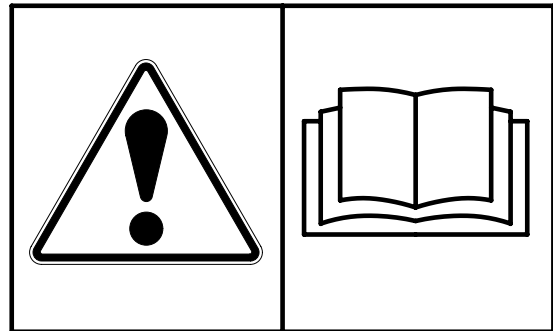


21070FW22

20)MAX HEIGHT(Item 23)

This warning label is positioned on the right side window of the cab.

- ▲ **Serious injury or death can result from contact with electric lines.**

An electric shock being received by merely coming into the vicinity of an electric lines, the minimum distance should be kept considering the supply voltage as page 1-7.

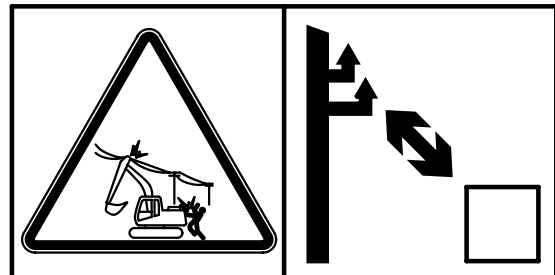


14070FW23

21)SAFETY FRONT WINDOW(Item 24)

This warning label is positioned on the inside of front window.

- ▲ **Be careful that the front window may be promptly closed.**

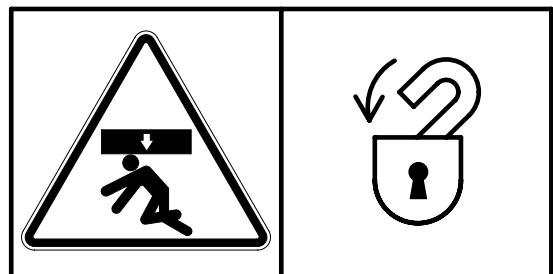


21070FW24

22) ALTERNATE EXIT (Item 25)

This warning label is positioned on the inside of rear window.

The rear window serves us an alternate exit.

To remove rear window, pull the ring and push out the glass.

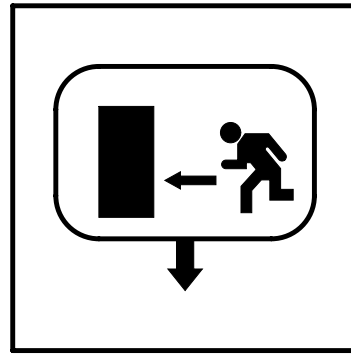


21070FW24

23) AIR CONDITIONER FILTER (Item 26)

This warning label is positioned on the air conditioner cover up.

Periodic and proper inspection, cleaning and change of filter prolong air conditioner life time and maintain good performance.

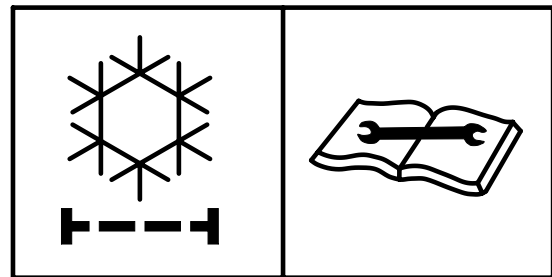


21070FW26

24) CONSOLE BOX TILTING (Item 27)

This warning label is positioned on the LH console box.

Before you get off the machine be sure to tilt the LH console box.

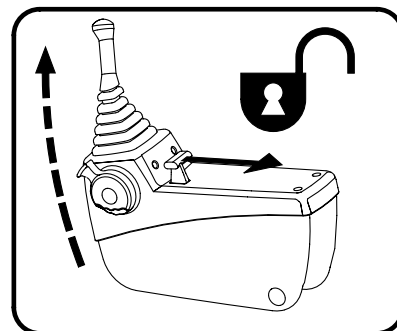


21070FW27

25) SAFETY LEVER (Item 28)

This warning label is positioned on the cover safety.

▲ Before you get off the machine be sure to place the safety lever LOCKED position.

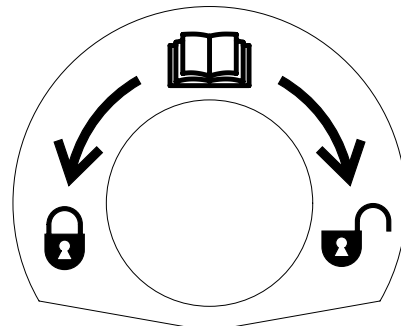


21070FW28

26) KEEP CLEAR-WORK AREA (Item 34)

This warning label is positioned counterweight.

- ⚠ To prevent serious personal injury or death keep clear of machine swing radius.
- ⚠ Do not deface or remove this label from the machine.

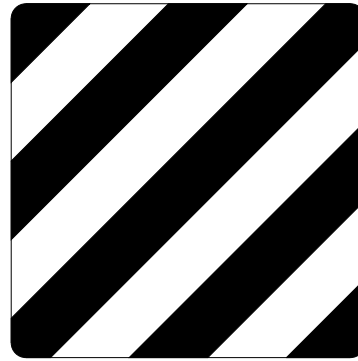


21070FW34

27) INTERFERENCE (Item 35)

This warning label is positioned on the right side window of cab.

- ⚠ Be careful to operate machine equipped with quick clamp or extensions.
- ⚠ Bucket may hit cab or boom, boom cylinders when it reached vicinity of them.

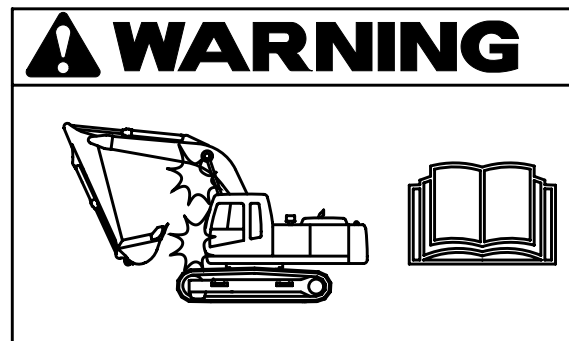


14070FW62

28) BATTERY (Item 5, #1001-)

This warning label is positioned on the battery cover.

- ⚠ Electrolyte containing sulfuric acid cause severe burns. Avoid being in contact with skin, eyes or clothes. In the event of accident flush with sufficient water, call a physician immediately. Maintain the electrolyte at the recommended level. Add distilled water to the battery only when starting up, never when shutting down. With electrolyte at proper level, less space may cause the gases to be accumulated in the battery.
- ⚠ Extinguish all smoking materials and open flames before checking the battery.
- ⚠ Do not use matches, lighters or torches as a light source near the battery for the probable presence of explosive gas.
- ⚠ Do not allow unauthorized personnel to change the battery or to use booster cables.
- ⚠ To prevent serious personal injury or death, do not handle the battery with wet hands.

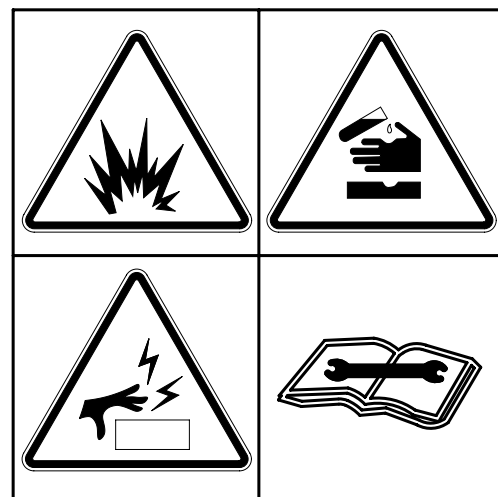

14070FW28

29) HOSE-PRESSURE(Item 41, #1001-)

This warning label is positioned on the screen plate.

- ⚠ **Escaping fluid under pressure can penetrate the skin causing serious injury.**

Study the service manual before service job.




14070FW29

30) FALLING(Item 42, #1001-)

This warning label is positioned on the top of the hydraulic tank.

- ⚠ **Falling is one of the major cause of personal injury.**
- ⚠ **Be careful of slippery conditions on the platforms, steps and handrails when standing on the machine.**

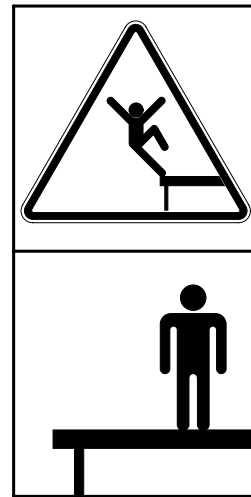


14070FW30

31) KEEP CLEAR-BOOM/ARM(Item 43, #1001-)

This warning label is positioned on both side of the boom.

- ⚠ **Serious injury or death can result from falling of the attachment.**
- ⚠ **To prevent serious injury or death, keep clear the underneath of attachment.**

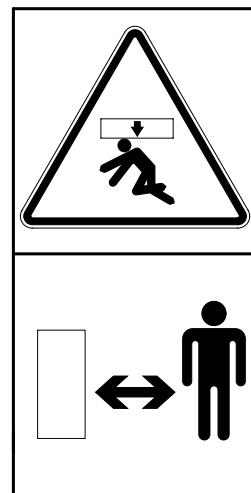

14070FW31