

A		
Accel dial switch	3-26	
After engine start	4-5	
Air breather element	6-33	
Air cleaner filter	6-25	
Air conditioner & heater	3-33	
Air conditioner filter	6-45	
Alternate exit	0-12	
Attachment lowering	4-23	
B		
Battery	6-42	
Before starting engine	4-2	
Boom lowering	4-23	
Bucket clearance adjustment	6-40	
Bucket replacement	6-38	
Bucket selection guide	2-16	
Bucket tooth replacement	6-39	
C		
Cab air filter	6-45	
Cab device	3-1	
Changing machine control pattern	4-26	
Cigar lighter	3-37	
Cluster	3-2	
Coolant	6-20	
Cooling fan	6-24	
Crankcase breather filter	6-28	
D		
DMB	3-24	
Drain filter	6-33	
E		
Emergency engine speed connector	3-59	
Engine oil filter	6-18	
Engine oil level	6-18	
Engine starting & stop	4-3	
Engine starting by booster	6-43	
Engine stop	4-6	
F		
Fan belt	6-24	
FMT	3-24	
Fuel filter	6-26	
Fuel leakage	6-29	
Fuel system bleeding	6-28	
Fuel tank	6-25	
Fuse & relay box	3-58	
G		
Gauge	3-3	
H		
Handsfree	3-38	
Hydraulic breaker	8-1	
Hydraulic oil changing	6-31-1	
Hydraulic oil filling	6-31	
Hydraulic oil level	6-31	
L		
LCD	3-2	
Levers & pedals	3-30	
Lifting capacities	2-12	
Lubricant specification	2-27	
M		
Maintenance check list	6-11	
Major component	2-1	
MCU (Machine Control Unit)	3-58	
Mode selection system	4-7	
Monitor panel	3-2	
Mounting and dismounting	1-12	
N		
New machine operation	4-1	
O		
Oil cooler	6-23	
Operating pattern	4-26	
P		
Pedals	3-31	
Periodical replacement parts	6-5	
Pilot filter	6-33	
Pin & bushing lubrication	6-41	
Prefilter	6-27	
Pilot lamps	3-9	
Q		
Quick clamp	8-6	

R

Radiator flushing	6-20
Radio & USB player	3-44
RCV lever lubricate	6-36
Recommended oils	2-27, 6-10
Relieving pressure	6-3
Remote controller	3-41
Return filter	6-32
RCV lever operating pattern	4-26

S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
Seat	3-57
Seat belt	3-57
Service meter	3-59
Service socket	3-39, 3-59
Specification for major component	2-24
Specification	2-2
Start switch	3-25
Storage	4-24
Suction strainer	6-32
Swing bearing grease	6-35
Swing gear & pinion grease	6-35
Swing reduction gear oil	6-34
Switch panel	3-25
Switches	3-10, 3-25

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-15
Track adjustment	6-36
Track shoe selection	2-23
Transportation	5-1
Travel reduction gear oil	6-36
Traveling machine	4-13
Troubleshooting guide	7-1

U

Undercarriage	2-22
USB socket	3-38

W

Warming up operation	4-5
Warning lamps	3-4
Weight	2-10

Windshield	3-60
Working device operation	4-12
Working method	4-16
Working range	2-6