

A

Accel dial switch	3-26
After engine start	4-5
Air breather element	6-33
Air cleaner filter	6-25
Air conditioner & heater	3-33
Air conditioner filter	6-45
Alternate exit	0-12
Attachment lowering	4-23

B

Battery	6-42
Before starting engine	4-2
Boom lowering	4-23
Bucket clearance adjustment	6-40
Bucket replacement	6-38
Bucket selection guide	2-8
Bucket tooth replacement	6-39

C

Cab air filter	6-45
Cab device	3-1
Changing machine control pattern	4-26
Cigar lighter	3-37
Cluster	3-2
Coolant	6-20
Cooling fan	6-24

D

Drain filter	6-33
--------------------	------

E

Emergency engine speed connector	3-59
Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-43
Engine stop	4-6

F

Fan belt	6-24
Fuel filter	6-26
Fuel leakage	6-29
Fuel system bleeding	6-28
Fuel tank	6-25
Fuse & relay box	3-58

G

Gauge	3-3
-------------	-----

H

Handsfree	3-38
Hydraulic breaker	8-1
Hydraulic oil changing	6-31-1
Hydraulic oil filling	6-31
Hydraulic oil level	6-31

L

LCD	3-2
Levers & pedals	3-30
Lifting capacities	2-6
Lubricant specification	2-17

M

Maintenance check list	6-11
Major component	2-1
MCU (Machine Control Unit)	3-58
Mode selection system	4-7
Monitor panel	3-2
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
Operating pattern	4-26

P

Pedals	3-31
Periodical replacement parts	6-5
Pilot filter	6-33
Pin & bushing lubrication	6-41
Prefilter	6-27
Pilot lamps	3-9

Q

Quick clamp	8-6
-------------------	-----

R

Radiator flushing	6-20
Radio & USB player	3-44
RCV lever lubricate	6-36
Recommended oils	2-17, 6-10

Relieving pressure	6-3
Remote controller	3-41
Return filter	6-32
RCV lever operating pattern	4-26

S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
Seat	3-57
Seat belt	3-57
Service meter	3-59
Service socket	3-39, 3-59
Specification for major component	2-14
Specification	2-2
Start switch	3-25
Storage	4-24
Suction strainer	6-32
Swing bearing grease	6-35
Swing gear & pinion grease	6-35
Swing reduction gear oil	6-34
Switch panel	3-25
Switches	3-10, 3-25

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-15
Track adjustment	6-36
Track shoe selection	2-13
Transportation	5-1
Travel reduction gear oil	6-36
Traveling machine	4-13
Troubleshooting guide	7-1

U

Undercarriage	2-12
USB socket	3-38

W

Warming up operation	4-5
Warning lamps	3-4
Weight	2-5
Windshield	3-60
Working device operation	4-12
Working method	4-16
Working range	2-4