



WARNING

CALIFORNIA PROPOSITION 65

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to www.P65warnings.ca.gov/diesel.

91K4-07310-EN

⚠ Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

※ For more information go to www.P65warnings.ca.gov/diesel.

Foreword	0-1	5. Traveling of the machine	4-8
Emission-related components warranty (USA and CANADA only)	0-1-1	6. Efficient working method	4-11
Before servicing this machine	0-2	7. Operation in the special work sites	4-15
EC regulation approved	0-3	8. Normal operation of excavator	4-17
Table to enter S/No and distribution	0-4	9. Attachment lowering	4-18
Safety labels	0-5	10. Storage	4-19
Machine data plate	0-13	11. RCV lever operating pattern	4-21
Guide (direction, S/No, Symbol)	0-14	12. Switching hydraulic attachment circuit	4-23
		13. Handling the rubber tracks	4-24
1. SAFETY HINTS		5. TRANSPORTATION	
1. Before operating the machine	1-1	1. Preparation for transportation	5-1
2. During operating the machine	1-16	2. Loading the machine	5-2
3. During maintenance	1-23	3. Fixing the machine	5-4
4. Parking	1-26	4. Loading and unloading by crane	5-5
		5. Dimension and weight	5-6
2. SPECIFICATIONS		6. MAINTENANCE	
1. Major components	2-1	1. Instruction	6-1
2. Specifications	2-2	2. Tightening torque	6-5
3. Working range	2-3	3. Fuel, coolant and lubricants	6-8
4. Weight	2-4	4. Maintenance check list	6-10
5. Lifting capacities	2-5	5. Maintenance chart	6-15
6. Bucket selection guide	2-8	6. Service instruction	6-17
7. Undercarriage	2-8	7. Electrical system	6-33
8. Specification for major components	2-9		
9. Recommended oils	2-12	7. TROUBLESHOOTING GUIDE	
3. CONTROL DEVICES		1. Engine	7-1
1. Canopy devices	3-1	2. Electrical system	7-2
2. Cluster	3-2	3. Others	7-3
3. Switches	3-8		
4. Levers and pedals	3-11	8. HYDRAULIC BREAKER	
5. Others	3-14	1. Selecting hydraulic breaker	8-1
4. OPERATION		2. Circuit configuration	8-2
1. Suggestion for new machine	4-1	3. Maintenance	8-3
2. Check before starting the engine	4-2	4. Precaution when operating the breaker	8-4
3. Starting and stop the engine	4-3	5. Quick coupler	8-6
4. Operation of the working device	4-7		