

1. SUGGESTION FOR NEW MACHINE

- 1) It takes about 100 operation hours to enhance its designed performance.
- 2) Operate according to below three steps and avoid excessive operation for the initial 100 hours.

| Service meter | Load |
|-----------------|-----------|
| Until 10 hours | About 60% |
| Until 100 hours | About 80% |
| After 100 hours | 100% |

※ **Excessive operation may deteriorate the potential performance of machine and shorten lifetime of the machine.**


- 3) Be careful during the initial 100 hours operation

- (1) Check daily for the level and leakage of coolant, engine oil, hydraulic oil and fuel.
- (2) Check regularly the lubrication and fill grease daily all lubrication points.
- (3) Tighten bolts.
- (4) Warm up the machine fully before operation.
- (5) Check the gauges occasionally during the operation.
- (6) Check if the machine is operating normally during operation.

- 4) Replace followings after initial 250 hours of operation.

| Checking items | Hours |
|-----------------------------|-------|
| Engine oil | 250 |
| Engine oil filter element | |
| Fuel filter | |
| Hydraulic oil return filter | |
| Travel reduction gear oil | |


Avoid excessive operation for initial 100 hours

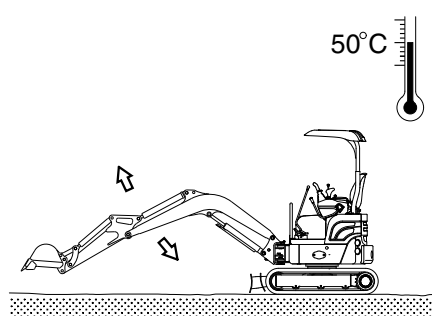

17Z9A4OP01

2. CHECK BEFORE STARTING THE ENGINE

- 1) Look around the machine and under the machine to check for loosen nut or bolts, collection of dirt, or leakage of oil, fuel or coolant and check the condition of the work equipment and hydraulic system. Check also loosen wiring, and collection of dust at places which reach high temperature.
※ **Refer to the daily check on the chapter 6, maintenance.**
- 2) Adjust seat to fit the contours of the operator's body for the pleasant operation.

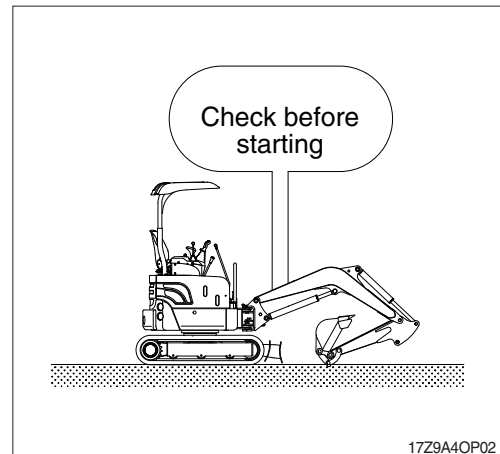


3. STARTING AND STOP THE ENGINE

1) CHECK INDICATOR LIGHTS


- (1) Check if all the operating lever is on the neutral position.
 - (2) Turn the starting switch to the ON position, and check following.
 - ① If all the lamps light ON and buzzer sounding for 6 seconds.
 - ② Only below lamps will light ON and all the other lights will turn OFF after 2 seconds.
 - Engine oil pressure warning lamp (1)
 - Battery charging warning lamp (2)
- ※ If the ESL mode is set to the Always, enter the password to start engine.
- ※ If the password has failed 5 times, please wait 10 minutes before re-attempting to enter the password.
- ※ Refer to the page 3-7 for ESL mode setting.

S/NO.: -#1429

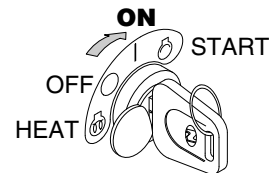

17Z9A4OP04B

S/NO.: #1430-

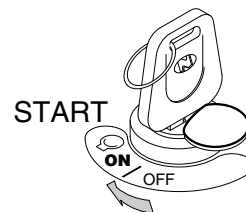


17Z9A4OP04K

2) STARTING ENGINE : Machine serial No. -#1429

- ※ Sound horn to warn surroundings after checking if there are obstacles in the area.
- ※ Replace the engine oil and fuel referring to recommended oils at page 2-12.
- ※ Fill anti-freeze solution to the coolant as required.

- (1) Check if all levers are on the neutral position.
 - (2) If the weather temperature is below 10°C, the start switch turn HEAT position.
 - (3) After the preheat pilot lamp OFF, start engine by turning the starting switch to the START position.
 - (4) Release the starting switch immediately after starting engine to avoid possible damage to the starting motor.
- ※ If the engine does not start, the start switch turn HEAT position for preheating.
After the preheating, start the engine again.
 - ※ If the engine does not start, allow the starter to cool for 10~20 seconds before attempting to start the engine again.
At the cold, allow 2 minute before attempting to start the engine again.

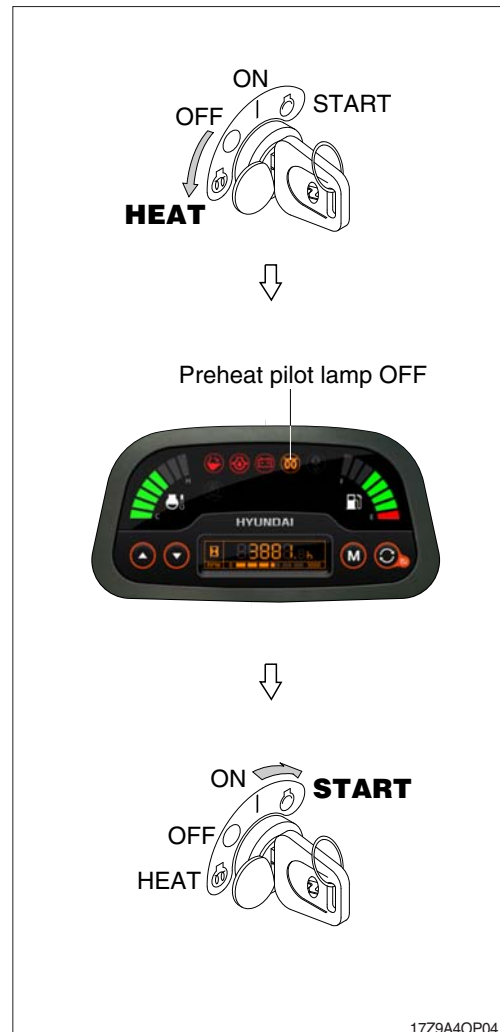

STARTING ENGINE : Machine serial No. #1430-

- ※ Sound horn to warn surroundings after checking if there are obstacles in the area.
- ※ Replace the engine oil and fuel referring to recommended oils at page 2-12.
- ※ Fill anti-freeze solution to the coolant as required.


- (1) Check if all levers are on the neutral position.
- (2) If the weather temperature is below 10°C, the start switch turn ON position.
- (3) After the preheat pilot lamp OFF, start engine by turning the starting switch to the START position.
- (4) Release the starting switch immediately after starting engine to avoid possible damage to the starting motor.

- ※ If the engine does not start, the start switch turn ON position for preheating.

After the preheating, start the engine again.

- ※ If the engine does not start, allow the starter to cool for 10~20 seconds before attempting to start the engine again.

At the cold, allow 2 minute before attempting to start the engine again.

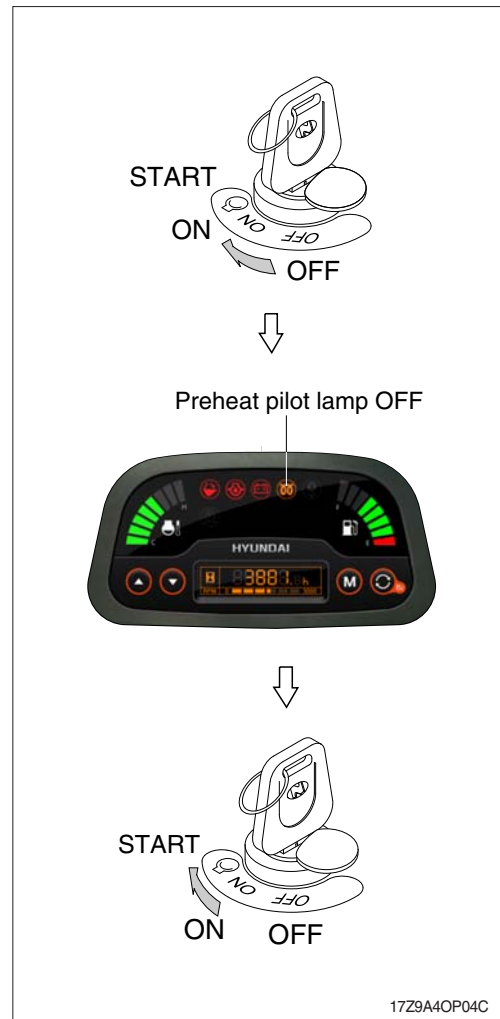

3) INSPECTION AFTER ENGINE START

Inspect and confirm the following after engine starts.

- (1) Is the level gauge of hydraulic oil tank in the normal level?
- (2) Are there leakages of oil or water?
- (3) Are all the warning lamps OFF(2~4)?
- (4) Is the indicator of engine coolant temperature gauge(1) in the normal zone?
- (5) Is the engine sound and the color of exhaust gas normal?
- (6) Are the sound and vibration normal?


- ※ **Do not increase engine speed quickly after starting, it can damage engine or turbocharger.**
- ※ **If there are problems in the control panel, stop the engine immediately and correct problem as required.**



4) WARMING-UP OPERATION


- ※ **The most suitable temperature for the hydraulic oil is about 50°C (122°F).**
It can cause serious trouble in the hydraulic system by sudden operation when the hydraulic oil temperature is below 25°C (77°F).
Then temperature must be raised to at least 25°C (77°F) before starting work.

- (1) Run the engine at low idling for 5 minutes.
 - (2) Speed up the idling and run the engine at mid-range speed.
 - (3) Operate bucket lever for 5 minutes.
 - ※ **Do not operate anything except bucket lever.**
 - (4) Run the engine at the high speed and operate the bucket lever and arm lever for 5-10 minutes.
 - ※ **Operate only the bucket lever and arm lever.**
 - (5) This warming-up operation will be completed by operation of all cylinders several times, and operation of swing and traveling.
- ※ **Increase the warming-up operation during winter.**

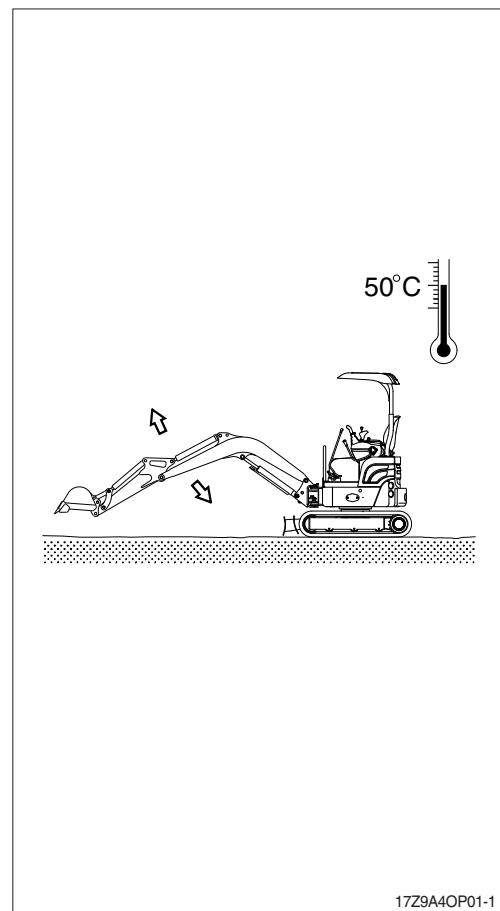

5) TO STOP THE ENGINE

- ※ If the engine is abruptly stopped before it has cooled down, engine life may be greatly shortened. Consequently, do not abruptly stop the engine apart from an emergency.
 - ※ In particular if the engine has overheated, do not abruptly stop it but run it at medium speed to allow it to cool gradually, then stop it.
- (1) Down the bucket on the ground then put all the levers in the neutral position.
 - (2) Run the engine at low idling speed for about 5 minutes.
 - (3) Return the key of starting switch to the OFF position.
 - (4) Remove the key to prevent other people using the machine and LOCK safety lever.

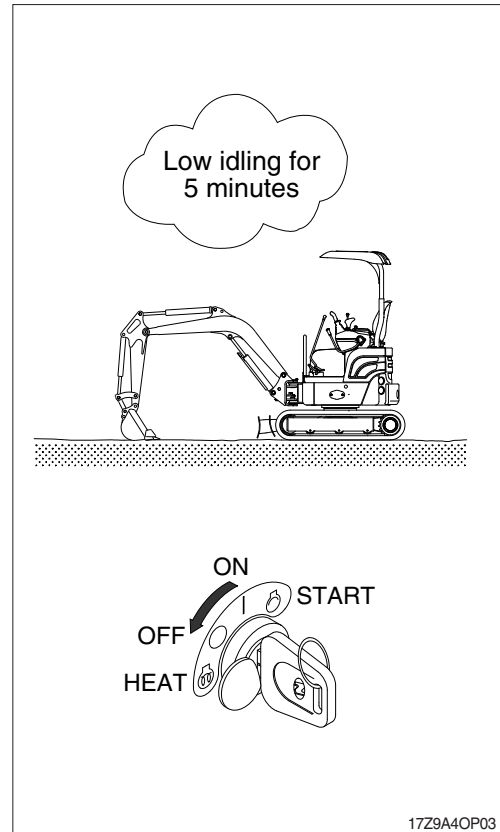


4. OPERATION OF WORKING DEVICE

※ **Confirm the operation of control lever and working device.**


- 1) Left control lever controls arm and swing.
- 2) Right control lever controls boom and bucket.
- 3) When you release the control lever, control lever returns to neutral position automatically.

※ **When operating swing, consider the swing distance by inertia.**

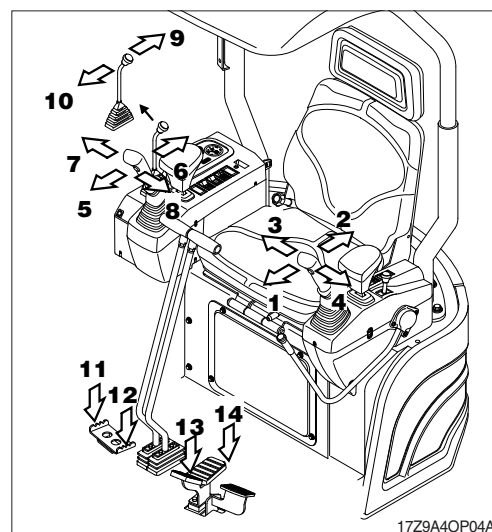

※ **Left control lever**

- 1 Arm roll-out
- 2 Arm roll-in
- 3 Swing right
- 4 Swing left

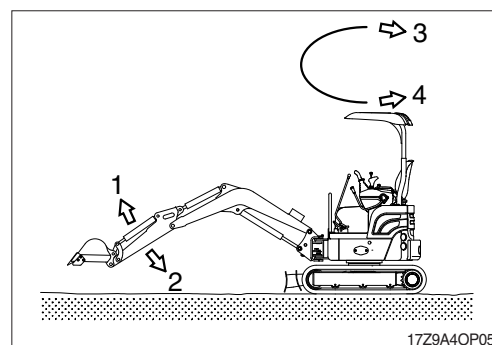


※ **Right control lever**

- 5 Boom lower
- 6 Boom raise
- 7 Bucket roll-out
- 8 Bucket roll-in

※ **Dozer control lever**

- 9 Dozer blade up
- 10 Dozer blade down

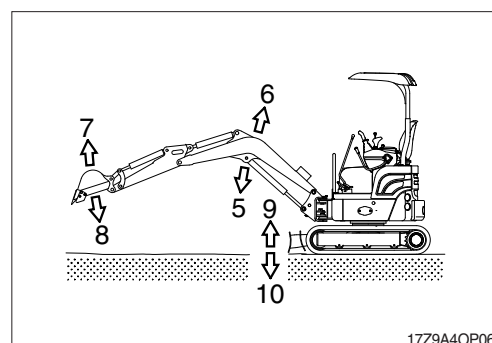


※ **Boom swing pedal**

- 11 Boom swing right
- 12 Boom swing left

※ **Double acting pedal**

- 13, 14 Optional attachment

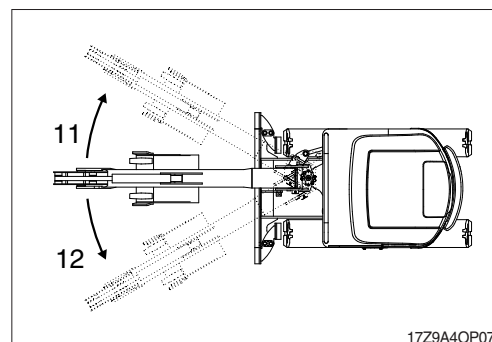

5. TRAVELING OF THE MACHINE

1) BASIC OPERATION

(1) Traveling position

It is the position which the traveling motor is in the rear and the working device is forward.


- ▲ **Be careful as the traveling direction will be reversed when the whole machine is swung 180 degree.**

(2) Traveling operation

It is possible to travel by travel lever.

- ※ **Do not travel continuously for a long time.**
- ※ **Reduce the engine speed and travel at a low speed when traveling on uneven ground.**

Traveling position

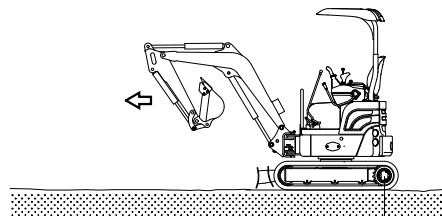


17Z9A4OP08

(3) Forward and backward traveling

When the left and right travel lever are pushed at the same time, the machine will travel forward or backward.


- ※ **The speed can be controlled by the operation stroke of lever and change of direction will be controlled by difference of the left and right stroke.**

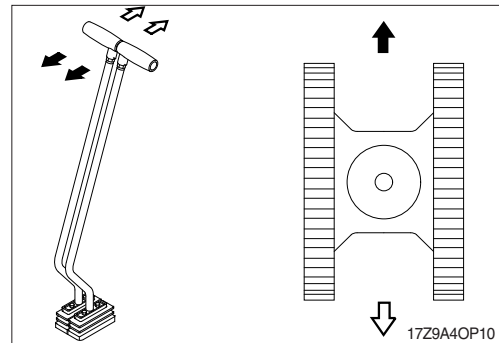

17Z9A4OP10

(4) Pivot turning


Operating only one side of lever make the change of direction possible by moving only one track.

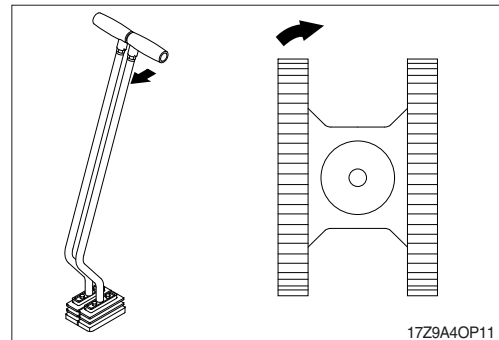

17Z9A4OP11

(5) Counter rotation

It is to change the direction at the original place by moving the right and left track. Both side of lever are operated to the other way at the same time.

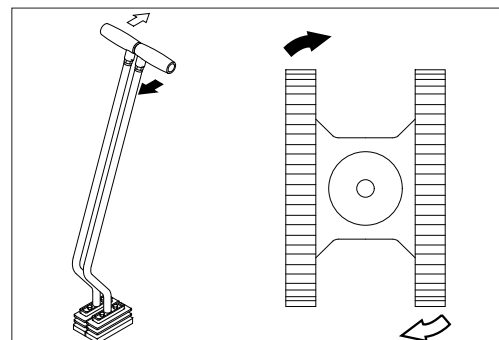

17Z9A4OP12

2) TRAVELING ON A SLOPE


- (1) Make sure that the travel lever is properly maneuvered by confirming the travel motor is in the right location.
- (2) Lower the bucket 20 to 30 cm (1 ft) to the ground so that it can be used as a brake in an emergency.
- (3) If the machine starts to slide or loses stability, lower the bucket immediately and brake the machine.
- (4) When parking on a slope, use the bucket as a brake and place blocks behind the tracks to prevent sliding.

※ Machine cannot travel effectively on a slope when the oil temperature is low.

Do the warming-up operation when it is going to travel on a slope.

▲ Be careful when working on slopes. It may cause the machine to lose its balance and turn over.


▲ Be sure to keep the travel speed switch on the LOW (turtle mark) while traveling on a slope.

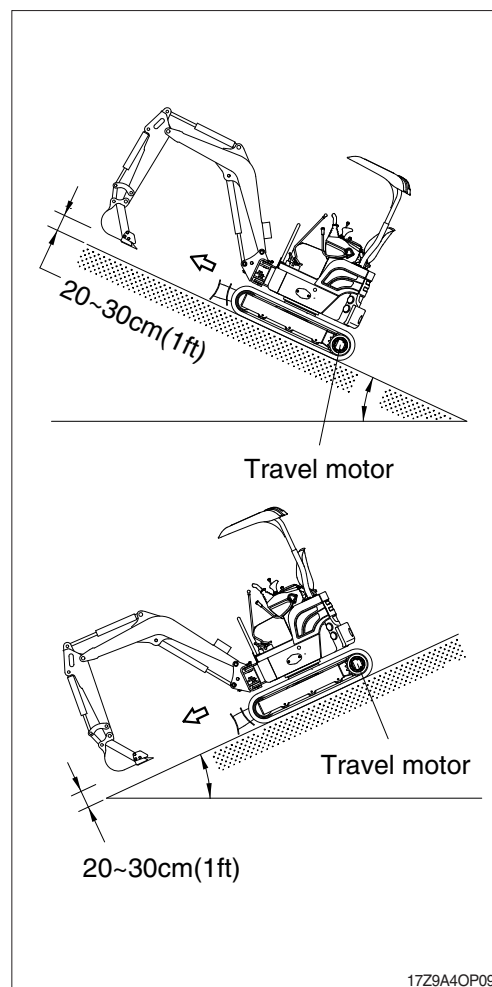

3) TRAVELING ON SOFT GROUND

※ If possible, avoid to operate on soft ground.

- (1) Move forward as far as machine can move.
- (2) Take care not to go beyond the depth where towing is impossible on soft ground.
- (3) When driving becomes impossible, lower bucket and use boom and arm to pull the machine. Operate boom, arm, and travel lever at the same time to avoid the machine sinking.

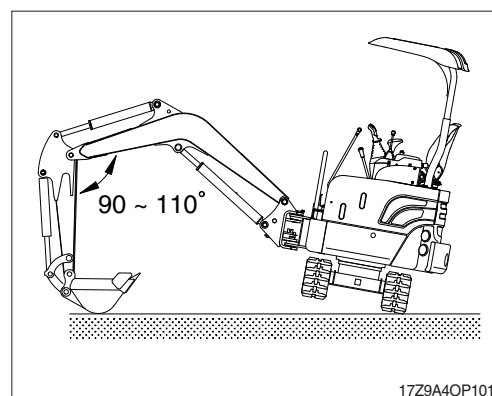

4) TOWING THE MACHINE


Tow the machine as follows when it can not move on it's own.

- (1) Tow the machine by other machine after hook the wire rope to the frame as shown in picture at right.
- (2) Hook the wire rope to the frame and put a support under each part of wire rope to prevent damage.


※ **Never tow the machine using the tie hole, because this may break.**

⚠ **Make sure no personnel are standing close to the tow rope.**

Correct

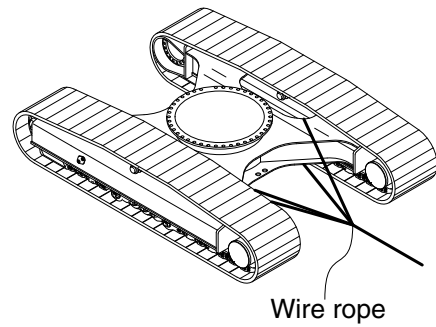

Incorrect

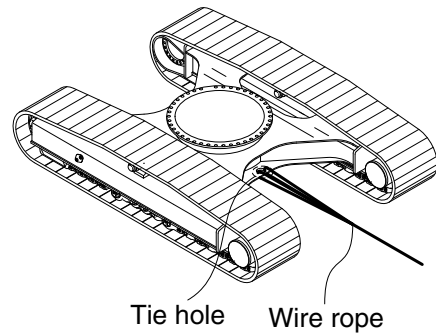


R5574OP14

6. EFFICIENT WORKING METHOD

- 1) Do the digging work by arm.


Use the pulling force of arm for digging and use together with the digging force of the bucket if necessary.

※ **Consult the local regulations and instructions when using the dozer blade for additional machine stability. For the installation of a dozer cylinder safety valve, please contact your Hyundai dealer.**

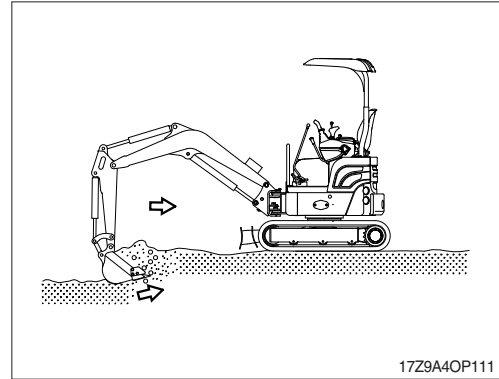


- 2) When lowering and raising the boom operate softly for the beginning and the end.


In particularly, sudden stops while lowering the boom may cause damage to the machine.

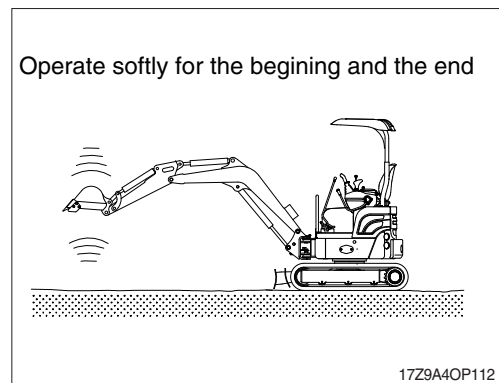


- 3) The digging resistance and wearing of tooth can be reduced by putting the end of bucket tooth to the digging direction.

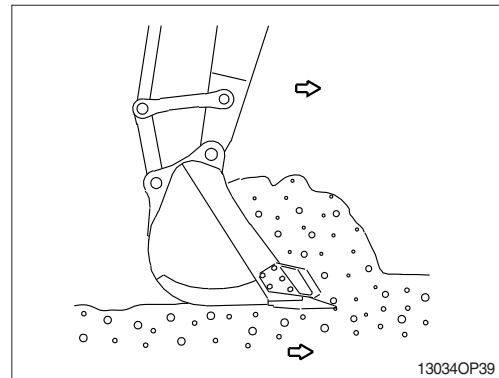


- 4) Set the tracks parallel to the line of the ditch to be excavated when digging ditch. Do not swing while digging.

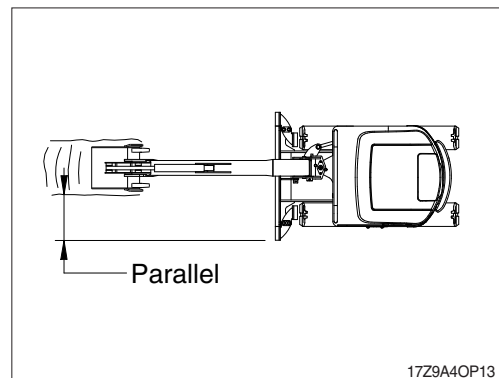

- 5) Dig slowly with keeping the angle of boom and arm, 90-110 degree when maximum digging force is required.

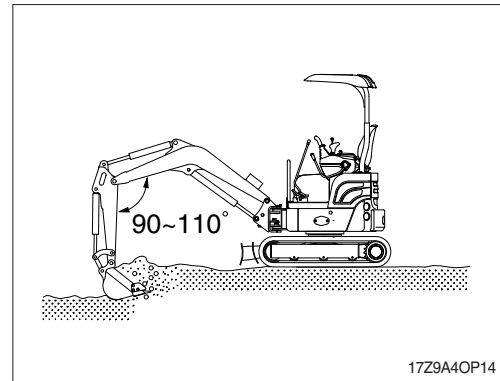


- 6) Operate leaving a small safety margin of cylinder stroke to prevent damage of cylinder when working with the machine.

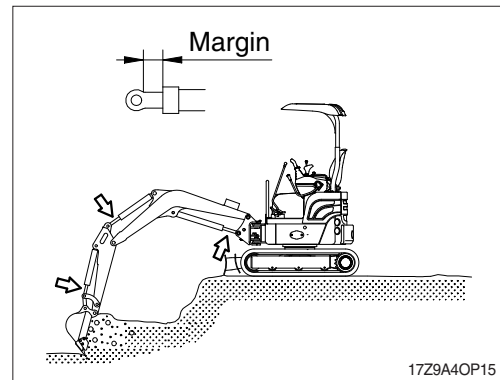


- 7) Keep the bucket to the dumping position and the arm horizontal when dumping the soil from the bucket.
Operate bucket lever 2 or 3 times when hard to dump.


※ **Do not use the impact of bucket tooth when dumping.**

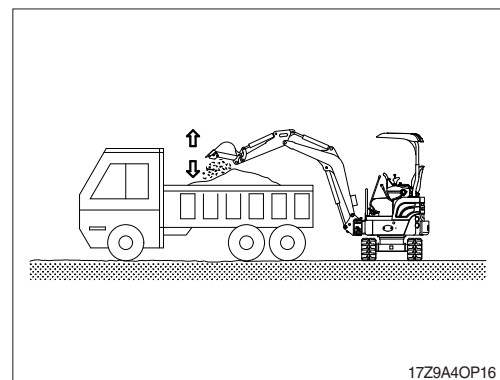


- 8) Operate stop of swing considering the swing slip distance is created by inertia after neutralizing the swing lever.

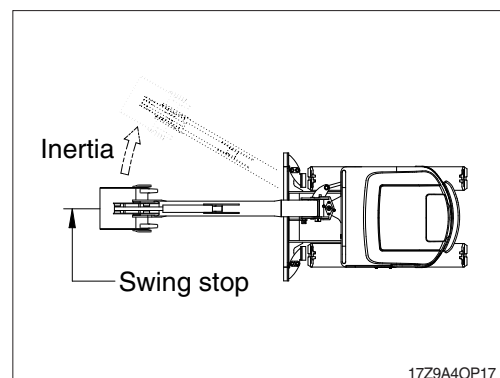


- 9) If the excavation is in an underground location or in a building, make sure that there is adequate overhead clearance and that there is adequate ventilation.

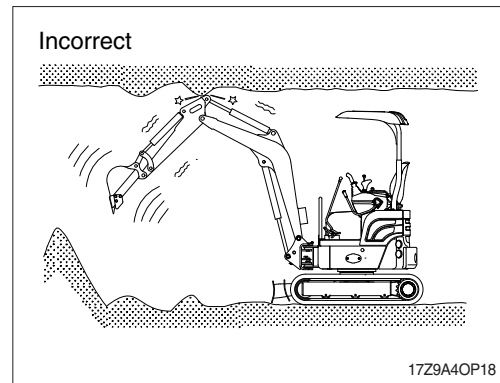

- 10) Do not use the dropping force of the work equipment for digging.
The machine can be damaged by the impact.

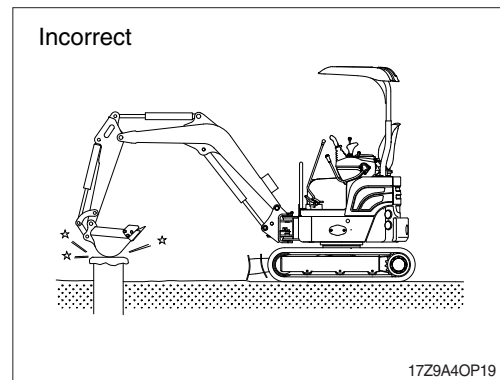

- 11) Do not use the bucket to crack hard objects like concrete or rocks.
This may break a tooth or pin, or bend boom.

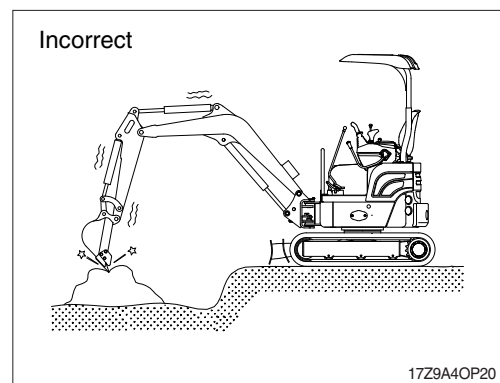

12) NEVER CARRY OUT EXCESSIVE OPERATIONS

Operation exceeding machine performance may result in accident or failure.

Never carry out operations which may damage the machine such as overload or over-impact-load.


Never travel while carrying a load.

※ Consult the local regulations and instructions for carrying out lifting operations. In accordance with EN 474-5 the machine must be equipped with following devices.

- a lifting device, f.e. lifting hook, lifting eye
- *an overload warning device (option)
- *safety valves on the arm and the boom cylinder (option)
- *a safety valve on the dozer cylinder (option)
if the dozer blade is used to increase the machine stability.

* : Please contact your Hyundai dealer for installation.

Incorrect

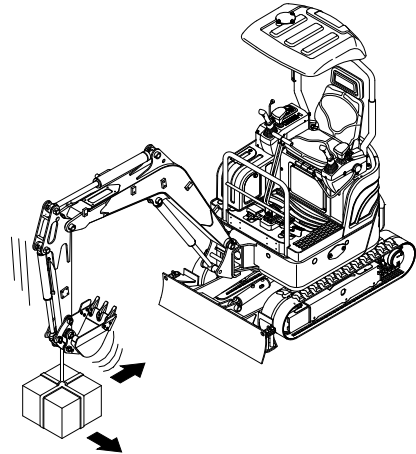

17Z9A40P21

13) BUCKET WITH HOOK

When carrying out lifting work, the special lifting hook is necessary.

The following operations are prohibited.

- Lifting loads with a wire rope fitted around the bucket teeth.
- Lifting loads with the wire rope wrapped directly around the boom or arm.

When performing lifting operation, securely hook the wire rope onto the special lifting hook.

When performing lifting operation, never raise or lower a person.

Due to the possible danger of the load falling or of collision with the load, no persons shall be allowed in the working area.


Before performing lifting operation, designate an operation supervisor.

Always execute operation according to his instructions.

- Execute operating methods and procedures under his direction.
- Select a person responsible for signaling.
Operate only on signals given by such person.

Never leave the operator's seat while lifting a load.

Hook

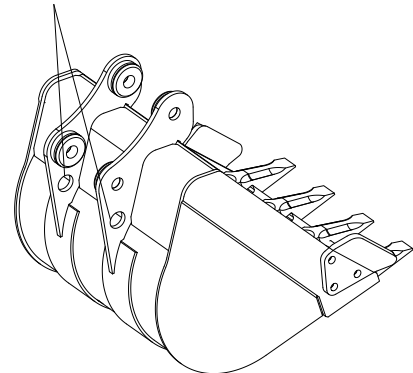


R35Z740P22

7. OPERATION IN THE SPECIAL WORK SITES

1) OPERATION THE MACHINE IN A COLD WEATHER

- (1) Use proper engine oil and fuel for the weather.
- (2) Fill the required amount of antifreeze in the coolant.
- (3) Refer to the starting engine in cold weather.
Start the engine and extend the warming up operation.
- (4) Be sure to open the heater cock when using the heater.
- (5) Always keep the battery completely charged.
※ **Discharged batteries will freeze more easily than fully charged.**
- (6) Clean the machine and park on the wood plates.

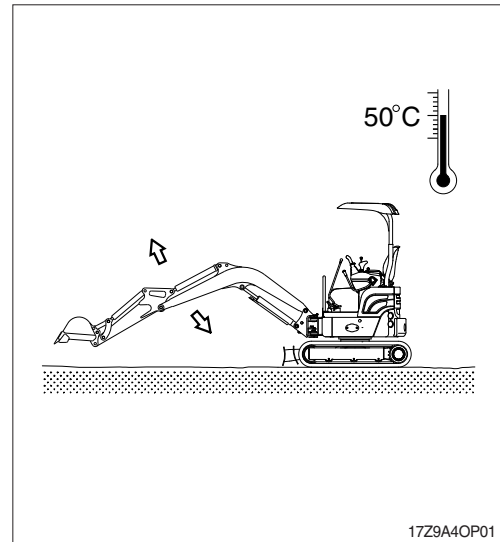

2) OPERATION IN SANDY OR DUSTY WORK SITES

- (1) Inspect air cleaner element frequently. Clean or replace element more frequently, if warning lamp comes ON and buzzer sounds simultaneously, regardless of inspection period.
※ **Replace the inner and outer element after 4 times of cleaning.**
- (2) Inspect radiator, oil cooler and condenser frequently, and keep cooling fins clean.
- (3) Prevent sand or dust from getting into fuel tank and hydraulic tank during refilling.
- (4) Prevent sand or dust from penetrating into hydraulic circuit by tightly closing breather cap of hydraulic oil tank. Replace hydraulic oil filter and air breather element frequently. Also, replace the fuel filter frequently.
- (5) Keep all lubricated part, such as pins and bushings, clean at all times.
- (6) If the air conditioner and heater filters clogged, the heating or cooling capacity will drop. Clean or replace the filter element more frequently.
- (7) Clean electrical components, especially the starting motor and alternator to avoid accumulation of dust.

3) SEA SHORE OPERATION

- (1) Prevent ingress of salt by securely tightening plugs, cocks and bolts of each part.
- (2) Wash machine after operation to remove salt residue.
Pay special attention to electrical parts, and hydraulic cylinders and track tension cylinder to prevent corrosion.
- (3) Inspection and lubrication must be carried out more frequently.
Supply sufficient grease to replace all old grease in bearings which have been submerged in water for a long time.

4) OPERATION IN MUD, WATER OR RAIN WORK SITES

- (1) Perform a walk around inspection to check for any loose fittings, obvious damage to the machine or any fluid leakage.
- (2) After completing operations, clean mud, rocks or debris from the machine. Inspect for damage, cracked welds or loosened parts.
- (3) Perform all daily lubrication and service.
- (4) If the operations were in salt water or other corrosive materials, make sure to flush the affected equipment with fresh water.


5) OPERATION IN ROCKY WORK SITES

- (1) Check for damage to the undercarriage and for looseness, flaws, wear and damage in bolts and nut.
- (2) Loosen the track tension a little when working in such areas.
- (3) Do not turn the undercarriage directly over the sharp edge rock.

8. NORMAL OPERATION OF EXCAVATOR

Followings may occur during operation due to the nature of a hydraulic excavator.

- 1) When rolling in the arm, the roll-in movement stop momentary at point **X** in the picture shown, then recovers speed again after passing point **X**.
The reason for this phenomenon is that movement by the arm weight is faster than the speed of oil flow into the cylinder.
- 2) When lowering the boom, one may hear continuous sound.
This is caused by oil flow in the valve.
- 3) Overloaded movement will produce sound caused by the relief valves, which are for the protection of the hydraulic systems.
- 4) When the machine is started swing or stopped, a noise near the swing motor may be heard. The noise is generated when the brake valve relieves.

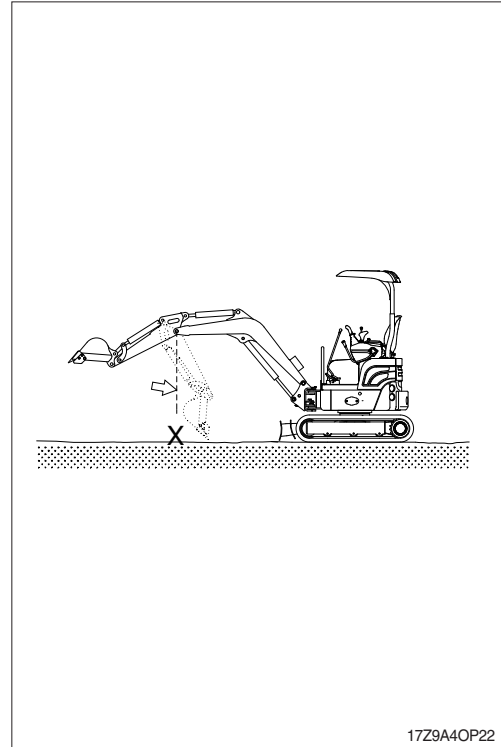

9. ATTACHMENT LOWERING (When engine is stopped)

- 1) On machines equipped with an accumulator, for a short time (within 2 minutes) after the engine is stopped, the attachment will lower under its own weight when the attachment control lever is shifted to **LOWER**. That is happen only starting switch **ON** position and safety lever **UNLOCK** position. After the engine is stopped, set the safety lever to the **LOCK** position.


⚠ Be sure no one is under or near the attachment before lowering the boom.

- 2) The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.

⚠ Never make any hole in the accumulator expose it to flame or fire.

⚠ Do not weld anything to the accumulator.

※ When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your Hyundai distributor.

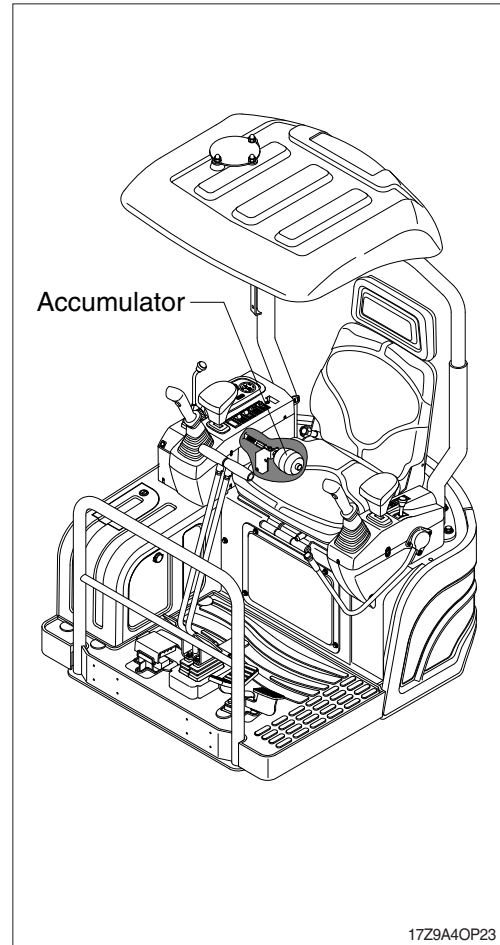

10. STORAGE

Maintain the machine taking care of following to prevent the deterioration of machine when storing the machine for a long time, over 1 month.

1) BEFORE STORAGE

(1) Cleaning the machine

Clean the machine. Check and adjust tracks.
Grease each lubrication part.


(2) Lubrication position of each part

Change all oil.

※ Be particularly careful when you reuse the machine.

As oil can be diluted during storage.

Apply an anticorrosive lubricant on the exposed part of piston rod of cylinder and in places where the machine rusts easily.

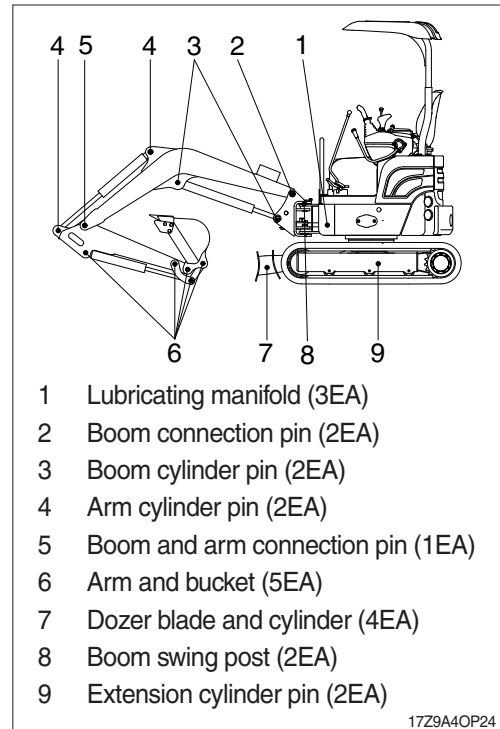


(3) Be sure to mix anticorrosive antifreezing solution in the radiator.

(4) Prevention of dust and moisture

Keep machine dry. Store the machine setting wood on the ground.


- ※ Cover exposed part of piston rod of cylinder.
- ※ Lower the bucket to the ground and set a support under track.

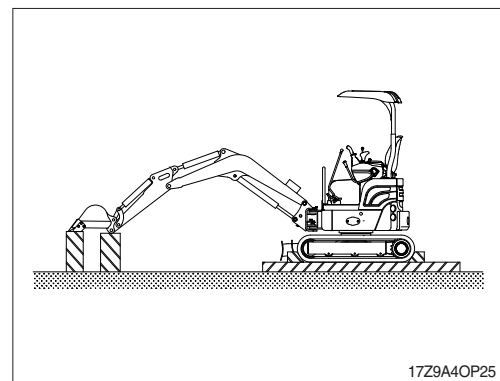

2) DURING STORAGE

Start engine and move the machine and work equipment once a month and apply lubrication to each part.

- ※ Check the level of engine oil and coolant and fill if required when starting engine.
- ※ Clean the anticorrosive on the piston rod of cylinder.
- ※ Operate the machine such as traveling, swing and work equipment operation to make sure enough lubrication of all functional components.

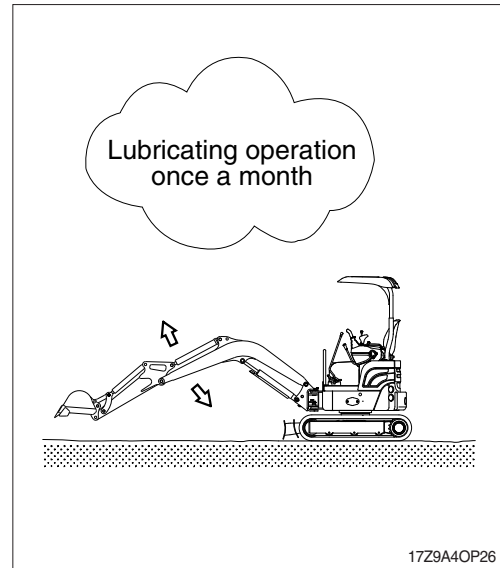


3) AFTER STORAGE

Carry out the following procedure when taking out of a long time storage.

- (1) Wipe off the anticorrosive lubricant on the hydraulic piston rod.
- (2) Completely fill fuel tank, lubricate and add oil.
- (3) **When storage period is 6 months over**
If the machine stock period is over 6 months, carry out the following procedure.
This procedure is to drain condensation water for the **swing reduction gear** durability.
 - ※ Remove the drain port plug and drain the water until the gear oil comes out and then tighten the drain plug.
 - ※ Refer to the service instruction, section 6 for the drain plug location.
 - ※ If the machine is stored without carrying out the monthly lubricating operation, consult your Hyundai dealer for service.

11. RCV LEVER OPERATING PATTERN

1) PATTERN CHANGE VALVE NOT INSTALL (standard)

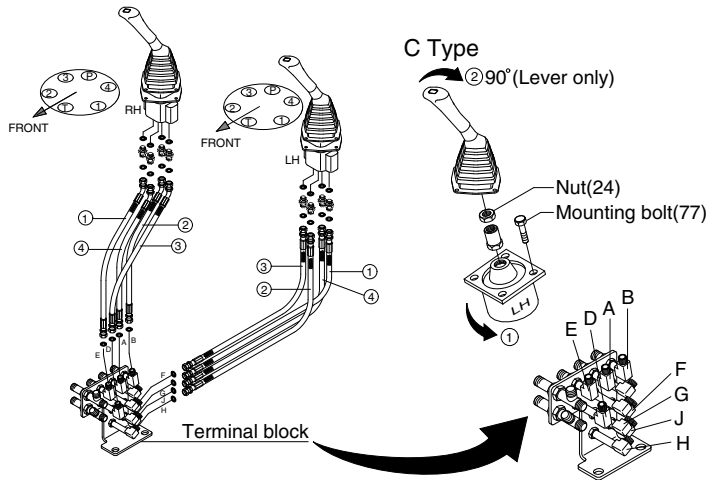

※ Whenever a change is made to the machine control pattern also exchange the pattern label on the left side of upper frame to match the new pattern.

17Z9A4OP28

| Pattern | Operation | | Control function | Hose connection (port) | | | |
|---------------|----------------|-----------------|------------------|--|--------------------------|----|---|
| | Left RCV lever | Right RCV lever | | RCV lever | Change of Terminal block | | |
| | | | | | From | To | |
| ISO Type | | | Left | 1 Arm out | ② | H | - |
| Hyundai | | | | 2 Arm in | ④ | J | - |
| | | | | 3 Swing right | ③ | F | - |
| | | | | 4 Swing left | ① | G | - |
| | | | Right | 5 Boom lower | ② | B | - |
| 6 Boom raise | ④ | A | | - | | | |
| 7 Bucket out | ③ | D | | - | | | |
| 8 Bucket in | ① | E | | - | | | |
| A Type | | | Left | 1 Boom lower | ② | H | B |
| | | 2 Boom raise | | ④ | J | A | |
| | | 3 Swing right | | ③ | F | - | |
| | | 4 Swing left | | ① | G | - | |
| | | Right | 5 Arm out | ② | B | H | |
| 6 Arm in | ④ | | A | J | | | |
| 7 Bucket out | ③ | | D | - | | | |
| 8 Bucket in | ① | | E | - | | | |
| B Type | | | Left | 1 Boom lower | ② | H | B |
| | | 2 Boom raise | | ④ | J | A | |
| | | 3 Bucket in | | ① | F | E | |
| | | 4 Bucket out | | ③ | G | D | |
| | | Right | 5 Arm out | ② | B | H | |
| 6 Arm in | ④ | | A | J | | | |
| 7 Swing right | ③ | | D | F | | | |
| 8 Swing left | ① | | E | G | | | |
| C Type | | | Left | ① Loosen the RCV lever mounting bolt (77) and rotates lever assy 90° counterclockwise; then install. ② To put lever in correct position, disassemble nut (24) and rotates only lever 90° clockwise. | | | |
| | | | Right | Same as ISO type | | | |

2) PATTERN CHANGE VALVE INSTALL (option)

- ※ If the machine is equipped with the pattern change valve, the machine operation pattern can be easily changed.
- ※ Whenever a change is made to the machine control pattern also exchange the pattern label in the cab to match the new pattern.


| Operation | ISO type | A type |
|-----------------|----------|--------|
| Left RCV lever | | |
| Right RCV lever | | |

(1) The machine control pattern can be easily changed from the "ISO type" to "A type" by changing the position of the lever.

▲ **Before starting the machine, check the lever position of pattern change valve and actual operating of attachment.**


(2) Change of operating pattern

- ① Loosen the bolt (11).
- ② Move lever from the "ISO type" to "A type" position.
- ③ After the lever is set, tighten the bolt in order to secure the lever.

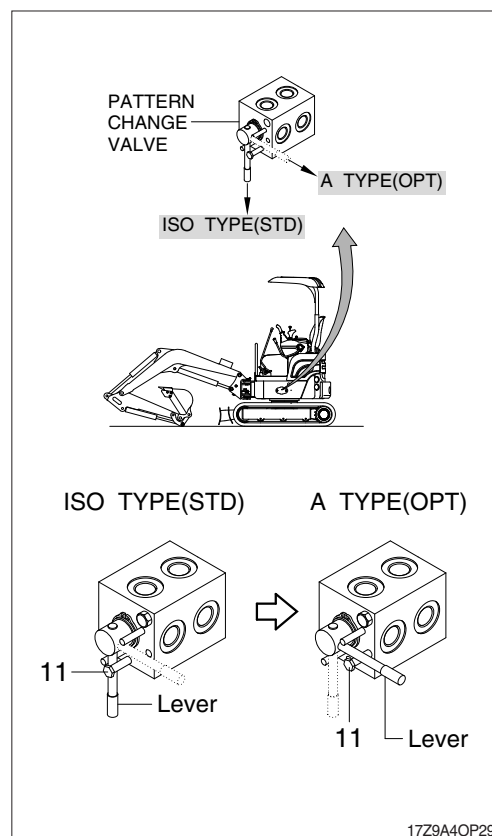

12. SWITCHING HYDRAULIC ATTACHMENT CIRCUIT

- 1) The combined hydraulic attachment circuit is capable of providing single action or double action.
- 2) The position of 3 way valve selects the single action hydraulic attachment circuit or the double action hydraulic attachment circuit.
- 3) Before you change the flow mode of hydraulic attachment circuit, place the machine in the servicing position as shown. Stop the engine.

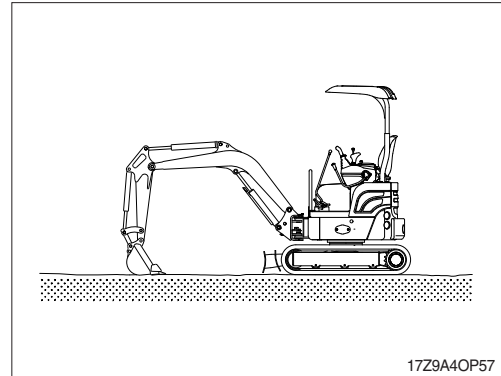


- 4) Use the spanner to turn the bolt of 3 way valve. Make sure that you turn the bolt between one way and two way.

(1) One way flow (hydraulic breaker)

Turn the arrow to the horizontal position.

(2) Two way flow (clamshell or shear)

Turn the arrow to the vertical position.

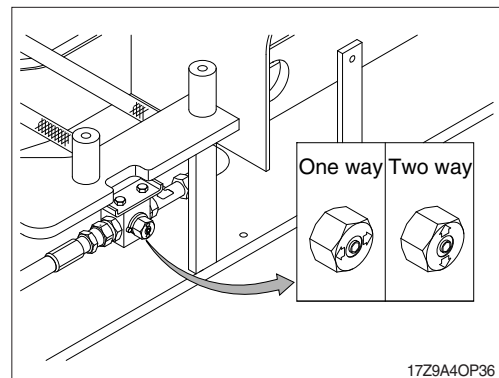

13. HANDLING THE RUBBER TRACKS

1) USING THE RUBBER TRACKS PROPERLY

Rubber tracks have some advantages over steel tracks.

However, you cannot take full advantage of them if you use them in the same manner as steel ones. Use care in operating with rubber tracks in accord with the conditions of the work site and the type of work.

Comparison table of rubber and steel tracks

| | Rubber | Steel |
|-------------------------------------|-----------|-----------|
| Low vibration | Excellent | Ordinary |
| Smooth travel | Excellent | Good |
| Silent travel | Excellent | Ordinary |
| Less damage to paved roads | Excellent | Ordinary |
| Simple handling | Excellent | Ordinary |
| Susceptibility to damage (strength) | Ordinary | Excellent |
| Drawbar pull | Excellent | Excellent |

Rubber tracks have many advantages inherent in the unique properties of the material. On the other hand, however, they are low in strength. It is essential that you fully understand the properties of rubber tracks, and observe the precautions for operating and handling them to prolong their life and get the most out of them. Be sure to read this section for using the rubber tracks before using them.

2) WARRANTY FOR RUBBER TRACKS

The rubber tracks are not warranted for free repair or replacement if they are damaged because of misuse by the customer, including the failure to comply with the prohibitions and the instructions for safe operation; (for example, the failure to check the tension of the rubber tracks or service the rubber tracks properly, or "using the rubber tracks on surfaces and terrains which could physically damage them".)

3) PROHIBITIONS FOR USING THE RUBBER TRACKS

- (1) Do not operate or turn on surfaces of terrains that have sharp stones, a hard, uneven rock base, or that expose the tracks to steel rods, scrap iron, or edges of iron plates. Failure to observe these prohibitions may damage the rubber tracks.
- (2) Do not operate the machine on a stony surface like a riverbed. Doing this may damage the rubber tracks by catching gravel in the tracks or may cause the tracks to come off. Forcibly pushing obstacles will also shorten the life of the rubber tracks.
- (3) Prevent the rubber tracks from getting exposed to oil, fuel or chemical solvents. If they are exposed, immediately wipe them. Also, do not travel on roads which have oily surfaces.
- (4) When storing the rubber tracks for a long time period (more than three months), avoid placing them in a place subject to direct exposure to sunlight or rain.

- (5) Do not operate the machine when the tracks will be exposed to heat, (i.e., near an open-air fire, on a steel plate that has been exposed to the blazing sun, or on a hot asphalt road.)
- (6) Never run on one rubber track while the other is held above the ground with the implement. Doing this may damage the rubber track or cause it to come off.

4) PRECAUTIONS FOR USING THE RUBBER TRACKS

Observe the following precautions when operating the machine :

- (1) Never spin-turn on concrete or asphalt roads.
- (2) Do not change course suddenly. Doing this will cause the rubber track to wear early or be damaged.
- (3) Do not turn the machine across a large level gap while traveling. Remember that running over a level gap at a right angle will prevent the track from coming off.
- (4) Slowly lower the machine after it has been lifted above the ground with the implement.
- (5) It is not recommended that the machine be used to handle any materials that become oily after being crushed (e.g., soybeans, corn, rapeseed oil seeds, etc.). After unavoidably using the machine to handle such materials, clean the tracks with water.
- (6) It is not recommended that the machine be used to handle materials such as salt, ammonium sulfate, potassium chloride, potassium sulfate, or superphosphate of lime. Handling these materials may affect the core metal adversely. After using the machine to handle such materials, clean the tracks with water.
- (7) Do not operate the machine at the seashore. Doing this may affect the core metal adversely due to the salt content.
- (8) If a rubber track is cracked, it could be easily damaged when exposed to salt, sugar, wheat, or soybeans. Be sure to repair any cracks in the rubber track to prevent rubber chips from getting into the materials being handled.
- (9) Do not allow the rubber track to rub against a concrete wall.
- (10) The rubber tracks are prone to slip on snow or on a frozen road. Be careful of skidding when traveling or operating on a slope in cold weather.
- (11) Operating the machine in extremely cold weather will deteriorate the rubber tracks, shortening their life.
- (12) Use the rubber tracks between -25°C to +55°C (-13°F to +131°F) because of the physical characteristics of rubber.
- (13) Be careful not to damage the rubber tracks with the bucket while operating the machine.

5) BE CAREFUL NOT TO COME OFF THE RUBBER TRACKS


Keep the tracks in appropriate tension to prevent them from coming off.

If the tension is too low, the rubber tracks may come off under the following conditions.


Even if the tension is adequate, take care when operating the tracks under these conditions.

Some illustrations in this section can be different from your machine.


- (1) Do not steer the machine at an angle other than 90 degrees across a large level gap created by a curbstone or a rock [approximately more than 20 cm (8")]. Run over a level gap at a right angle only to prevent the tracks from coming off.

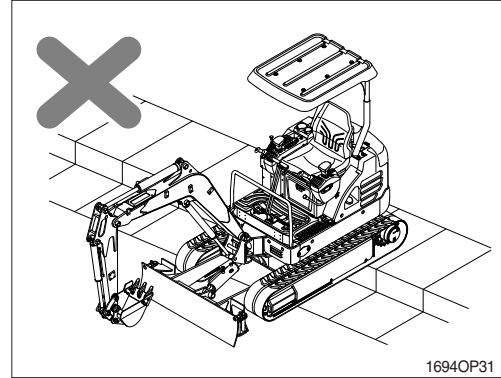


- (2) Do not steer the machine across a boundary between the flat ground and a slope, while moving backwards. If such travel is not avoidable, slow down the speed.

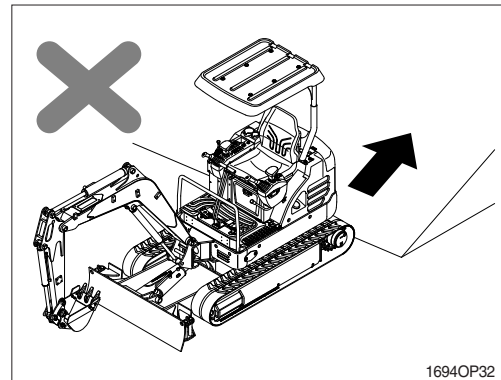

- (3) Do not travel with the track on one side on a slope or on convex ground (causing a machine angle of more than 10 degrees), and with the track on the other side on flat ground, to prevent the rubber track from being damaged. Be sure to travel with the tracks on both sides on the same level surface.

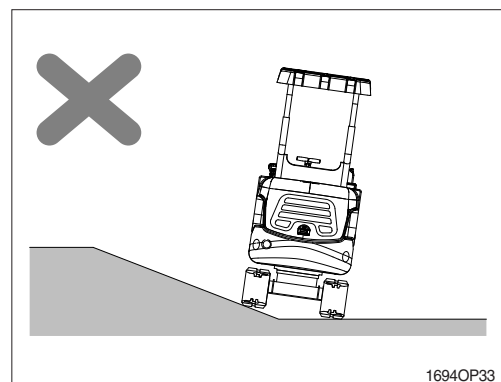


- (4) The three cases illustrated above are those which could cause the rubber tracks to loosen. In addition, do not subject machine to such ground conditions as are illustrated in the figure at the right.

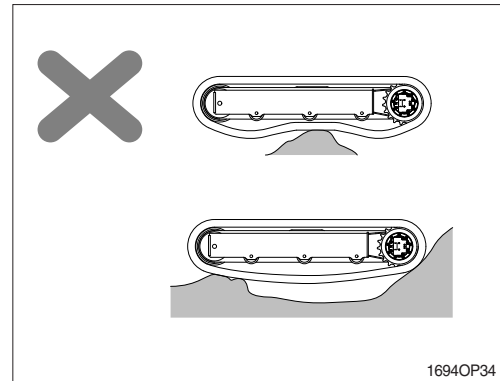


HOW THE RUBBER TRACKS COME OFF

- (5) When running over a level gap, a clearance is created between the tracks and the track rollers. At this point, the tracks tend to come off.

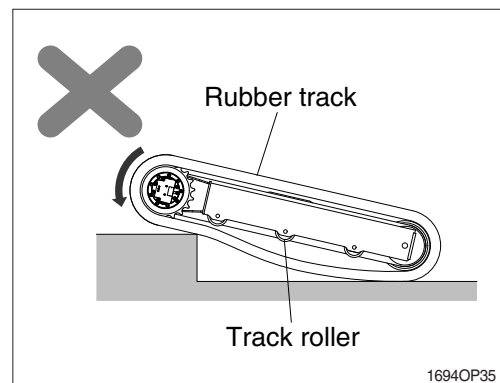


- (6) If the machine is traveling in reverse, clearance may also be created between the track rollers and the rubber tracks, and between the idlers and the rubber tracks, causing the rubber tracks to come off.

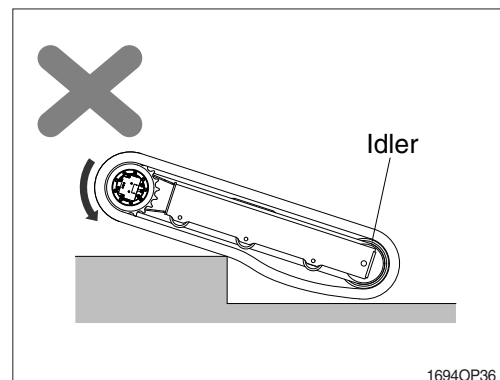


- (7) Other situations to be avoided.

- ① When the machine changes the travel direction while the rubber tracks are blocked sideways by an obstacle or the like.
- ② When the idler and the track rollers are misaligned from the core metal, due to rubber track misalignment.

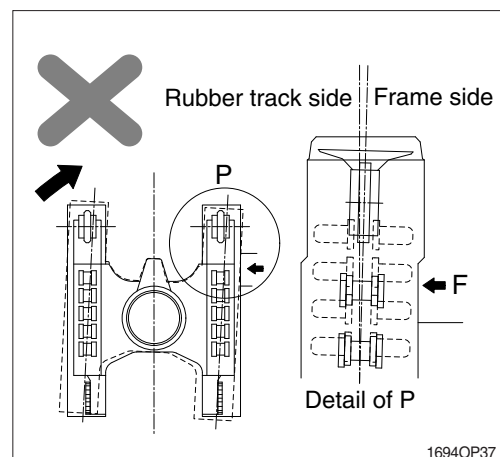

- ③ Traveling in reverse under the condition illustrated will cause the rubber tracks to come off.

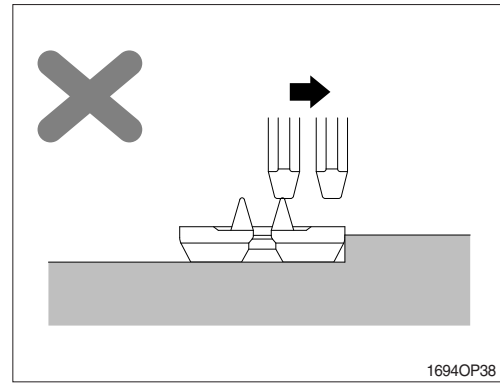

- ④ Changing the travel direction of the machine under the condition illustrated will cause the rubber tracks to come off.

