

5. MAINTENANCE CHART

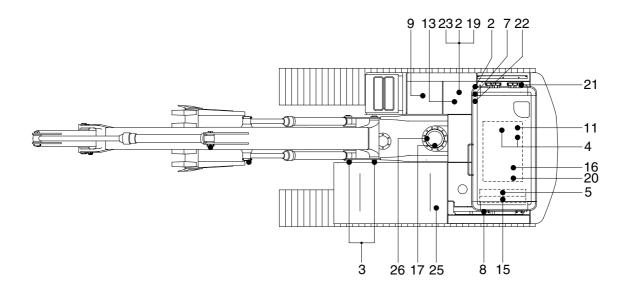

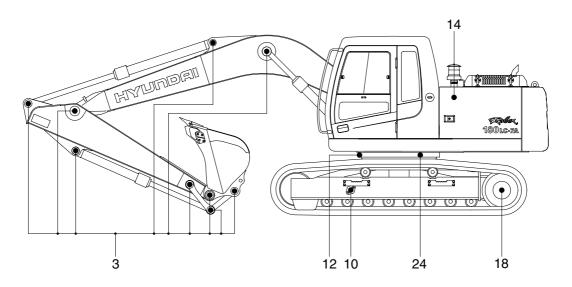

1807A6MA05

Caution

- 1. Service intervals are based on the hour meter reading.
- 2. The number of each item shows the lubrication point on the machine.
- 3. Stop engine while filling oil, and use no open flames.
- 4. For other details, refer to the service manual.

Service interval	No.	Description	Service action	Oil symbol	Capacity l (U.S.gal)	Service points No.
10 Hours or daily	1	Fuel tank	Check, Refill	DF	260 (68.9)	1
	2	Hydraulic oil level	Check, Add	HO	160 (42.3)	1
	4	Engine oil level	Check, Add	EO	18.5 (4.9)	1
	5	Radiator coolant	Check, Add	С	30 (7.9)	1
	7	Prefilter (water, element)	Check, Clean	-	-	1
	20	Fan belt tension and damage	Check, Adjust	-	-	1
50 Hours or weekly	3	Attachment pins & chamber	Check, Add	PGL	-	17
	9	Fuel tank (water, sediment)	Check, Clean	-	-	1
	10	Track tension	Check, Adjust	PGL	-	2
	12	Swing bearing grease	Check, Add	PGL	-	3
	17	Swing reduction gear case	Check, Add	GO	5.0 (1.32)	1
250 Hours	8	Battery (voltage)	Check	-	-	1
	23	Air breather element	Replace	-	-	1
	25	Aircon and heater flesh filter	Check, Clean	-	-	1
500 Hours	4	Engine oil	Change	EO	18.5 (4.9)	1
	7	Prefilter (water, element)	Replace	-	-	1
	11	Engine oil filter	Replace	-	-	1
	14	Air cleaner element (primary)	Check, Clean	-	-	1
	15	Radiator, oil cooler, charge air cooler	Check, Clean	-	-	3
	16	Fuel filter element	Replace	-	-	1
1000 Hours	13	Hydraulic oil return filter	Replace	-	-	1
	17	Swing reduction gear case	Change	GO	5.0 (1.3)	1
	18	Travel reduction gear case	Change	GO	5.4 (1.4)	2
	21	Pilot line filter element	Replace	-	-	1
	22	Drain filter cartridge	Replace	-	-	1
	24	Swing gear and pinion grease	Change	PGL	6.2kg	1
2000 Hours	2	Hydraulic oil	Change	HO	(13.7lb)	1
	5	Radiator coolant	Change	С	160 (42.3)	1
	19	Hydraulic oil suction strainer	Check, Clean	-	30 (7.9)	1
As required	14	Air cleaner element (primary, safety)	Replace	-	-	2
	25	Aircon & heater fresh filter	Replace	-	-	1
	25	Aircon & heater recirculation filter	Clean, Replace	-	-	1

* Oil symbol

Please refer to the recommended lubricants for specification.

DF : Diesel fuel

- GO : Gear oil C : Coolant
- HO : Hydraulic oil PGL : Grease
- EO : Engine oil