

MACHINE DATA PLATE

Diagram of a general Machine Data Plate. It features the Hyundai logo and company address at the top. The plate is divided into four main sections: EQUIPMENT, OPERATING WEIGHT, MODEL, and ENGINE POWER(PS/KW/rpm). A SERIAL-NUMBER section is located at the bottom left. A warning 'DO NOT DEFACE OR REMOVE THIS PLATE' is at the bottom. Numbered callouts 1 through 5 point to the EQUIPMENT, MODEL, SERIAL-NUMBER, OPERATING WEIGHT, and ENGINE POWER fields respectively.

Diagram of a Machine Data Plate for EU. It includes the CE mark and Hyundai logo. The layout is similar to the general plate but includes a MFG. YEAR field instead of an engine power field. Numbered callouts 1 through 6 point to the EQUIPMENT, MODEL, SERIAL-NUMBER, OPERATING WEIGHT, ENGINE POWER, and MFG. YEAR fields respectively.

FOR EU ONLY

Diagram of a Machine Data Plate for FOPS/FOG. It includes the Hyundai logo and company address. The plate has fields for MACHINE, FOPS/FOG S/NO., and STANDARDS. The STANDARDS field contains specific SAE and ISO compliance information. A warning 'DO NOT DEFACE OR REMOVE THIS PLATE' is at the bottom. Numbered callouts 2 and 3 point to the MACHINE and FOPS/FOG S/NO. fields respectively.

FOR FOPS/FOG

Diagram of a Machine Data Plate for ROPS. It includes the Hyundai logo and company address. The plate has fields for MACHINE, MAX. CERTIFIED WEIGHT, ROPS/TOPS/FOG S/NO., and STANDARDS. The STANDARDS field contains ISO 12117-2:2008 information. A warning 'ANY MODIFICATION OR ALTERATION ON THIS STRUCTURES WITHOUT AUTHORIZATION AVOID THE CERTIFICATION.' is at the bottom. Numbered callouts 2, 3, and 7 point to the MACHINE, ROPS/TOPS/FOG S/NO., and MAX. CERTIFIED WEIGHT fields respectively.

ROPS

2609A0FW01

- | | | |
|----------------------------|----------------|----------------------|
| 1 Equipment | 2 Model name | 3 Serial number |
| 4 Operating weight | 5 Engine power | 6 Manufacturing year |
| 7 Maximum certified weight | | |

※ The machine serial number assigned to this particular machine and should be used when requesting information or ordering service parts for this machine from your authorized HYUNDAI dealer. The machine serial number is also stamped on the frame.