

A

Accel dial switch	3-35
Accel pedal	3-47
Air engine start	4-5, 4-9
Air breather element	6-30
Air cleaner filter	6-25
Air conditioner & heater	3-48
Air conditioner filter	6-45
Alternate exit	0-12
Attachment lowering	4-35
Axle gear oil	6-35

B

Battery	6-42
Before starting engine	4-2
Boom lowering	4-35
Breaker pedal	3-47
Bucket clearance adjustment	6-40
Bucket replacement	6-38
Bucket selection guide	2-8
Bucket tooth replacement	6-39

C

Cab air filter	6-45
Cab device	3-1
Changing machine control pattern	4-38
Charge air cooler	6-23
Cigar lighter	3-55
Cluster	3-2, 3-23
Coolant	6-20
Cooling fan	6-23

D

Drain filter	6-29
Dimension and weight	5-3

E

Emergency engine starting connector	3-67
Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3, 4-7
Engine starting by booster	6-43
Engine stop	4-6

F

Fan belt	6-24
Fixing the machine	5-7
FNR lever	3-39

Fuel filter	6-26
Fuel leakage	6-29
Fuel system bleeding	6-27
Fuel tank	6-25
Fuse & relay box	3-66

G

Gauge	3-3, 3-24
-------------	-----------

H

Hydraulic breaker	8-1
Hydraulic oil changing	6-28
Hydraulic oil filling	6-28
Hydraulic oil level	6-29

L

LCD	3-4, 3-26
LCD display map	3-5, 3-27
LCD main operation display	3-3, 3-24
Levers & pedals	3-45
Lifting capacities	2-7
Loading the machine	5-5
Lubricant specification	2-13

M

Maintenance check list	6-11
Major component	2-1
Master switch	3-35
MCU (Machine Control Unit)	3-66
Mode selection system	4-10, 4-15
Monitor panel	3-2, 3-23
Mounting and dismounting	1-12
Multifunction switch	3-39

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
Operating pattern	4-30

P

Pedals	3-45
Periodical replacement parts	6-5
Pilot lamps	3-7, 3-30
Pilot line filter	6-30
Pin & bushing lubrication	6-41
Prefilter	6-26

Q

Quick clamp 8-6

R

Radiator flushing 6-20

Radio & USB player 3-56

RCV lever lubricate 6-32

Recommended oils 2-13, 6-10

Relieving pressure 6-3

Return filter 6-30

RCV lever operating pattern 4-38

RS 232 service socket 3-67

S

Safety hints 1-1

Safety labels 0-5

Safety parts 6-5

Seat 3-64, 65

Seat belt 3-64, 65

Start switch 1 (dozer/outrigger) 3-36

Start switch 2 (parking/working/traveling) 3-41

Service meter 3-67

Service socket 3-67

Socket 12V 3-55

Specification for major component 2-10

Specification 2-2

Start switch 3-34

Storage 4-36

Suction strainer 6-29

Swing bearing grease 6-31

Swing gear 6-31

Swing lock lever 3-47, 6-32

Swing reduction gear oil 3-33

Switch panel 3-9

Switches 3-34

T

Tires air pressure 6-34

Torques-major component 6-6

Torques-fastener 6-6

Towing machine 4-25

Transportation 5-2

Transmission gear oil 6-37

Traveling machine 4-21

Travel pilot lamo 3-43

Troubleshooting guide 7-1

W

Warming up operation 4-5, 4-9

Warning lamps 3-4, 3-25

Weight 2-6

Windshield 3-68

Working device operation 4-20

Working method 4-27

Working range 2-4