

A

Accel dial switch	3-14
After engine start	4-4
Air breather element	6-32
Air cleaner filter	6-25
Air conditioner & heater	3-20
Air conditioner filter	6-43
Alternate exit	0-12
Attachment lowering	4-22

B

Battery	6-40
Before starting engine	4-2
Boom lowering	4-22
Bucket clearance adjustment	6-38
Bucket replacement	6-36
Bucket selection guide	2-12
Bucket tooth replacement	6-37

C

Cab air filter	6-43
Cab device	3-1
Cassette & radio	3-32
Changing machine control pattern	4-25
Cigar lighter	3-27
Coolant	6-20
Cooling fan	6-24
CPU controller	3-29

D

Drain filter	6-32
--------------------	------

E

Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-41
Engine stop	4-5

F

Fan belt	6-24
Fuel filter	6-27
Fuel leakage	6-29
Fuel system bleeding	6-27
Fuel tank	6-25
Fuse box	3-29

H

Hydraulic breaker	8-1
Hydraulic oil changing	6-30
Hydraulic oil filling	6-30
Hydraulic oil level	6-30

L

LCD	3-5
LCD display map	3-6
LCD main operation display	3-3
Levers & pedals	3-18
Lifting capacities	2-8
Lubricant specification	2-20

M

Maintenance check list	6-11
Major component	2-16
Mode selection system	4-6
Monitor panel	3-2
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
Operating pattern	4-25

P

Pedals	3-18
Periodical replacement parts	3-18
Pilot filter	6-32
Pin & bushing adjustment	6-38

Q

Quick clamp	8-6
-------------------	-----

R

Radiator flushing	6-20
Radio	3-32
RCV lever lubricate	6-35
Recommended oils	2-20, 6-10
Relieving pressure	6-3
Resistor	3-30
Return filter	6-31
RCV lever operating pattern	4-25

S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
Seat	3-28
Seat belt	3-28
Service meter	3-30
Speciation for major component	2-16
Specification	2-2
Start switch	3-13
Storage	4-24
Suction strainer	6-31
Swing bearing grease	6-33
Swing gear & pinion grease	6-34
Swing reduction gear oil	6-33
Switch panel	3-11
Switches	3-13

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-14
Track adjustment	6-35
Track shoe selection	2-15
Transportation	5-1
Travel reduction gear oil	6-34
Travelling machine	4-12
Troubleshooting guide	7-1

U

Undercarriage	2-14
---------------------	------

W

Warming up operation	4-5
Warning lamps	3-9
Water separator	6-26
Weight	2-7
Working device operation	4-11
Working method	4-15
Working range	2-4