


1. ROAD TRAVELING

As this machine can run at the maximum speed of 31 km/h, it is not necessary to transport the machine on trailer in a short distance.

But the transportation by the trailer is convenient in a long distance.

If it is necessary to travel on a road, observe the followings.


- 1) Comply with regulations regarding this machine for the sake of safety.
- 2) Perform daily inspection before starting the machine.
- 3) Cross the bridge after checking that it will safely support the machine weight. If the bridge can not support, a detour must be prepared or the bridge must be reinforced.
- 4) When traveling for a long distance, stop every hour to allow tires and other components to cool down and check any abnormality.
- 5) Drive with the grapple empty.

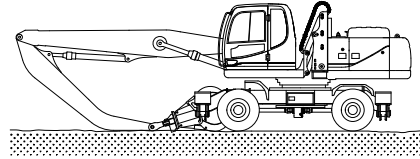

210W9MH5TA01


2. PREPARATION FOR TRANSPORTATION

- 1) When transporting the machine, observe the various road rules, road transportation vehicle laws and vehicle limit ordinances, etc.
- 2) Select proper trailer after confirming the weight and dimension from the chapter 2, specification.
- 3) Check the whole route such as the road width, the height of bridge and limit of weight and etc., which will be passed.
- 4) Get the permission from the related authority if necessary.
- 5) Prepare suitable capacity of trailer to support the machine.

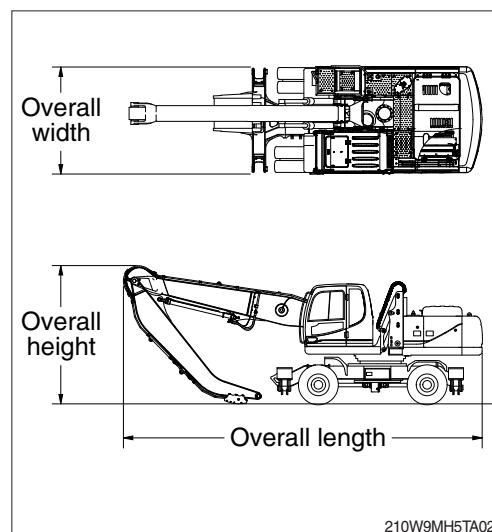

- 6) Prepare gangplank for safe loading referring to the below table and illustration.

A	B
1.0	3.65 ~ 3.85
1.1	4.00 ~ 4.25
1.2	4.35 ~ 4.60
1.3	4.75 ~ 5.00
1.4	5.10 ~ 5.40
1.5	5.50 ~ 5.75

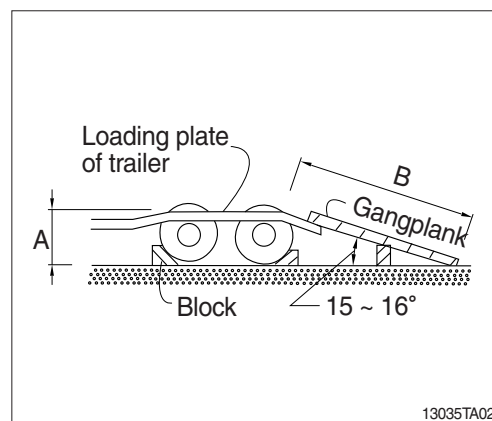


3. DIMENSION AND WEIGHT

1) BASE MACHINE

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	5220 (17' 2")
H	Height	mm (ft-in)	3180 (10' 5")
W	Width	mm (ft-in)	2490 (8' 2")
Wt	Weight	kg (lb)	16200 (35720)


※ With boom cylinder and cat walk.

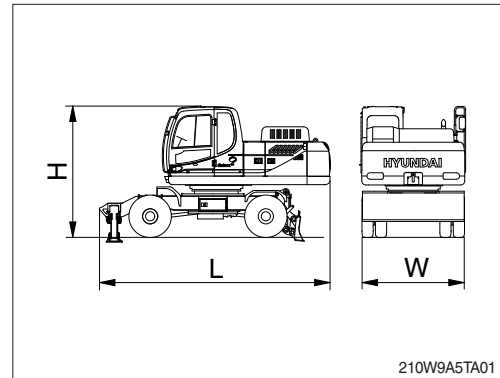

2) BOOM ASSEMBLY (6.5 m, 21' 4")

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	6700 (22' 0")
H	Height	mm (ft-in)	1000 (3' 3")
W	Width	mm (ft-in)	625 (2' 1")
Wt	Weight	kg (lb)	1760 (3880)


※ With boom pipings.

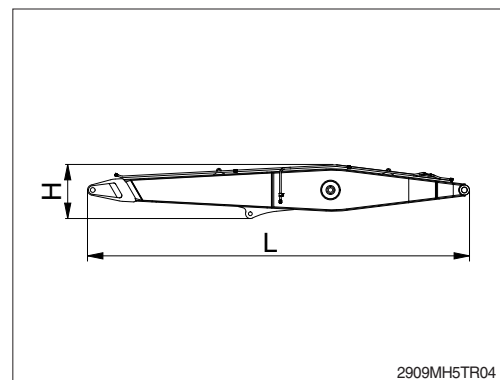

3) ARM ASSEMBLY (4.5 m, 14' 9")

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	4680 (15' 4")
H	Height	mm (ft-in)	1460 (4' 9")
W	Width	mm (ft-in)	345 (1' 2")
Wt	Weight	kg (lb)	950 (2090)


※ With arm pipings.

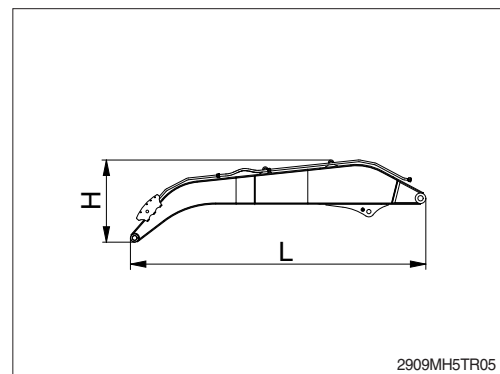

4) GRAPPLE ASSEMBLY

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	1905 (6' 3")
H	Height	mm (ft-in)	1290 (4' 3")
Wt	Weight	kg (lb)	1200 (2650)


※ 0.70 m³ (0.92 yd³) grapple.

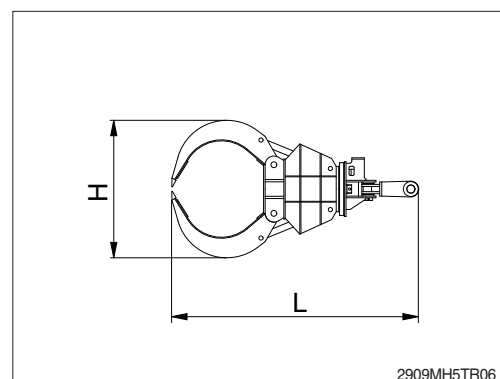

(5) Boom cylinder


Mark	Description	Unit	Specification
L	Length	mm (ft-in)	1960 (6' 5")
H	Height	mm (ft-in)	230 (0' 9")
W	Width	mm (ft-in)	330 (1' 1")
Wt	Weight	kg (lb)	360 (794)/2EA

※ Included piping.

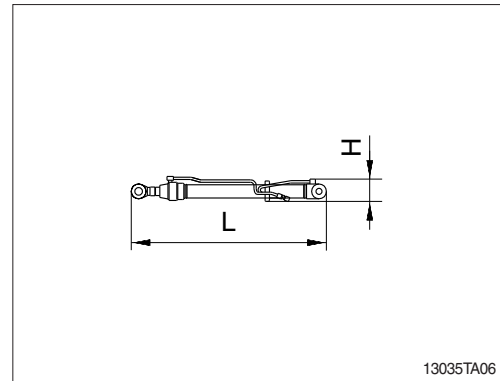


(6) Cab assembly

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	2000 (6' 7")
H	Height	mm (ft-in)	1740 (5' 9")
W	Width	mm (ft-in)	1288 (4' 2")
Wt	Weight	kg (lb)	500 (1100)

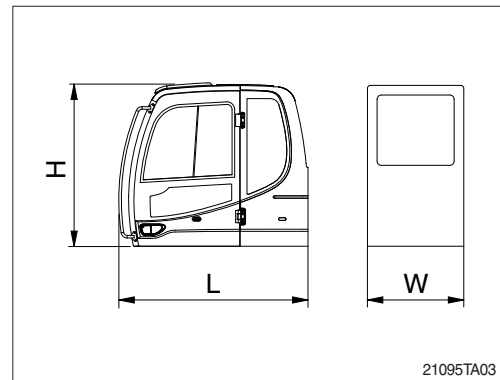


(7) Counterweight

Mark	Description	Unit	Specification
L	Length	mm (ft-in)	2530 (8' 4")
H	Height	mm (ft-in)	1050 (3' 5")
W	Width	mm (ft-in)	560 (1' 10")
Wt	Weight	kg (lb)	5000 (11020)

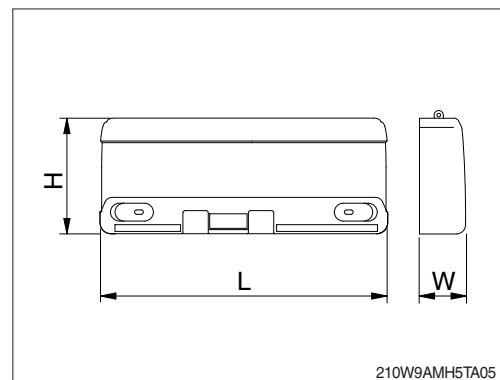


4. LOADING THE MACHINE


- 1) Load and unload the machine on a flat ground.
- 2) Use the gangplank with sufficient length, width, thickness and gradient.
- 3) Place block tires of the truck and the trailer not to move the trailer.
- 4) Place the swing lock device to the **LOCK** position before fixing the machine at the bed of trailer and confirm if the machine parallels the bed of trailer.
- 5) Drive straight and depress the acceleration pedal slowly on the gangplank with the two speed switch positioned as low speed.

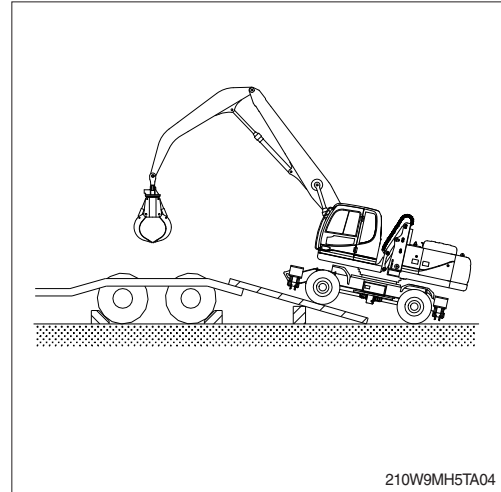

- 6) Do the following after loading the machine to the trailer.
 - (1) Stop loading when the machine is located horizontally with the rear wheel of trailer.

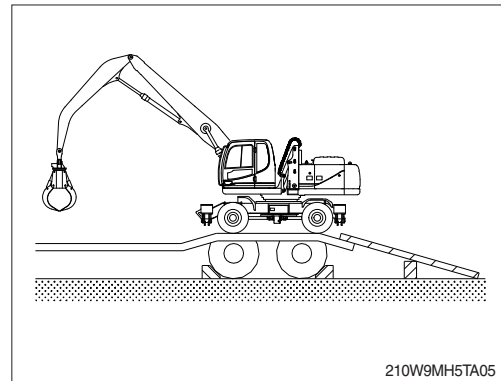

- (2) Place the swing lock device to the **LOCK** position after the swing the machine 180 degree.

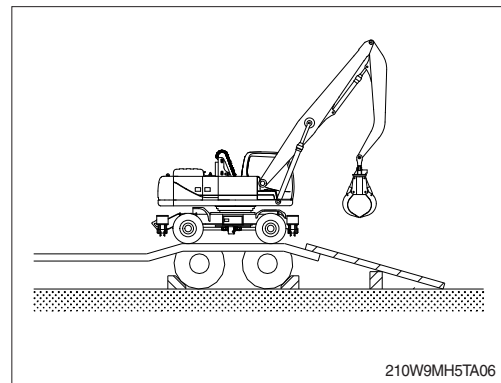

(3) Lower the working equipment gently after the location is determined.


※ **Place rectangular timber under the arm to prevent the damage of it during transportation.**

▲ **Be sure to keep the travel speed switch on the low speed while loading and unloading the machine.**

▲ **Avoid using the working equipment for loading and unloading since it will be very dangerous.**


▲ **Do not operate any other device when loading.**

▲ **Be careful on the boundary place of loading plate or trailer as the balance of machine will abruptly be changed on the point.**

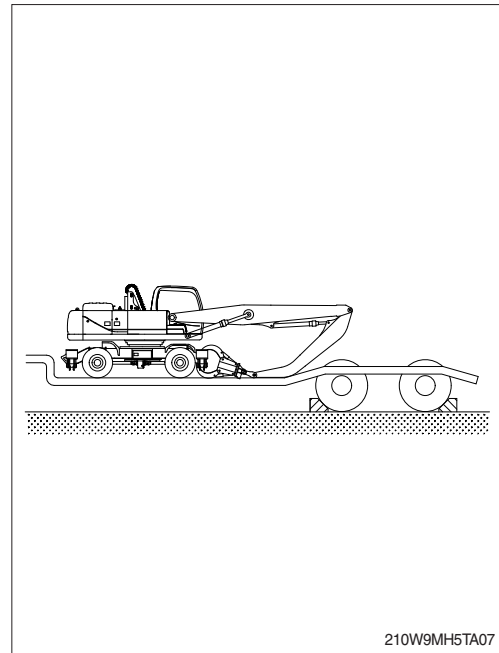


5. FIXING THE MACHINE


- 1) Place the swing lock device on the LOCK position.
- 2) Place the select switch 2 to the parking position.
- 3) Keep the safety lever on the SAFETY position.
- 4) Turn OFF all the switches and remove the key.

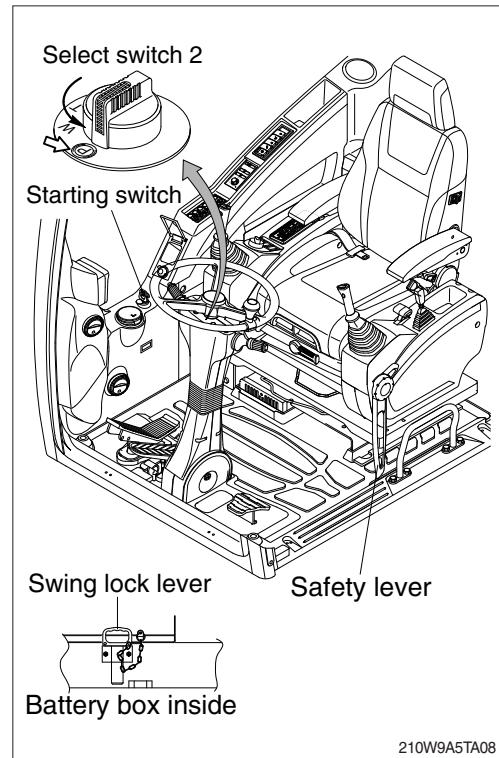

- 5) Secure all locks.

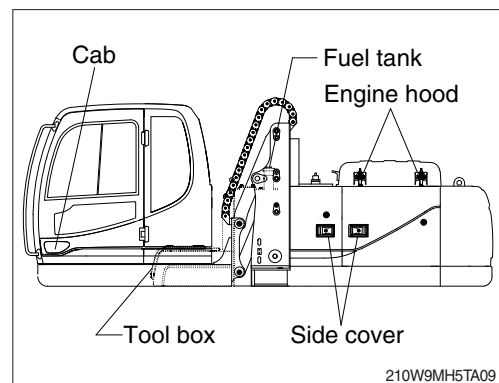

- 6) Place timber underneath of the tires and fix firmly with wire rope to prevent the machine from moving forward, backward, right or left.

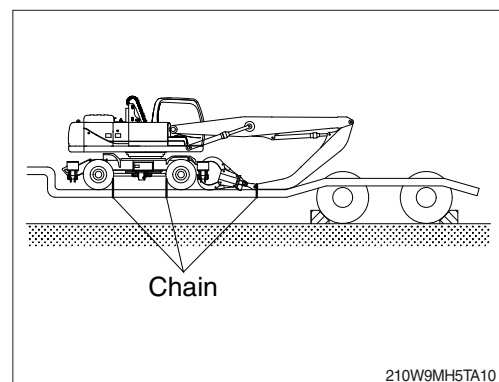

6. LOADING AND UNLOADING BY CRANE

- 1) Check the weight, length, width and height of the machine referring to the chapter 2, specification when you are going to hoist the machine.
- 2) Use long wire rope and stay to keep the distance with the machine as it should avoid touching with the machine.
- 3) Put a rubber plate where the wire rop contact with the machine's body to prevent damage.
- 4) Place crane on the proper place.
- 5) After the boom is raised to the maximum high, install the wire rope and stay like the illustration.

⚠ Make sure wire rope is proper size.



⚠ Place the safety lever to LOCK position to prevent the machine moving when hoisting the machine.

⚠ The wrong hoisting method or installation of wire rope can cause damage to the machine.

⚠ Do not load abruptly.

⚠ Keep area clear of personnel.

⚠ Recommend to manufacture the stays separately as per lifting conditions.

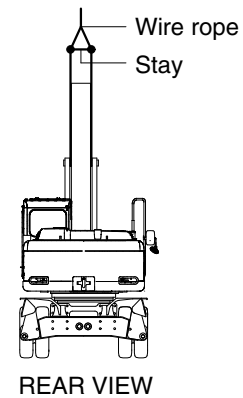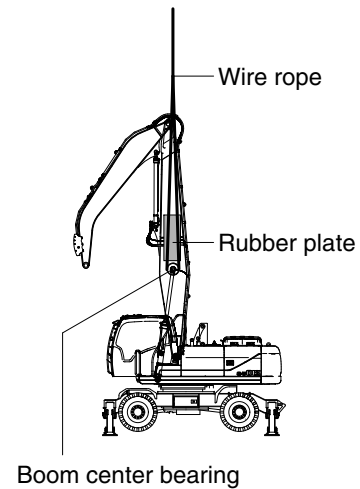

210W9MH5TA12