

CONTENTS

1. EC Declaration of conformity	0-1	3. Starting and stopping the engine	4-3
2. Disclaimer	0-2	4. Mode selection system	4-6
3. Foreword	0-3	5. Operation of working device	4-11
4. Before servicing this machine	0-4	6. Operation of cabin	4-12
5. EC regulation approved	0-5	7. Traveling of the machine	4-14
6. Table to enter S/No and distributor	0-6	8. Efficient working method	4-20
7. Safety labels	0-7	9. Operation in special work sites	4-23
8. Machine data plate	0-22	10. Normal operation of excavator	4-25
9. Guide (direction, S/No, intended use, symbol) ...	0-23	11. Attachment lowering	4-26
		12. Storage	4-27

SAFETY HINTS

1. Before operating the machine	1-1
2. During the operation	1-16
3. During the maintenance	1-24
4. Parking	1-27

SPECIFICATIONS

1. Major components	2-1
2. Specifications	2-2
3. Working range	2-3
4. Weight	2-4
5. Lifting capacities	2-5
6. Grapple guide	2-6
7. Specification for major components	2-7
8. Recommended oils	2-10

CONTROL DEVICES

1. Cab devices	3-1
2. Cluster	3-2
3. Switches	3-23
4. Levers and pedals	3-33
5. Auto air conditioner and heater	3-36
6. Others	3-43

OPERATION

1. Suggestions for new machines	4-1
2. Check before starting the engine	4-2

TRANSPORTATION

1. Road traveling	5-1
2. Preparation for transportation	5-2
3. Dimension and weight	5-3
4. Loading the machine	5-5
5. Fixing the machine	5-7
5. Loading and unloading by crane	5-8

MAINTENANCE

1. Instruction	6-1
2. Tightening torque	6-6
3. Fuel, coolant and lubricants	6-9
4. Maintenance check list	6-11
5. Maintenance chart	6-16
6. Service instruction	6-18
7. Electrical system	6-42
8. Air conditioner and heater	6-45

TROUBLESHOOTING GUIDE

1. Engine	7-1
2. Electrical system	7-2
3. Others	7-3

INDEX	9-1
-------------	-----