

A

Accel dial switch	3-26
After engine start	4-5
Air breather element	6-34
Air cleaner filter	6-26
Air conditioner & heater	3-32
Air conditioner filter	6-45
Attachment lowering	4-23

B

Battery	6-42
Before starting engine	4-2
Boom lowering	4-23
Bucket clearance adjustment	6-40
Bucket replacement	6-38
Bucket selection guide	2-18
Bucket tooth replacement	6-39

C

Cab air filter	6-45
Cab device	3-1
Changing machine control pattern	4-26
Cigar lighter	3-36
Cluster	3-2
Coolant	6-20
Cooling fan	6-24
Crankcase breather filter	6-29

D

DMB	3-24
Drain filter	6-34

E

Emergency engine speed connector	3-56
Engine ECM	4-9
Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-43
Engine stop	4-6
ESL	3-17

F

Fan belt	6-24
FMT	3-24
Fuel filter	6-28

Fuel leakage	6-31
Fuel system bleeding	6-28
Fuel tank	6-27
Fuse & relay box	3-55

G

Gauge	3-3
-------------	-----

H

Handsfree	3-37
Hydraulic breaker	8-1
Hydraulic oil changing	6-32
Hydraulic oil filling	6-32
Hydraulic oil level	6-31

L

LCD	3-2
Levers & pedals	3-30
Lifting capacities	2-9
Lubricant specification	2-26

M

Maintenance check list	6-11
Major component	2-1
MCU (Machine Control Unit)	3-55
Mode selection system	4-7
Monitor panel	3-2
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-23
Operating pattern	4-26

P

Pedals	3-31
Periodical replacement parts	6-5
Pilot filter	6-34
Pin & bushing lubrication	6-41
Prefilter	6-27
Pilot lamps	3-7

Q

Quick clamp	8-6
-------------------	-----

R

Radiator flushing	6-20
Radio & USB player	3-41
RCV lever lubricate	6-37
Recommended oils	2-26, 6-10
Regeneration system	4-29
Relieving pressure	6-3
Remote controller	3-39
Return filter	6-33
RCV lever operating pattern	4-26

S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
Seat	3-54
Seat belt	3-54
Service meter	3-56
Service socket	3-38, 3-56
Smart key tag	3-25
Specification for major component	2-22
Specification	2-2
Start switch	3-27
Storage	4-24
Suction strainer	6-33
Swing bearing grease	6-35
Swing gear & pinion grease	6-36
Swing reduction gear oil	6-35
Switch panel	3-25
Switches	3-10, 3-25

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-15
Track adjustment	6-37
Track shoe selection	2-21
Transportation	5-1
Travel reduction gear oil	6-36
Traveling machine	4-13
Troubleshooting guide	7-1

U

Undercarriage	2-20
USB socket	3-37

W

Warming up operation	4-5
----------------------------	-----

Warning lamps	3-4
Weight	2-7
Windshield	3-57
Working device operation	4-12
Working method	4-16
Working range	2-5