

MACHINE DATA PLATE

Diagram of a general machine data plate with the following fields and labels:

- 1: EQUIPMENT
- 2: MODEL
- 3: SERIAL-NUMBER
- 4: OPERATING WEIGHT
- 5: ENGINE POWER(PS/KW/rpm)

DO NOT DEFACE OR REMOVE THIS PLATE

Diagram of a machine data plate for EU use, including a CE mark. Fields and labels are the same as the general plate, plus:

- 6: MFG. YEAR

DO NOT DEFACE OR REMOVE THIS PLATE

FOR EU ONLY

Diagram of a machine data plate for FOPS/FOG use. Fields and labels are:

- 2: MACHINE
- 3: FOPS/FOG S/NO.
- STANDARDS: MEETS SAE : J1040 MAY 94 / J231 JAN 81, MEETS ISO : 3471 1994 (E) / 3449 1992 (E)

DO NOT DEFACE OR REMOVE THIS PLATE

FOR FOPS/FOG

Diagram of a machine data plate for ROPS use. Fields and labels are:

- 2: MACHINE
- 3: ROPS/TOPS/FOG S/NO.
- 7: MAX. CERTIFIED WEIGHT
- STANDARDS: MEETS ISO 12117-2:2008

ANY MODIFICATION OR ALTERATION ON THIS STRUCTURES WITHOUT AUTHORIZATION AVOID THE CERTIFICATION.

ROPS

2609A0FW01

- | | | |
|----------------------------|----------------|----------------------|
| 1 Equipment | 2 Model name | 3 Serial number |
| 4 Operating weight | 5 Engine power | 6 Manufacturing year |
| 7 Maximum certified weight | | |

※ The machine serial number assigned to this particular machine and should be used when requesting information or ordering service parts for this machine from your authorized HYUNDAI dealer. The machine serial number is also stamped on the frame.