

A		Fuel tank 6-27
Accel dial switch 3-26		Fuse & relay box 3-55
After engine start 4-5		G
Air breather element 6-34		Gauge 3-3
Air cleaner filter 6-26		H
Air conditioner & heater 3-32		Handsfree 3-37
Air conditioner filter 6-45		HEST 3-7
Attachment lowering 4-23		Hydraulic breaker 8-1
B		Hydraulic oil changing 6-32
Battery 6-42		Hydraulic oil filling 6-32
Before starting engine 4-2		Hydraulic oil level 6-31
Boom lowering 4-23		L
Bucket clearance adjustment 6-40		LCD 3-2
Bucket replacement 6-38		Levers & pedals 3-30
Bucket selection guide 2-12		Lifting capacities 2-5
Bucket tooth replacement 6-39		Lubricant specification 2-19
C		M
Cab air filter 6-45		Maintenance check list 6-11
Cab device 3-1		Major component 2-1
Changing machine control pattern 4-26		MCU (Machine Control Unit) 3-55
Cigar lighter 3-36		Mode selection system 4-7
Cluster 3-2		Monitor panel 3-2
Coolant 6-20		Mounting and dismounting 1-12
Cooling fan 6-24		N
Crankcase breather filter 6-29		New machine operation 4-1
D		O
DMB 3-24		Oil cooler 6-23
DPF (diesel particulate filter) 3-24		Operating pattern 4-26
Drain filter 6-34		P
E		Pedals 3-31
Emergency engine speed connector 3-56		Periodical replacement parts 6-5
Engine oil filter 6-18		Pilot filter 6-34
Engine oil level 6-18		Pin & bushing lubrication 6-41
Engine starting & stop 4-3		Prefilter 6-27
Engine starting by booster 6-43		Pilot lamps 3-7
Engine stop 4-6		Q
F		Quick clamp 8-6
Fan belt 6-24		R
FMT 3-24		Radiator flushing 6-20
Fuel filter 6-28		
Fuel leakage 6-31		
Fuel system bleeding 6-28		

Radio & USB player	3-41	Windshield	3-57
RCV lever lubricate	6-37	Working device operation	4-12
Recommended oils	2-15, 6-10	Working method	4-16
Regeneration system	4-29	Working range	2-3
Relieving pressure	6-3		
Remote controller	3-39		
Return filter	6-33		
RCV lever operating pattern	4-26		

S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
Seat	3-54
Seat belt	3-54
Service meter	3-56
Service socket	3-38, 3-56
Smart key tag	3-25
Specification for major component	2-9
Specification	2-2
Start switch	3-25
Storage	4-24
Suction strainer	6-33
Swing bearing grease	6-35
Swing gear & pinion grease	6-36
Swing reduction gear oil	6-35
Switch panel	3-25
Switches	3-10, 3-25

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-15
Track adjustment	6-37
Track shoe selection	2-14
Transportation	5-1
Travel reduction gear oil	6-36
Traveling machine	4-13
Troubleshooting guide	7-1

U

Undercarriage	2-9
USB socket	3-37

W

Warming up operation	4-5
Warning lamps	3-4
Weight	2-4