

CONTENTS

| | | | |
|--|------|--|------|
| Foreword | 0-1 | 7. Efficient working method | 4-16 |
| Before servicing this machine | 0-2 | 8. Operation in the special work sites | 4-20 |
| EC regulation approved | 0-3 | 9. Normal operation of excavator | 4-22 |
| Table to enter S/No and distribution | 0-4 | 10. Attachment lowering | 4-23 |
| Safety labels | 0-5 | 11. Storage | 4-24 |
| Machine data plate | 0-18 | 12. RCV lever operating pattern | 4-26 |
| Guide (direction, S/No, symbol) | 0-19 | 13. Switching hydraulic attachment circuit | 4-28 |

SAFETY HINTS

| | |
|---------------------------------------|------|
| 1. Before operating the machine | 1-1 |
| 2. During operating the machine | 1-16 |
| 3. During maintenance | 1-23 |
| 4. Parking | 1-26 |

SPECIFICATIONS

| | |
|---|------|
| 1. Major components | 2-1 |
| 2. Specifications | 2-2 |
| 3. Working range | 2-3 |
| 4. Weight | 2-4 |
| 5. Lifting capacities | 2-5 |
| 6. Bucket selection guide | 2-6 |
| 7. Undercarriage | 2-8 |
| 8. Specification for major components | 2-10 |
| 9. Recommended oils | 2-13 |

CONTROL DEVICES

| | |
|-------------------------------------|------|
| 1. Cab devices | 3-1 |
| 2. Cluster | 3-2 |
| 3. Switches | 3-25 |
| 4. Levers and pedals | 3-30 |
| 5. Air conditioner and heater | 3-32 |
| 6. Others | 3-36 |

OPERATION

| | |
|---|------|
| 1. Suggestion for new machine | 4-1 |
| 2. Check before starting the engine | 4-2 |
| 3. Starting and stop the engine | 4-3 |
| 4. Mode selection system | 4-7 |
| 5. Operation of the working device | 4-12 |
| 6. Traveling of the machine | 4-13 |

TRANSPORTATION

| | |
|---|-----|
| 1. Preparation for transportation | 5-1 |
| 2. Dimension and weight | 5-2 |
| 3. Loading the machine | 5-6 |
| 4. Fixing the machine | 5-8 |
| 5. Loading and unloading by crane | 5-9 |

MAINTENANCE

| | |
|---------------------------------------|------|
| 1. Instruction | 6-1 |
| 2. Tightening torque | 6-6 |
| 3. Fuel, coolant and lubricants | 6-9 |
| 4. Maintenance check list | 6-11 |
| 5. Maintenance chart | 6-16 |
| 6. Service instruction | 6-18 |
| 7. Electrical system | 6-42 |
| 8. Air conditioner and heater | 6-45 |

TROUBLESHOOTING GUIDE

| | |
|----------------------------|-----|
| 1. Engine | 7-1 |
| 2. Electrical system | 7-2 |
| 3. Others | 7-3 |

HYDRAULIC BREAKER AND QUICK CLAMP

| | |
|---|-----|
| 1. Selecting hydraulic breaker | 8-1 |
| 2. Circuit configuration | 8-2 |
| 3. Maintenance | 8-3 |
| 4. Precaution while operating the breaker | 8-4 |
| 5. Quick clamp | 8-6 |

| | |
|-------------|-----|
| INDEX | 9-1 |
|-------------|-----|