 



### 3. SWITCHES

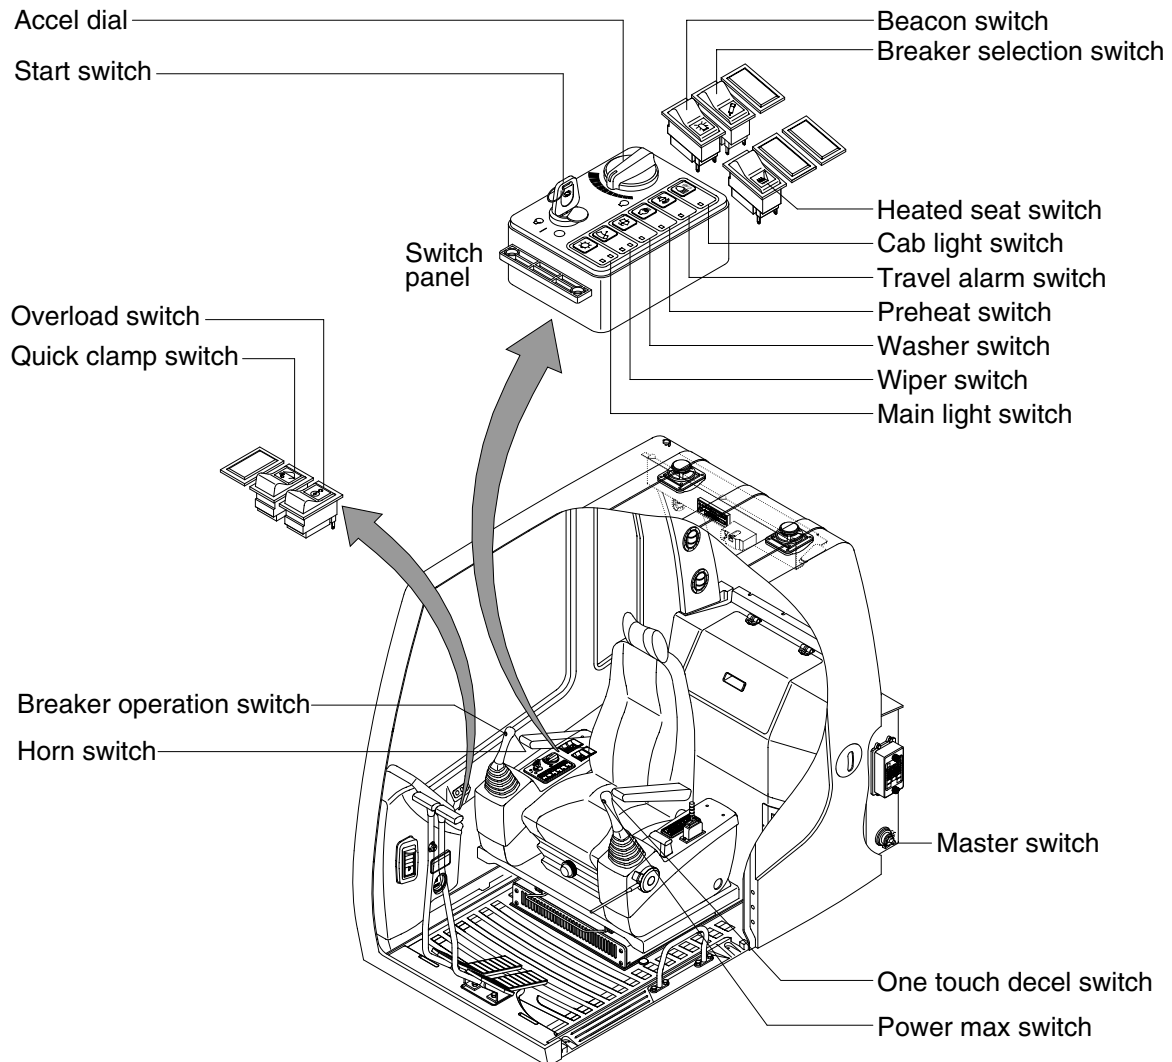

1407A3CD04

#### 1) STARTING SWITCH

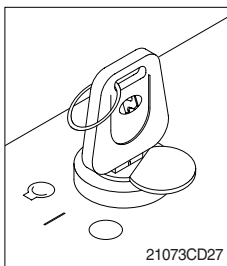


(1) There are three positions, OFF, ON and START.

- ○ (OFF) : None of electrical circuits activate.
- | (ON) : All the systems of machine operate.
- ⦿ (START) : Use when starting the engine.

Release key immediately after starting.


- ※ If you turn ON the starting switch in cold weather, the fuel warmer is automatically operated to heat the fuel by sensing the coolant temperature. Start the engine in 1~2 minutes after turning ON the starting switch. More time may take according to ambient temperature.
- ※ Key must be in the ON position with engine running to maintain electrical and hydraulic function and prevent serious machine damage.

## 2) MASTER SWITCH

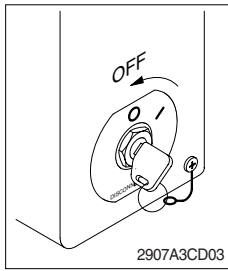


- (1) This switch is used to shut off the entire electrical system.
  - (2) I : The battery remains connected to the electrical system.  
O : The battery is disconnected to the electrical system.
- ※ **Never turn the master switch to O(OFF) with the engine running. Engine and electrical system damage could result.**

## 3) ACCEL DIAL SWITCH

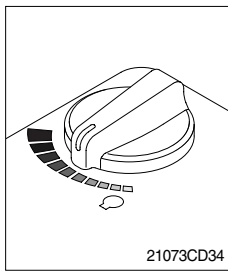


- (1) There are 10 dial setting.
- (2) Setting 1 is low idle and setting 10 is high idle.
  - By rotating the accel dial to right : Engine speed increases
  - By rotating the accel dial to left : Engine speed decreases

## 4) MAIN LIGHT SWITCH

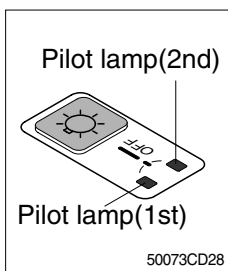 


- (1) This switch used to operate the head light and work light.
  - Press the switch once to head light comes ON.
  - Press the switch once more to work light comes ON.
  - Press the switch again, return to a first step position.
  - Press the switch more than one second to turn off lights.

## 5) WIPER SWITCH

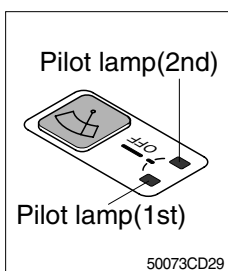


- (1) This switch used to operate wiper.
  - Press the switch once to intermittently operate wiper.
  - Press the switch once more to operate wiper low speed.
  - Press the switch again return to a first step position.
  - Press the switch more than one second to turn off wiper.

## 6) WASHER SWITCH

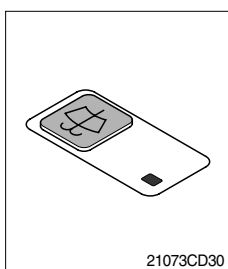


- (1) The washer liquid is sprayed and the wiper is operated only while pressing this switch.
- (2) The indicator lamp is turned ON when operating this switch.

## 7) PREHEAT SWITCH

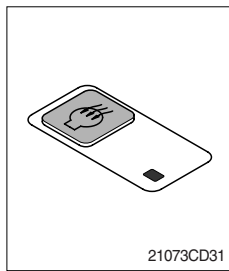


- (1) This switch is used for starting the engine in cold weather. If pressed, preheater is energized to get easier engine starting.  
※ **Never hold the push button switch for more than 30 seconds, as this can damage the electric valve solenoid.**
- (2) The indicator lamp is turned ON when operating this switch.

## 8) TRAVEL ALARM SWITCH

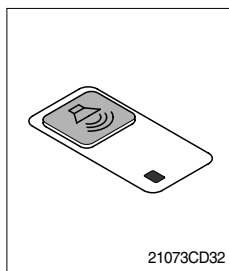


- (1) This switch is to activate travel alarm function surrounding when the machine travels to forward and backward.
- (2) On pressing this switch, the alarm operates only when the machine is traveling.

## 9) CAB LIGHT SWITCH(Optional)

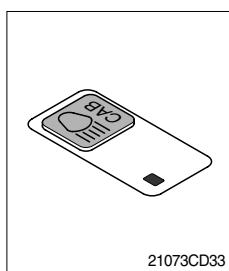


- (1) This switch turns ON the cab light on the cab.

## 10) OVERLOAD SWITCH(Optional)

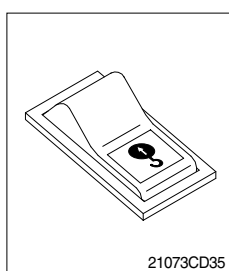


- (1) When this switch turned ON, buzzer makes sound and overload warning lamp comes ON in case that the machine is overload.
- (2) When it turned OFF, buzzer stops and warning lamp goes out.

## 11) QUICK CLAMP SWITCH(Optional)

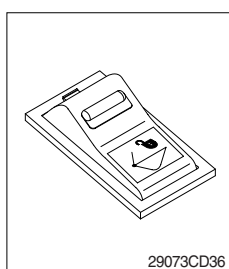

- (1) This switch is used to engage or disengage the moving hook on quick clamp.  
※ **Refer to the page 8-6 for details.**


## 12) BREAKER SELECTION SWITCH(Optional)

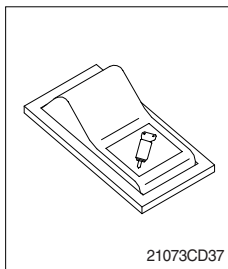 

(1) This switch is used to select breaker.

※ The breaker operates only when this switch is selected.


## 13) BEACON SWITCH(Optional)

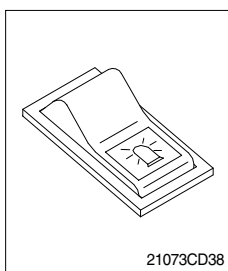 

(1) This switch turns ON the rotary light on the cab.


(2) The below indicator lamp is turned ON when operating this switch.

## 14) HEATED SEAT SWITCH(Optional)

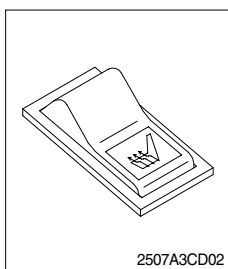 


(1) This switch is used to heat the seat.

## 15) HORN SWITCH

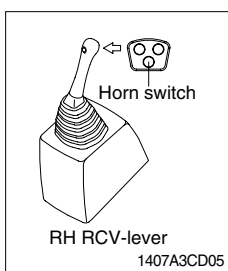 


(1) This switch is at the top of right side control lever.  
On pressing, the horn sounds.

## 16) BREAKER OPERATION SWITCH

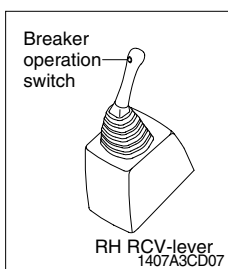 


(1) On pressing this switch, the breaker operates only when the breaker selection switch on the switch panel is selected.

## 17) ONE TOUCH DECEL SWITCH

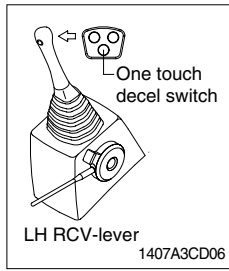 

- (1) This switch is used to actuate the deceleration function quickly.
- (2) The engine speed is increased to previous setting value by pressing the switch again.
- (3) One touch decel function is available only when the auto decel switch on the cluster "OFF".

## 18) POWER MAX SWITCH

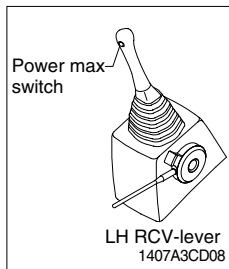 

- (1) This switch activate power max function.  
When this switch is kept pressed, hydraulic power of work equipment will increased approx 110 percent during 8 seconds.
  - (2) After 8 seconds, function is cancelled automatically even switch is keep pressed.
- ※ **Do not use for craning purposes.**