

# INDEX

## A

Accel dial switch .....	3-24
After engine start .....	4-4
Air breather element .....	6-32
Air cleaner filter .....	6-25
Air conditioner & heater .....	3-29
Air conditioner filter .....	6-43
Alternate exit .....	0-12
Attachment lowering .....	4-22

## B

Battery .....	6-40
Before starting engine .....	4-2
Boom lowering .....	4-22
Bucket clearance adjustment .....	6-38
Bucket replacement .....	6-36
Bucket selection guide .....	2-18
Bucket tooth replacement .....	6-37

## C

Cab air filter .....	6-43
Cab device .....	3-1
Changing machine control pattern .....	4-25
Cigar lighter .....	3-36
Cluster .....	3-2
Coolant .....	6-20
Cooling fan .....	6-24

## D

Drain filter .....	6-32
--------------------	------

## E

Emergency engine starting connector .....	3-48
Engine oil filter .....	6-18
Engine oil level .....	6-18
Engine starting & stop .....	4-3
Engine starting by booster .....	6-41
Engine stop .....	4-5

## F

Fan belt .....	6-24
Fuel filter .....	6-27
Fuel leakage .....	6-29
Fuel system bleeding .....	6-27
Fuel tank .....	6-25
Fuse & relay box .....	3-47

## G

Gauge .....	3-3
-------------	-----

## H

Handsfree .....	3-37
Hydraulic breaker .....	8-1
Hydraulic oil changing .....	6-30
Hydraulic oil filling .....	6-30
Hydraulic oil level .....	6-30

## L

LCD .....	3-5
LCD display map .....	3-6
LCD main operation display .....	3-3
Levers & pedals .....	3-27
Lifting capacities .....	2-9

## M

Maintenance check list .....	6-11
Major component .....	2-1
MCU (Machine Control Unit) .....	3-47
Mode selection system .....	4-6
Monitor panel .....	3-2
Mounting and dismounting .....	1-12

## N

New machine operation .....	4-1
-----------------------------	-----

## O

Oil cooler .....	6-23
Operating pattern .....	4-25

## P

Pedals .....	3-27
Periodical replacement parts .....	6-5
Pilot filter .....	6-32
Pin & bushing lubrication .....	6-39
Prefilter .....	6-26
Pilot lamps .....	3-7

## Q

Quick clamp .....	8-6
-------------------	-----

## R

Radiator flushing .....	6-20
Radio & CD/MP3 player .....	3-41

RCV lever lubricate .....	6-35
Recommended oils .....	2-25, 6-10
Relieving pressure .....	6-3
Remote controller .....	3-39
Return filter .....	6-31
RCV lever operating pattern .....	4-25

## S

Safety hints .....	1-1
Safety labels .....	0-5
Safety parts .....	6-5
Seat .....	3-46
Seat belt .....	3-46
Service meter .....	3-48
Service socket .....	3-38, 3-48
Specification for major component .....	2-22
Specification .....	2-2
Start switch .....	3-23
Storage .....	4-24
Suction strainer .....	6-31
Swing bearing grease .....	6-33
Swing gear & pinion grease .....	6-34
Swing reduction gear oil .....	6-33
Switch panel .....	3-23
Switches .....	3-9, 3-23

## T

Torques-major component .....	6-8
Torques-fastener .....	6-6
Towing machine .....	4-14
Track adjustment .....	6-35
Track shoe selection .....	2-21
Transportation .....	5-1
Travel reduction gear oil .....	6-34
Traveling machine .....	4-12
Troubleshooting guide .....	7-1

## U

Undercarriage .....	2-20
USB socket .....	3-37

## W

Warming up operation .....	4-5
Warning lamps .....	3-4
Weight .....	2-7
Windshield .....	3-49
Working device operation .....	4-11
Working method .....	4-15
Working range .....	2-5