

CONTENTS

Foreword	0-1
Before servicing this machine	0-2
EC regulation approved	0-3
Table to enter S/No and distribution	0-4
Safety labels	0-5
Machine data plate	0-14
Guide (direction, S/No, Symbol)	0-15

SAFETY HINTS

1. Before operating the machine	1-1
2. During operating the machine	1-16
3. During maintenance	1-23
4. Parking	1-26

SPECIFICATIONS

1. Major components	2-1
2. Specifications	2-2
3. Working range	2-3
4. Weight	2-4
5. Lifting capacities	2-5
6. Bucket selection guide	2-7
7. Undercarriage	2-8
8. Specification for major components	2-9
9. Recommended oils	2-12

CONTROL DEVICES

1. Cab devices	3-1
2. Cluster	3-3
3. Switches	3-7
4. Levers and pedals	3-11
5. Heater	3-14
6. Others	3-15

OPERATION

1. Suggestion for new machine	4-1
2. Check before starting the engine	4-2
3. Starting and stop the engine	4-3
4. Operation of the working device	4-7
5. Traveling of the machine	4-8

6. Efficient working method	4-11
7. Operation in the special work sites	4-15
8. Normal operation of excavator	4-17
9. Attachment lowering	4-18
10. Storage	4-19
11. RCV lever operating pattern	4-21

TRANSPORTATION

1. Preparation for transportation	5-1
2. Dimension and weight	5-2
3. Loading the machine	5-4
4. Fixing the machine	5-6
5. Loading and unloading by crane	5-7

MAINTENANCE

1. Instruction	6-1
2. Tightening torque	6-5
3. Fuel, coolant and lubricants	6-8
4. Maintenance check list	6-10
5. Maintenance chart	6-15
6. Service instruction	6-17
7. Electrical system	6-34
8. Heater	6-37

TROUBLESHOOTING GUIDE

1. Engine	7-1
2. Electrical system	7-2
3. Others	7-3

HYDRAULIC BREAKER

1. Selecting hydraulic breaker	8-1
2. Circuit configuration	8-2
3. Maintenance	8-3
4. Precaution when operating the breaker	8-4
5. Quick clamp	8-6

INDEX	9-1
-------------	-----