

MACHINE DATA PLATE

Diagram of a general machine data plate. It features the HYUNDAI logo and company address at the top. Below are three rows of fields: 'EQUIPMENT' (labeled 1), 'MODEL' (labeled 2), and 'SERIAL-NUMBER' (labeled 3). To the right are two rows: 'OPERATING WEIGHT' (labeled 4) and 'ENGINE POWER(PS/KW/rpm)' (labeled 5). A warning 'DO NOT DEFACE OR REMOVE THIS PLATE' is at the bottom.

Diagram of a machine data plate for EU. It includes the CE mark and HYUNDAI logo. Fields include 'EQUIPMENT' (1), 'MODEL' (2), 'SERIAL-NUMBER' (3), 'OPERATING WEIGHT' (4), 'ENGINE POWER(PS/KW/rpm)' (5), and 'MFG. YEAR' (6). A warning 'DO NOT DEFACE OR REMOVE THIS PLATE' is at the bottom.

FOR EU ONLY

Diagram of a machine data plate for FOPS/FOG. It includes the HYUNDAI logo. Fields include 'MACHINE' (labeled 2), 'FOPS/FOG S/NO.' (labeled 3), and 'STANDARDS' which lists 'MEETS SAE : J1040 MAY 94 / J231 JAN 81' and 'MEETS ISO : 3471 1994 (E) / 3449 1992 (E)'. A warning 'DO NOT DEFACE OR REMOVE THIS PLATE' is at the bottom.

FOR FOPS/FOG

Diagram of a machine data plate for ROPS. It includes the HYUNDAI logo. Fields include 'MACHINE' (labeled 2), 'ROPS/TOPS/FOG S/NO.' (labeled 3), 'MAX. CERTIFIED WEIGHT' (labeled 7), and 'STANDARDS' which lists 'MEETS ISO 12117-2:2008'. A warning 'ANY MODIFICATION OR ALTERATION ON THIS STRUCTURES WITHOUT AUTHORIZATION AVOID THE CERTIFICATION.' is at the bottom.

ROPS

2609A0FW01

- | | | |
|----------------------------|----------------|----------------------|
| 1 Equipment | 2 Model name | 3 Serial number |
| 4 Operating weight | 5 Engine power | 6 Manufacturing year |
| 7 Maximum certified weight | | |

※ The machine serial number assigned to this particular machine and should be used when requesting information or ordering service parts for this machine from your authorized HYUNDAI dealer. The machine serial number is also stamped on the frame.