


SAFETY LABELS

1. LOCATION

Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

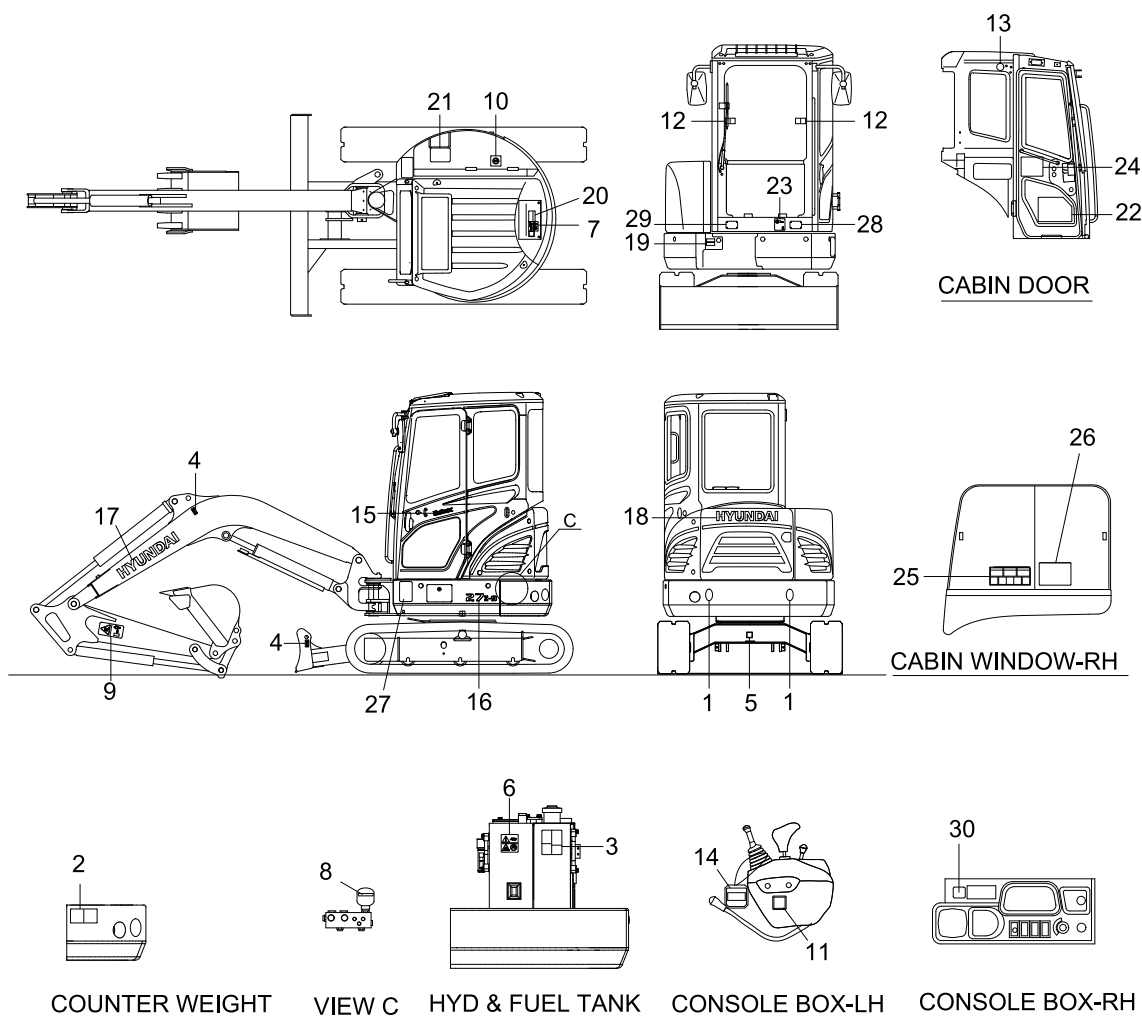

R27Z90FW01A

- | | | |
|-------------------------|-------------------------------|---------------------------|
| 1 Reflecting | 11 Console tilting | 21 Fueling |
| 2 Keep clear-rear | 12 Safety - front window | 22 Service instruction |
| 3 Caution - engine room | 13 Alternate exit | 23 Noise level |
| 4 Lifting point | 14 Under repair | 24 Lifting chart |
| 5 Tie | 15 Robex logo - LH | 25 Cabin RH window |
| 6 Hydraulic oil lub | 16 Model name - RH | 26 Control ideogram |
| 7 Battery accident | 17 Hyundai logo - boom | 27 Control pattern |
| 8 Accumulator | 18 Hyundai logo - engine hood | 28 Name plate |
| 9 Keep clear - boom/arm | 19 Grease | 29 ROPS plate |
| 10 No step | 20 ECU connector | 30 Control ideogram-dozer |

2. DESCRIPTION


There are several specific warning labels on this machine please become familiarized with all warning labels.

Replace any safety label that is damaged, or missing.

1) FUELING (item 21)

This warning label is positioned on the right side of fuel filler neck.

- ⚠ **Stop the engine when refueling. All lights or flames shall be kept at a safe distance while refueling.**

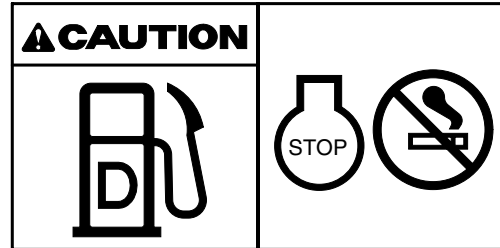

R35Z70FW04

2) BATTERY ACCIDENT (item 7)

This warning label is positioned on the battery cover.

- ⚠ **Electrolyte containing sulfuric acid cause severe burns. Avoid being in contact with skin, eyes or clothes. In the event of accident flush with sufficient water, call a physician immediately.**

- ※ **Maintain the electrolyte at the recommended level. Add distilled water to the battery only when starting up, never when shutting down.**

With electrolyte at proper level, less space may cause the gases to be accumulated in the battery.



36070FW05

- ⚠ **Extinguish all smoking materials and open flames before checking the battery.**
- ⚠ **Do not use matches, lighters or torches as a light source near the battery for the probable presence of explosive gas.**
- ⚠ **Do not allow unauthorized personnel to change the battery or to use booster cables.**
- ⚠ **For safety from electric shock, do not battery terminals with a wet hand.**

3) KEEP CLEAR-BOOM/ARM (item 9)

This warning label is positioned on both side of the boom.

- ⚠ **Serious injury or death can result from falling of the attachment.**
- ⚠ **To prevent serious injury or death, keep clear the underneath of attachment.**




R5570FW31

4) KEEP CLEAR-REAR (item 2)

This warning label is positioned on the rear of engine hood.

- ⚠ **To prevent serious personal injury or death keep clear of machine swing radius.**
- ⚠ **Do not deface or remove this label from the machine.**

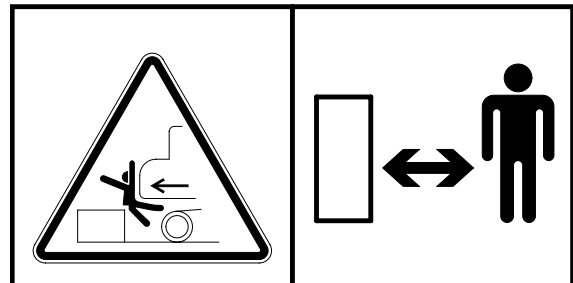


R35Z70FW09

5) SAFETY FRONT WINDOW (item 12)

This warning label is positioned on the both side window of the cab.

- ⚠ **Be careful that the front window may be promptly closed.**

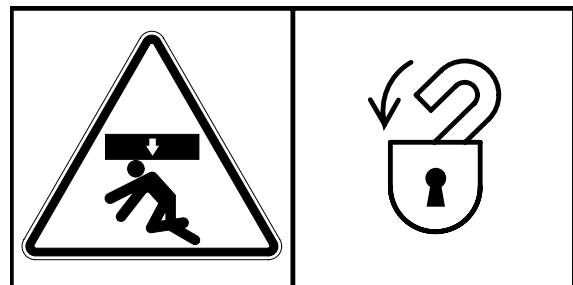


21070FW24

6) ALTERNATE EXIT (item 13)

This warning label is positioned on the right side window of the cab.

- ⚠ **The right side window serves us an alternate exit.**
- ⚠ **At case of emergency, use the hammer for braking the right side window of the cab.**

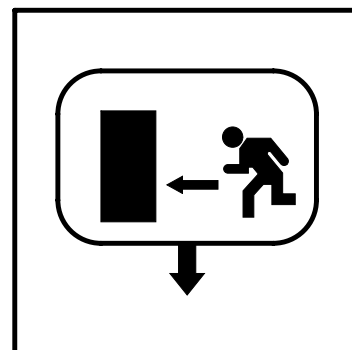


21070FW25

7) CAUTION-ENGINE ROOM (item 3)

This warning label is positioned on the side of radiator.

- ⚠ Do not open the engine hood during the engine's running.
- ⚠ Escaping fluid under pressure can penetrate the skin causing serious injury.
- ※ Study the service manual before service job.
- ⚠ Never open the filler cap while engine running or at high coolant oil temperature.
- ⚠ Study the operator's manual before starting and operating machine.
- ⚠ Do not touch exhaust pipe or it may cause severe burn.

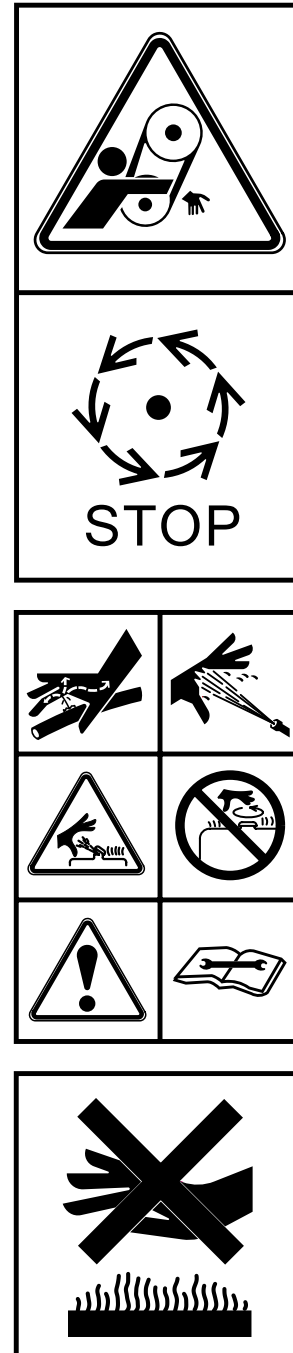


R5570FW14

8) CONTROL IDEOGRAM (item 26)

This warning label is positioned in right window of the cab.

- ⚠ Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.
- ⚠ Failure to do so could result in injury or death.
- ※ See page 4-7 for details.

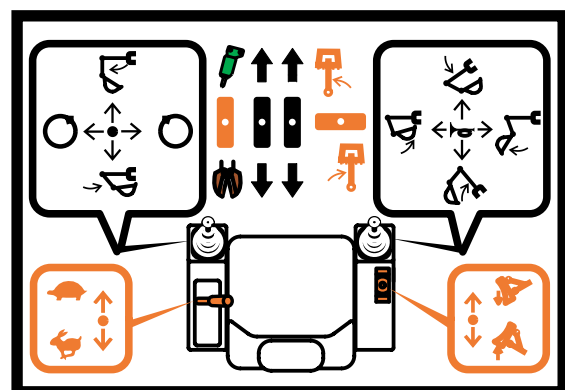

R27Z90FW19

9) CABIN RH WINDOW (item 25)

This warning label is positioned on the right side window of the cab.

- ⚠ **Serious injury or death can result from contact with electric lines.**

An electric shock being received by merely coming into the vicinity of an electric lines, the minimum distance should be kept considering the supply voltage as page 1-7.

- ⚠ **Serious injury or death can result from dropping bucket.**
- ⚠ **Operating the machine with quick clamp switch unlocked or without safety pin of moving hook can cause the bucket to drop off.**
- ⚠ **Be careful to operate machine equipped with quick clamp or extensions.**
- ⚠ **Bucket may hit cab, canopy, boom and boom cylinders when it reached vicinity of them.**


- ⚠ **Study the operator's manual before transporting the machine, if provided and tie down arm and track to the carrier with lashing wire.**

See page 5-6 for details.


- ⚠ **Make sure wire rope is proper size and keep correct hoisting method.**

See page 5-7 for details.

- ⚠ **Place the bucket on the ground whenever servicing the hydraulic system. Check oil level on the level gauge. Refill the recommended hydraulic oil up to specified level if necessary.**

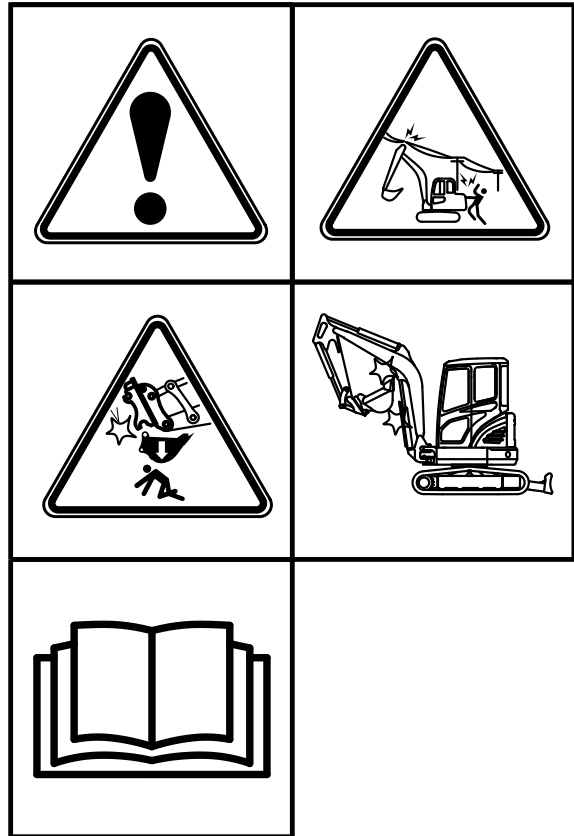

R35Z70FW11

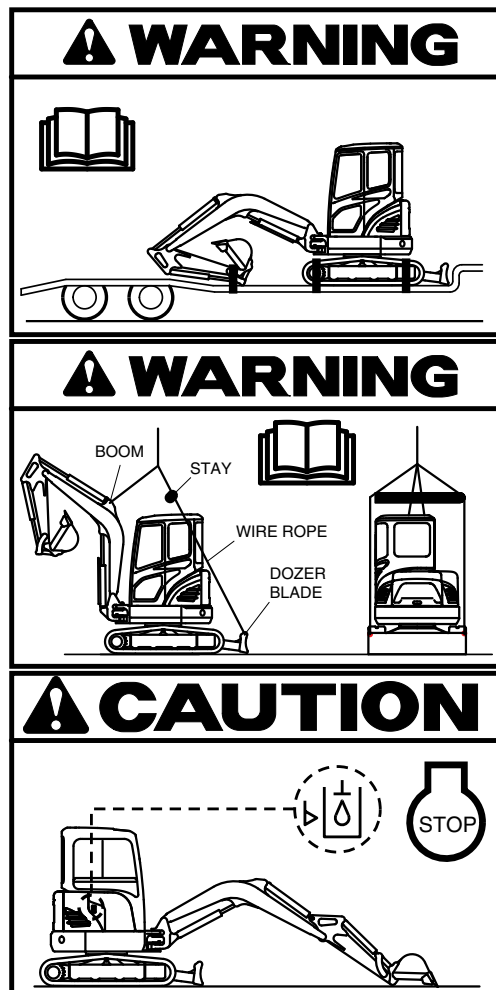


R35Z70FW10

10) CONSOLE TILTING (item 11)

This warning label is positioned on the LH console box.

- ※ **Before you get off the machine be sure to tilt the LH console box.**

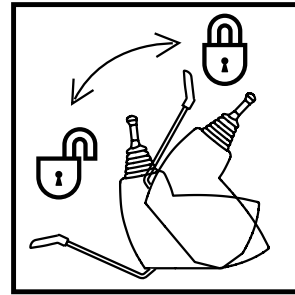


R5570FW17

11) HYDRAULIC OIL LUBRICATION (item 6)

This warning label is positioned on the right side of air breather.

- ※ **Do not mix with different brand oils.**
- ▲ **Never open the filler cap while engine running or at high hydraulic oil temperature.**
- ▲ **Loosen the cap slowly and release internal pressure completely.**

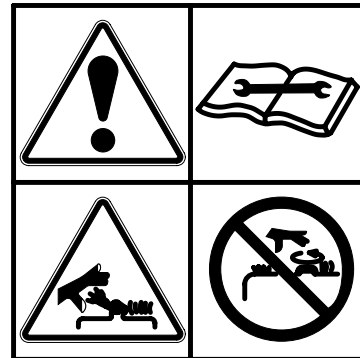


21070FW08

12) NO STEP-ENGINE HOOD (item 10)

This warning label is positioned on the engine hood.

- ▲ **Do not step on the engine hood.**

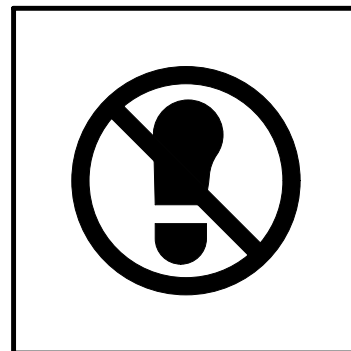


21070FW16

13) TIE (item 5)

This warning label is positioned on the lower frame.

- ※ **Never tow the machine using tie hole, because this may break.**
- ※ **See page 4-10 for detail.**

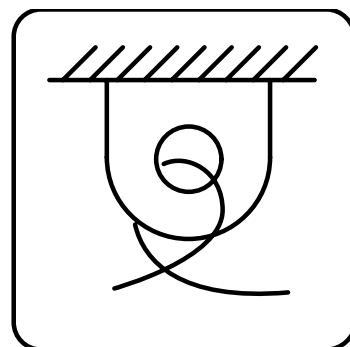


4507A0FW02

14) CONTROL IDEOGRAM-DOZER (item 30)

This warning label is positioned on the RH console box.

- ※ See page 4-7 for details.
- ※ Guidelines for using the general dozer blade.
 - Be careful not to apply an excessive load when using a blade.
 - Avoid impacts and loads on the bottom due to machine modification or excessive working conditions.
 - Check the BLADE UP status before traveling the machine.
 - Avoid any collision with the upper working device and the blade.
 - Do not move machine in the blade jack up state.
 - When using blade jack up, use it in an environment where the ground is not rough and the machine and ground are same level.

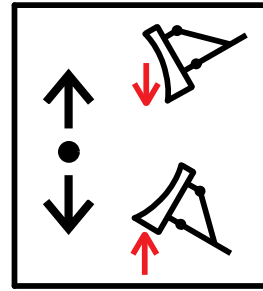

R25Z9A0FW06