

CONTENTS

Foreword	0-1	3. Starting and stop the engine	4-3	
Before servicing this machine	0-2	4. Mode selection system	4-6	
EC regulation approved	0-3	5. Operation of the working device	4-11	
Table to enter S/No and distribution	0-4	6. Operation of cab	4-12	
Safety labels	0-5	7. Traveling of the machine	4-14	
Machine data plate	0-18	8. Efficient working method	4-17	
Guide (direction, S/No, symbol)	0-19	9. Operation in the special work sites	4-19	
SAFETY HINTS		10. Normal operation of excavator	4-21	
1. Before operating the machine	1-1	11. Attachment lowering	4-22	
2. During operating the machine	1-16	12. Storage	4-23	
3. During maintenance	1-24	TRANSPORTATION		
4. Parking	1-27	1. Preparation for transportation	5-1	
SPECIFICATIONS		2. Dimension and weight	5-2	
1. Major components	2-1	3. Loading the machine	5-4	
2. Specifications	2-3	4. Fixing the machine	5-6	
3. Working range	2-5	5. Loading and unloading by crane	5-7	
4. Weight	2-6	6. Tilt the cab riser	5-8	
5. Lifting capacities	2-7	MAINTENANCE		
6. Grapple guide	2-9	1. Instruction	6-1	
7. Undercarriage	2-10	2. Tightening torque	6-6	
8. Specification for major components	2-11	3. Fuel, coolant and lubricants	6-9	
9. Recommended oils	2-14	4. Maintenance check list	6-11	
CONTROL DEVICES		5. Maintenance chart	6-16	
1. Cab devices	3-1	6. Service instruction	6-19	
2. Cluster	3-2	7. Electrical system	6-40	
3. Switches	3-23	8. Air conditioner and heater	6-43	
4. Levers and pedals	3-28	TROUBLESHOOTING GUIDE		
5. Air conditioner and heater	3-30	1. Engine	7-1	
6. Others	3-34	2. Electrical system	7-2	
OPERATION		3. Others	7-3	
1. Suggestion for new machine	4-1	INDEX		8-1
2. Check before starting the engine	4-2			