



3. SWITCHES

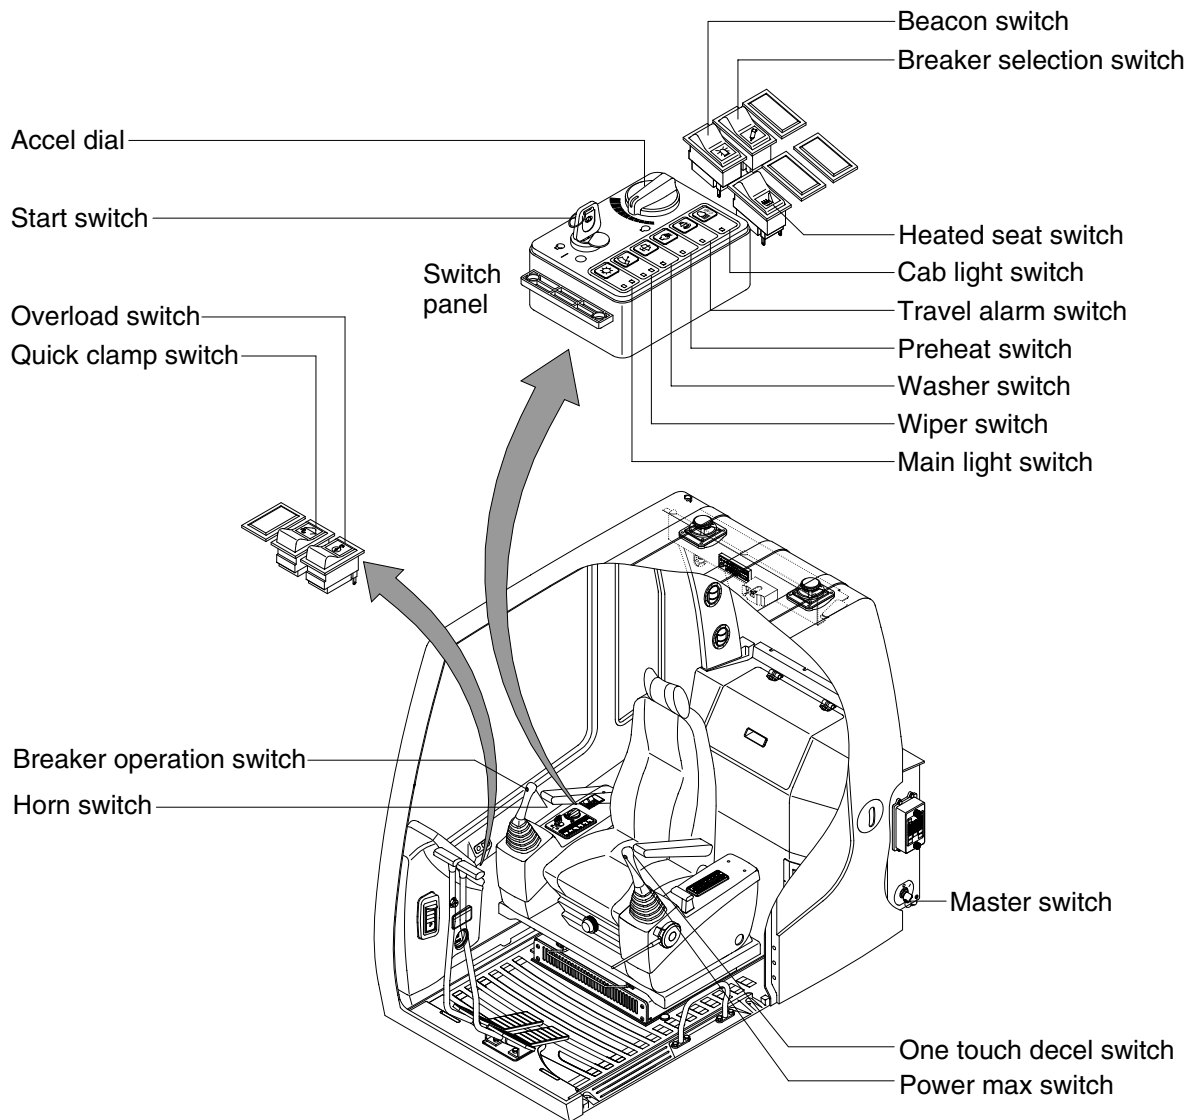

210N7A3CD02

1) STARTING SWITCH

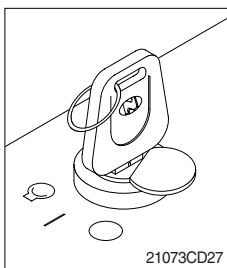


(1) There are three positions, OFF, ON and START.

- ○ (OFF) : None of electrical circuits activate.
- | (ON) : All the systems of machine operate.
- ○ (START) : Use when starting the engine. Release key immediately after starting.


※ Key must be in the ON position with engine running to maintain electrical and hydraulic function and prevent serious machine damage.

2) MASTER SWITCH

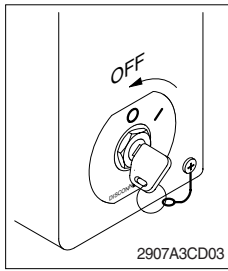


- (1) This switch is used to shut off the entire electrical system.
 - (2) I : The battery remains connected to the electrical system.
O : The battery is disconnected to the electrical system.
- ※ **Never turn the master switch to O(OFF) with the engine running. It could result in engine and electrical system damage.**

3) ACCEL DIAL SWITCH

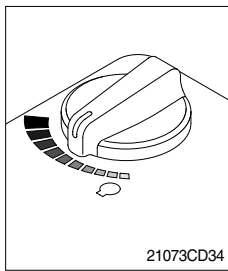


- (1) There are 10 dial setting.
- (2) Setting 1 is low idle and setting 10 is high idle.
 - By rotating the accel dial to right : Engine speed increases
 - By rotating the accel dial to left : Engine speed decreases

4) MAIN LIGHT SWITCH

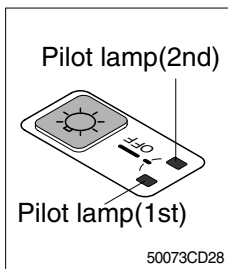


- (1) This switch used to operate the head light and work light.
 - Press the switch once to head light comes ON.
 - Press the switch once more to work light comes ON.
 - Press the switch again, return to a first step position.
 - Press the switch more than one second to turn off lights.

5) WIPER SWITCH

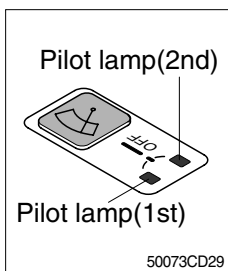


- (1) This switch used to operate wiper.
 - Press the switch once to intermittently operate wiper.
 - Press the switch once more to operate wiper low speed.
 - Press the switch again return to a first step position.
 - Press the switch more than one second to turn off wiper.

6) WASHER SWITCH

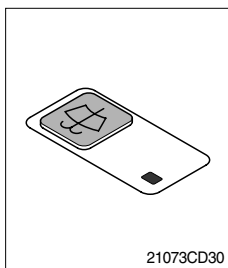


- (1) The washer liquid is sprayed and the wiper is operated only while pressing this switch.
- (2) The indicator lamp is turned ON when operating this switch.

7) PREHEAT SWITCH

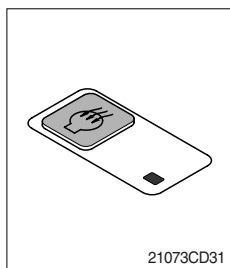


- (1) This switch is used for starting the engine in cold weather. If pressed, grid heater is activated to get easier engine starting.
 - ※ **Never hold the push button switch for more than 30 seconds, as this can damage the grid heater.**
- (2) The indicator lamp is turned ON when operating this switch.

8) TRAVEL ALARM SWITCH

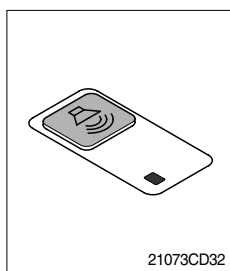


- (1) This switch is to activate travel alarm function when the machine travels forward and backward.
- (2) On pressing this switch, the alarm buzzer sounds only when the machine is traveling.

9) CAB LIGHT SWITCH(Optional)

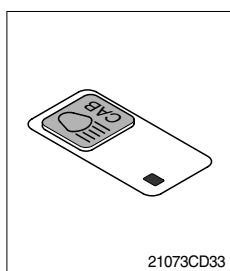


- (1) This switch is used to turn ON the cab light on the cab.

10) OVERLOAD SWITCH(Optional)

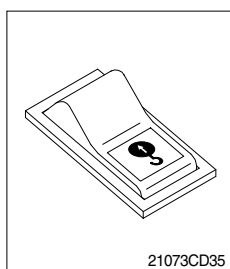


- (1) When this switch is turned ON, buzzer makes sound and overload warning lamp comes ON in case that the machine is overloaded.
- (2) When turned OFF, buzzer stops and warning lamp goes out.

11) BREAKER SELECTION SWITCH(Optional)

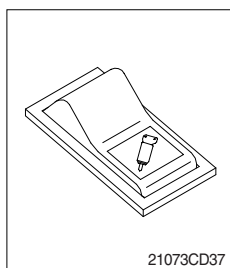


- (1) This switch is used to select breaker.
 - ※ **The breaker operates only when this switch is selected.**

12) BEACON SWITCH(Optional)

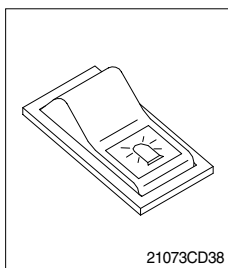

- (1) This switch turns ON the rotary light on the cab.
- (2) The below indicator lamp is turned ON when operating this switch.


13) QUICK CLAMP SWITCH(Optional)

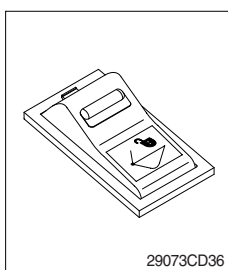

- (1) This switch is used to engage or disengage the moving hook on quick clamp.


※ Refer to the page 8-6 for details.

14) HEATED SEAT SWITCH(Optional)

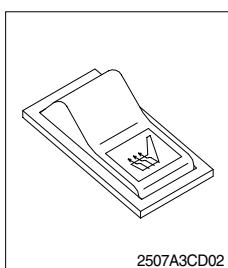


- (1) This switch is used to heat the seat.

15) HORN SWITCH

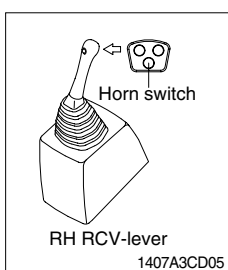


- (1) This switch is at the top of right side control lever.
On pressing, the horn sounds.

16) BREAKER OPERATION SWITCH

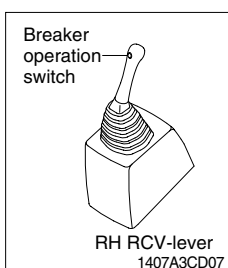


- (1) On pressing this switch, the breaker operates only when the breaker selection switch on the switch panel is selected.

17) ONE TOUCH DECEL SWITCH

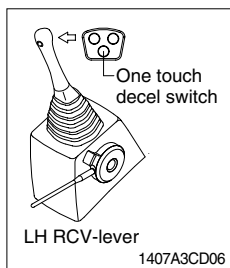

- (1) This switch is used to actuate the deceleration function quickly.
- (2) The engine speed is increased to previous setting value by pressing the switch again.

18) POWER MAX SWITCH

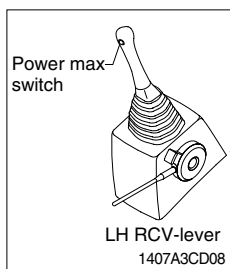

- (1) This switch activate power max function.
When this switch is kept pressed, hydraulic power of work equipment will be increased upto 110 percent during 8 seconds.
 - (2) After 8 seconds, function is cancelled automatically even switch is keep pressed.
- ※ **Do not use for craning purposes.**