


5. MAINTENANCE CHART

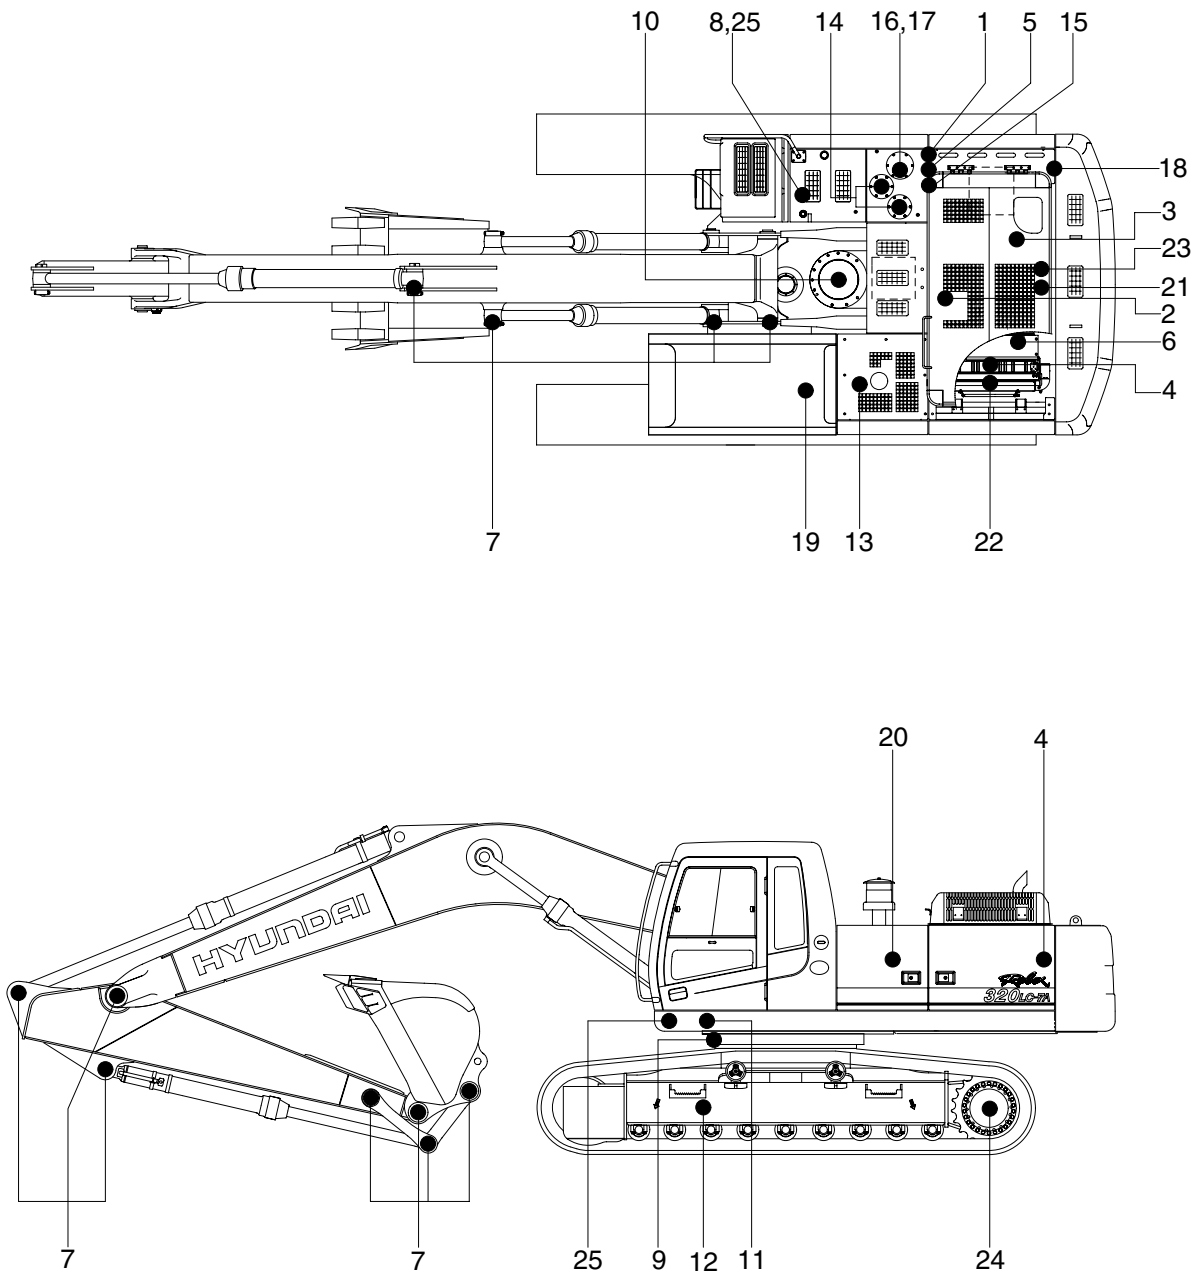

3207A6MI08A

Caution

1. Service intervals are based on the hour meter reading.
2. The number of each item shows the lubrication point on the machine.
3. Stop engine while filling oil, and use no open flames.
4. For other details, refer to the service manual.

Service interval	No.	Description	Service action	Oil symbol	Capacity l (U.S.gal)	Service points No.
10 Hours or daily	1	Hydraulic oil level	Check, Add	HO	210(55.5)	1
	2	Engine oil level	Check, Add	EO	35(9.2)	1
	4	Radiator coolant	Check, Add	C	45(12)	1
	5	Prefilter(Water, element)	Check, Clean	-	-	1
	6	Fan belt tension & damage	Check, Clean	-	-	1
	25	Fuel tank	Check, Refill	DF	480(126.8)	1
50 Hours or weekly	7	Attachment pins	Check, Add	PGL	-	17
	8	Fuel tank(Water, element)	Check, Clean	-	-	1
	9	Swing bearing	Check, Add	PGL	-	3
	10	Swing reduction gear case	Check, Add	GO	7.0(1.8)	3
	12	Track tension	Check, Adjust	PGL	-	2
250 Hours	13	Battery(Electrolyte)	Check, Add	-	-	2
	14	Hydraulic oil return filter(-#0151)	Replace	-	-	2
	15	Drain filter cartridge(-#0151)	Replace	-	-	1
	16	Air breather element	Replace	-	-	1
	18	Line filter element(-#0151)	Replace	-	-	1
	19	Aircon & heater recirculation filter	Check, Clean	-	-	1
500 Hours	2	Engine oil level	Change	EO	35(9.2)	1
	3	Engine oil filter	Replace	-	-	1
	5	Prefilter(Water, element)	Replace	-	-	1
	20	Air cleaner element(Primary)	Clean	-	-	1
	21	Fuel filter element	Replace	-	-	1
	22	Radiator, oil cooler, charger air cooler	Clean	-	-	1
	23	Corrosion resistor	Replace	-	-	1
1000 Hours	10	Swing reduction gear case	Change	GO	7.0(1.8)	1
	11	Swing gear and pinion	Change	PGL	10.1kg(22.3lb)	1
	14	Hydraulic oil return filter(#0152-)	Replace	-	-	2
	15	Drain filter cartridge(#0152-)	Replace	-	-	1
	18	Line filter element(#0152-)	Replace	-	-	1
	24	Travel reduction gear case	Change	GO	11.0(2.9)	2
	25	Swing reduction gear grease(#0369-)	Change	PGL	1.8(0.5)	1
2000 Hours	1	Hydraulic oil level	Change	HO	210(55.5)	1
	4	Radiator coolant	Change	C	45(12)	1
	17	Hydraulic oil suction strainer	Check, Clean	-	-	1
As required	19	Aircon & heater recirculation filter	Clean, Replace	-	-	1
	19	Aircon & heater fresh filter	Clean, Replace	-	-	1
	20	Air cleaner element(Safety)	Replace	-	-	1
	20	Air cleaner element(Primary)	Replace	-	-	1

※ Oil symbol

Please refer to the recommended lubricants for specification.

DF : Diesel fuel

GO : Gear oil

HO : Hydraulic oil

C : Coolant

PGL : Grease

EO : Engine oil