

A

Accel dial switch	3-10
After engine start	4-4
Air breather element	6-34
Air cleaner filter	6-29
Air conditioner & heater	3-15
Air conditioner filter	6-45
Alternate exit	0-12
Attachment lowering	4-24

B

Battery	6-42
Before starting engine	4-2
Boom lowering	4-24
Bucket clearance adjustment	6-40
Bucket replacement	6-38
Bucket selection guide	2-22
Bucket tooth replacement	6-39

C

Cab air filter	6-46
Cab device	3-1
Cassette & radio	3-23
Changing machine control pattern	4-27
Charge air cooler	6-25
Cigar lighter	3-18
Coolant	6-21
Cooling fan	6-26
Corrosion resistor	6-20
CPU controller	3-20

D

Drain filter	6-34
--------------------	------

E

Emergency engine speed control	3-21
Emergency engine starting connector	3-21
Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-43
Engine stop	4-5

F

Fan belt	6-26
Fan belt tensioner	6-27

Fuel filter	6-30
Fuel leakage	6-31
Fuel system bleeding	6-30
Fuel tank	6-29
Fuse box	3-20

H

Hydraulic breaker	8-1
Hydraulic oil changing	6-32
Hydraulic oil filling	6-32
Hydraulic oil level	6-32

L

Levers & pedals	3-13
Lifting capacities	2-9
Lubricant specification	2-30

M

Maintenance check list	6-16
Major component	2-1
Mode selection system	4-6
Monitor display	4-11
Monitor panel	3-2
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-25
Operating pattern	4-27

P

Pedals	3-14
Periodical replacement parts	6-5
Pilot line filter	6-34
Pin & bushing adjustment	6-42
Prefilter	6-31
Prolix resistor	3-21

R

Radiator flushing	6-22
Radio	3-23
RCV lever lubricate	6-37
Recommended oils	2-30, 6-10
Relieving pressure	6-3
Return filter	6-33

S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
Seat	3-19
Seat belt	3-19
Service meter	3-21
Speciation for major component	2-26
Specification	2-2
Start switch	3-9
Storage	4-25
Suction strainer	6-33
Swing bearing grease	6-35
Swing gear & pinion grease	6-36
Swing reduction gear oil	6-35
Switch panel	3-7
Switches	3-9

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-16
Track adjustment	6-37
Track shoe selection	2-25
Transportation	5-1
Travel reduction gear oil	6-36
Travelling machine	4-14
Troubleshooting guide	7-1

U

Undercarriage	2-24
---------------------	------

W

Warming up operation	4-5
Warning lamps	3-3
Water filter	6-20
Weight	2-7
Working device operation	4-13
Working method	4-17
Working range	2-5