

CONTENTS

Foreword	0-1	6. Traveling of the machine	4-22
Before servicing this machine	0-2	7. Efficient working method	4-25
Table to enter S/No and distribution	0-3	8. Operation in the special work sites	4-29
Safety labels	0-4	9. Normal operation of excavator	4-31
Machine data plate	0-16	10. Attachment lowering	4-32
Guide (direction, S/No, symbol)	0-17	11. Storage	4-33
SAFETY HINTS		12. RCV lever operating pattern	4-35
1. Before operating the machine	1-1	13. Switching hydraulic attachment circuit	4-36
2. During operating the machine	1-17	TRANSPORTATION	
3. During maintenance	1-24	1. Preparation for transportation	5-1
4. Parking	1-27	2. Dimension and weight	5-2
SPECIFICATIONS		3. Loading the machine	5-5
1. Major components	2-1	4. Fixing the machine	5-7
2. Specifications	2-2	5. Loading and unloading by crane	5-8
3. Working range	2-5	MAINTENANCE	
4. Weight	2-7	1. Instruction	6-1
5. Lifting capacities	2-9	2. Tightening torque	6-6
6. Bucket selection guide	2-18	3. Fuel, coolant and lubricants	6-9
7. Undercarriage	2-20	4. Maintenance check list	6-11
8. Specification for major components	2-22	5. Maintenance chart	6-16
9. Recommended oils	2-26	6. Service instruction	6-20
CONTROL DEVICES		7. Electrical system	6-41
1. Cab devices	3-1	8. Air conditioner and heater	6-44
2. Cluster (TYPE 1)	3-2	TROUBLESHOOTING GUIDE	
2. Cluster (TYPE 2)	3-23	1. Engine	7-1
3. Switches	3-34	2. Electrical system	7-2
4. Levers and pedals	3-39	3. Others	7-3
5. Air conditioner and heater	3-41	HYDRAULIC BREAKER AND QUICK CLAMP	
6. Others	3-48	1. Selecting hydraulic breaker	8-1
OPERATION		2. Circuit configuration	8-2
1. Suggestion for new machine	4-1	3. Maintenance	8-3
2. Check before starting the engine	4-2	4. Precaution while operating the breaker	8-4
3. Starting and stop the engine	4-3	5. Quick clamp	8-6
4. Mode selection system	4-11	INDEX	
5. Operation of the working device	4-21	9-1	