 
 


## 4. LEVERS AND PEDALS

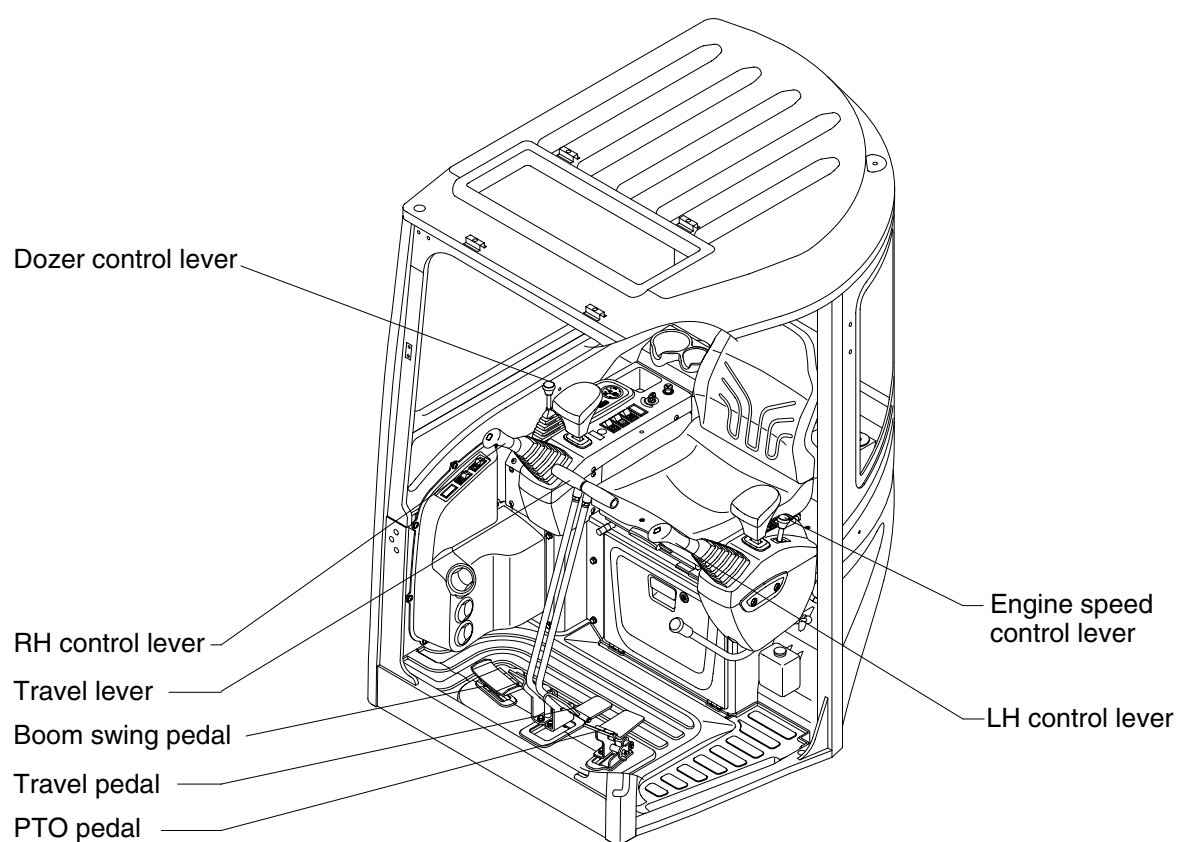

 
R35Z73CD12

### 1) LH CONTROL LEVER

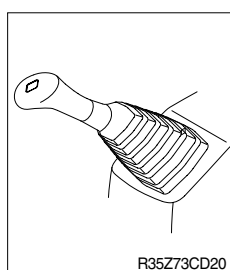


- (1) This joystick is used to control the swing and the arm.
- (2) Refer to **operation of working device** in chapter 4 for details.

### 2) RH CONTROL LEVER

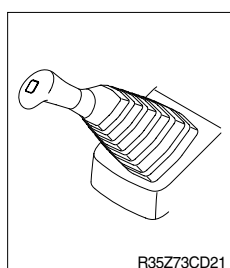

- (1) This joystick is used to control the boom and the bucket.
- (2) Refer to **operation of working device** in chapter 4 for details.

### 3) SAFETY LEVER

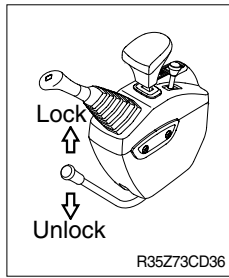 


(1) All control levers are disabled from operation by locating the lever to lock position as shown.

※ **Be sure to raise the lever to LOCK position when leaving from operator's seat.**

(2) By pushing lever to UNLOCK position, machine is operational.

※ **Do not use the safety lever for handle when getting on or off the machine.**


### 4) TRAVEL LEVER

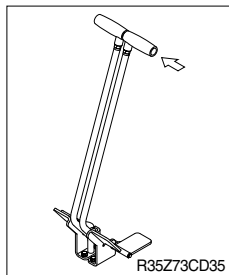 

(1) This lever is mounted on travel pedal and used for traveling by hand. The operation principle is same as the travel pedal.

(2) Refer to **traveling of the machine** in chapter 4 for details.

### 5) TRAVEL PEDAL

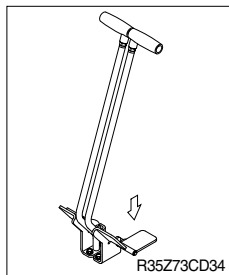 


(1) This pedal is used to move the machine forward or backward.

(2) If left side pedal is pressed, left track will move.

If right side pedal is pressed, right track will move.

(3) Refer to **traveling of machine** in chapter 4 for details.

### 6) ENGINE SPEED CONTROL LEVER

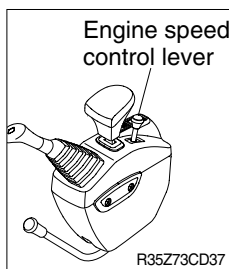 


(1) This lever is used to increase or decrease the rotation speed of engine.

(2) Move the lever backward to increase engine RPM. Move the lever forward to decrease engine RPM.


(3) When stopping the engine, move the engine speed control lever forward completely and turn key OFF.

## 7) DOZER CONTROL LEVER

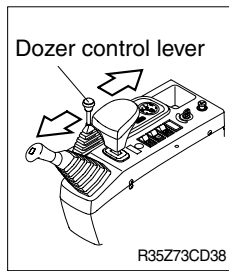 

- (1) This lever is used to operate the dozer blade.
- (2) If the lever is pushed forward, the dozer blade will be going down.  
If the lever is pulled back, the dozer blade will be going up.

## 8) BOOM SWING PEDAL

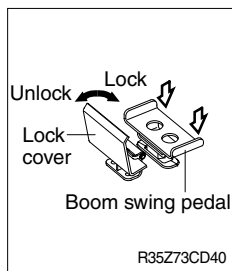 

- (1) This pedal is used to swing the boom to the right and left direction.
- (2) Move the lock cover to unlock position by foot.
- (3) The pedal is pressed to left side, boom will swing to the left direction.  
The pedal is pressed to right side, boom will swing to the right direction.