


## 11. RCV LEVER OPERATING PATTERN

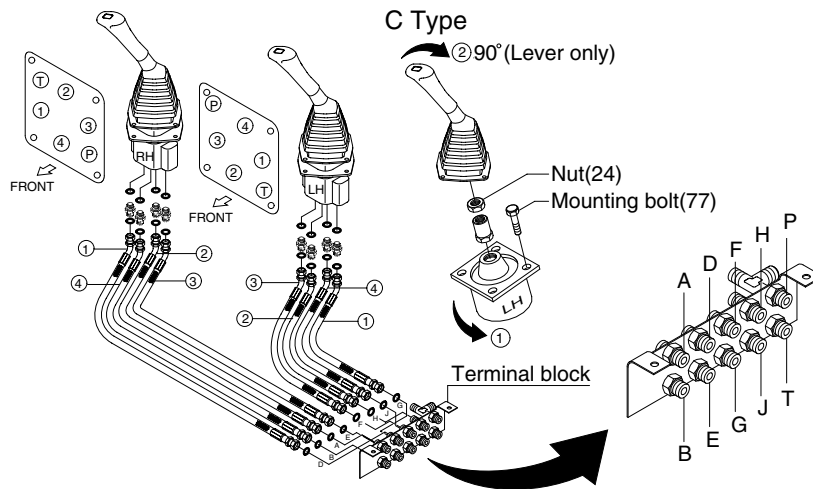

※ Whenever a change is made to the machine control pattern also exchange the pattern label in the cab to match the new pattern.

R35Z74OP43

Pattern	Operation		Control function		Hose connection(Port)		
	Left	Right			RCV lever	Change of MCV port	
						From	To
ISO Type  Hyundai			Left	Arm out	②	H	-
				Arm in	④	J	-
				Swing right	③	F	-
				Swing left	①	G	-
			Right	Boom lower	④	B	-
				Boom raise	②	A	-
				Bucket out	①	D	-
				Bucket in	③	E	-
A Type			Left	Boom lower	②	H	B
				Boom raise	④	J	A
				Swing right	③	F	-
				Swing left	①	G	-
			Right	Arm out	④	B	H
				Arm in	②	A	J
				Bucket out	①	D	-
				Bucket in	③	E	-
B Type			Left	Boom lower	②	H	B
				Boom raise	④	J	A
				Bucket out	③	F	D
				Bucket in	①	G	E
			Right	Arm out	④	B	H
				Arm in	②	A	J
				Swing right	①	D	F
				Swing left	③	E	G
C Type			Left	① Loosen the RCV lever mounting bolt(77) and rotates lever assy 90° counterclockwise; then install. ② To put lever in correct position, disassemble nut(24) and rotates only lever 90° clockwise.			
			Right	Same as ISO type			