



6. OTHERS

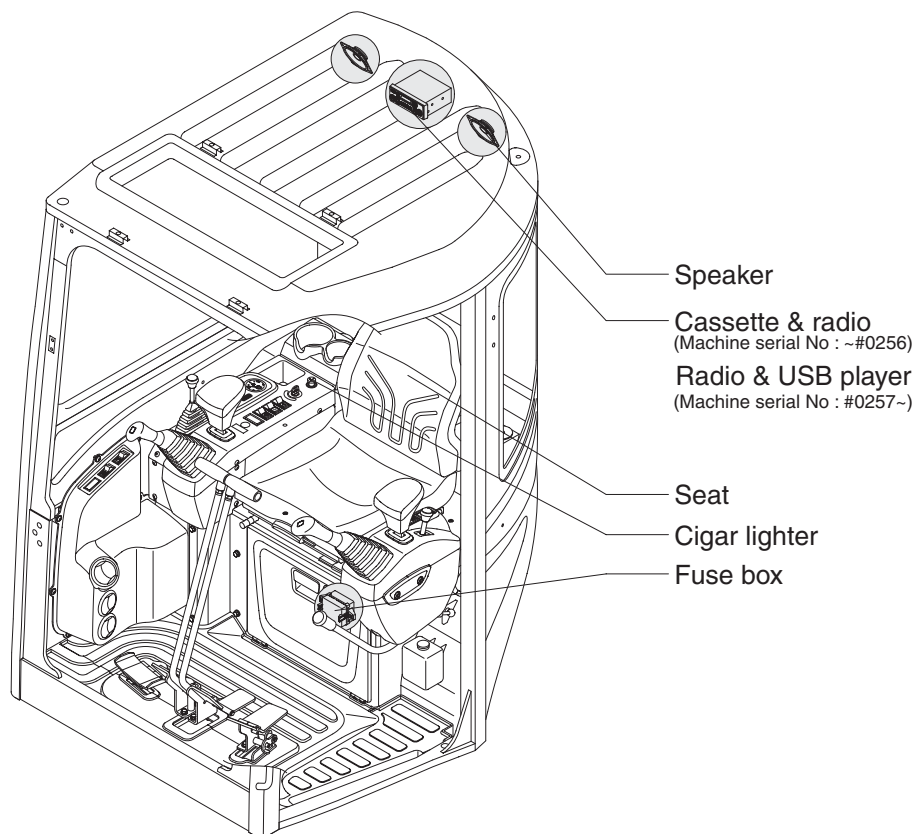

R35Z73CD14


1) CIGAR LIGHTER

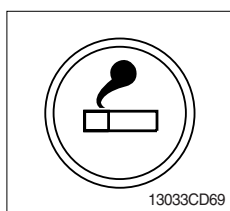

- (1) This can be used when the engine starting switch is ON.
 - (2) The lighter can be used when it springs out in a short while after being pressed down.
- ※ **Service socket**
Use cigar lighter socket when you need emergency power.
Do not use the lighter exceeding 12V, 120W.

2) SEAT

The seat is adjustable to fit the contours of the operator's body. It will reduce operator fatigue due to long work hours and enhance work efficiency.

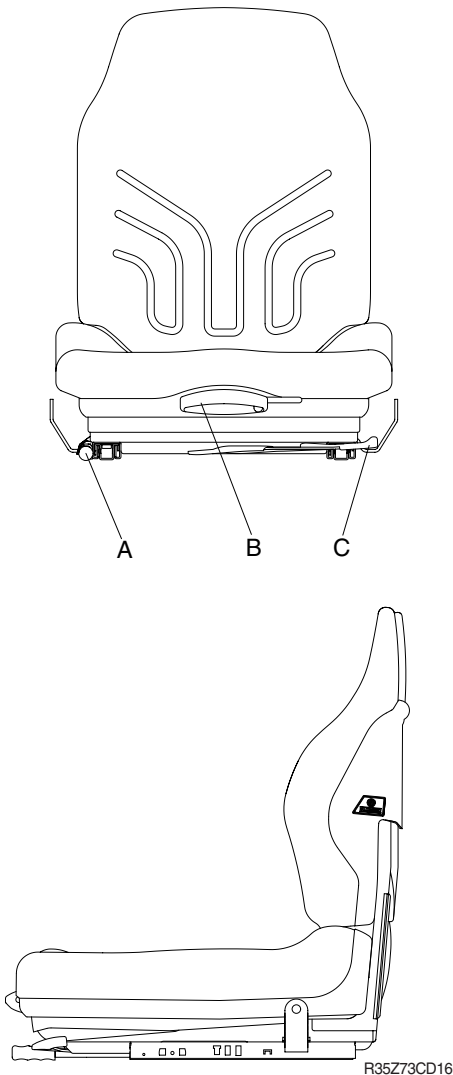

(1) Fore/aft adjustment(A)

The seat can be positioned over a range 152mm, giving you plenty of room to maneuver in every height and work situation.

(2) Seatback angle adjustment(B)

The seatback adjusts over a range of -5° to $+25^{\circ}$ with 18 locking positions, to give your back full support for every job and make sure you feel best.

(3) Weight adjustment(C)

Just sit down, press the smooth-action lever, click, and you're primed for action, with optimum suspension for all operator weights between 45 and 136kg(99 and 300lb). Design comfort with driver appeal-it only takes one simple action to adjust the suspension to the ideal sitting position that's best for you and your back.


(4) Seatbelt system

The seatbelt provides freedom of movement, yet ensure that you're safety restrained in your seat, even if your vehicle should crash or tip over.

▲ Always check the condition of the seat belt and mounting hardware before operating the machine.

▲ Replace the seat belt at least once every three years, regardless of appearance.

3) UPPER WINDSHIELD

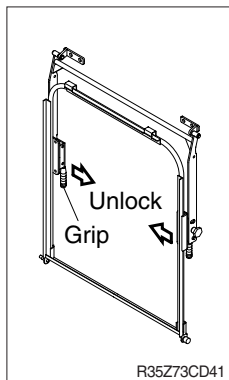

(1) Perform the following procedure in order to open the upper windshield.

① Hold both grips that are located both side of the windshield frame.

② Move grips to inside in order to release the lock latches.

Hold both grips and push the windshield upward.

③ Hold both grips and back into the storage position.

Release both grips carefully until lock latches are into the locking position.

④ Hold both grips and back into the storage position.

⑤ Release both grips carefully until lock latches are into the locking position.

(2) Perform the following procedure in order to close the upper windshield.

Reverse step ① through step ⑤ in order to close the upper windshield.

4) FUSE BOX

20A	WIPER MOTOR 와이퍼모터	SPARE, 10A	20A	BEACON 경광등
20A	HORN, CIGAR 호른/시거		20A	CABIN LAMP 캐빈 전등
20A	SAFETY SOL. TRAVEL SOL. 솔레노이드	SPARE, 20A	20A	BOOM LAMP 붐 전등
10A	FUEL FEED PUMP, ALT. 연료공급펌프		30A	AIR-CON HEATER 에어콘/히터
20A	OPTION 선택장치	SPARE, 20A	30A	FUEL CUT-OFF 연료차단
DECAL 21MH-00231	FUSE PULLER	SPARE, 20A	10A	MONITOR RADIO 모니터/오디오
			10A	B+ 상시전원

R35Z73CD60


(1) The fuses protect the electrical parts and wiring from burning out.

(2) The fuse box cover indicates the capacity of each fuse and circuit it protects.

※ **Replace a fuse with another of the same capacity.**

▲ **Before replacing a fuse, be sure to turn OFF the starting switch.**

5) RADIO AND CASSETTE (MACHINE SERIAL NO. : -#0256)

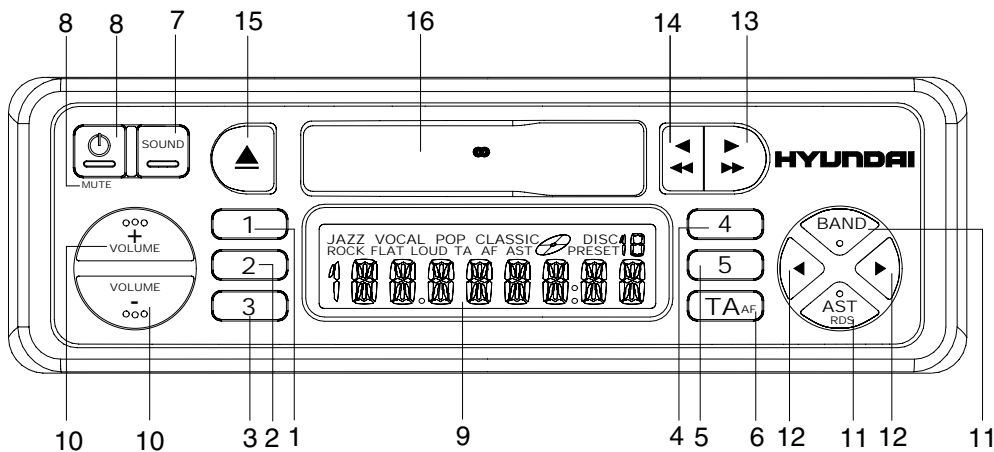


7807A3CD81

■ FRONT PANEL PRESENTATION

- | | |
|--|--|
| 1 1 Preset button 1 | 11 RDS Long press : RDS on/off |
| 2 2 Preset button 2 | BAND Short press : To select band |
| 3 3 Preset button 3 | AST Short press : Autostore |
| 4 4 Preset button 4 | 12 ◀ ▶ Tuner mode |
| 5 5 Preset button 5 | Short press : Auto search up/down |
| 6 TA AF Short press : TA on/off | Long press : Manual search up/down |
| Long press : AF on/off | Cassette mode : No function |
| 7 SOUND Select sound/audio styles | 13 ▶▶ Fast forward |
| 8 ⏻ Short press : power on | 14 ◀◀ Fast rewind |
| Long press : power off | 15 ▲ Eject cassette |
| MUTE Short press : To mute or cancel mute. | 16 Cassette opening |
| 9 Display | |
| 10 Volume knob : Press up/down to adjust the volume ; adjust selected audio mode | |

■ AUDIO

(1) Power and mute button

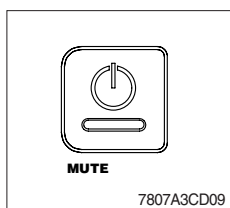

① POWER ON/OFF


Press  to switch on the set. Press  for more than 2 seconds to switch off the set.

② MUTE(Silence)

Short press  key to mute or cancel the mute(silence).

※ The silence period may be interrupted by ALARM announcement or traffic announcement messages(If TA is switched on).


(2) Volume button

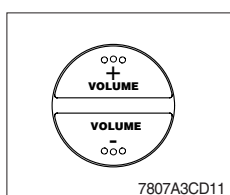

① Press the volume button up/down to adjust the volume.

Please make sure you can still hear the traffic(horns, sirens..).


(3) Sound button

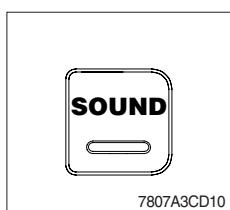

① SOUND


Whether you listen to Jazz, Vocal, Pop, Classic or Rock music, the SOUND button is the perfect setting for your choice.

- Press SOUND then the sound button to select BASS-Treb for your own sound style, or adjust the settings with the volume up/down buttons to select one of the pre define sound styles:

	- BASE -TRE	: Your own settings of bass and treble.
	- FLAT	: Original
	- JAZZ	: Jazz music
	- VOCAL	: Speech
	- POP	: Pop music
	- CLASSIC	: Classical music
	- ROCK	: Rock music

② AUDIO SETTING


- Press SOUND to select desired audio mode.
- Adjust the settings with the volume up/down buttons :

	- Sound style	: BASS-TRE, FLAT, JAZZ, VOCAL, POP, CLASSIC, ROCK
	- BASS	: Low notes
	- TREBLE	: High notes
	- BALANCE	: Left-right
	- FADER	: Rear-front
	- LOUD	: OFF, LOW, MID, HIGH

- Press the volume button to adjust the selected audio mode.
After 5 seconds the display goes back to the last mode of operation.
Adjustment of Bass and Treble settings is only possible when BASS-TRE is selected as the sound style.

■ RADIO

(1) Wave band / Automatic search button

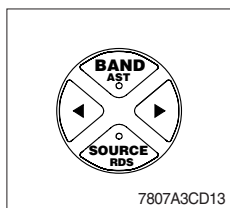

① WAVEBAND

- Press BAND to select the desired band:



② AUTOMATIC SEARCH


Use search tuning to automatically search for a station.

- Press ◀ to tune a station of a lower frequency or ▶ to a higher frequency.
- To search for another station, press the key again.

③ MANUAL TUNING(If you know the frequency of the required station)

- To switch to manual tuning :**
Long press the search button ◀ or ▶ for more than 2 seconds will switch the tuning to manual tuning.
- Then press ◀ to tune to a station of a lower frequency or ▶ to a higher frequency.
- When keys are released, a time-out start to count. After 5 seconds time-out, display 'Auto' for one second and return to automatic search.

(2) Preset button

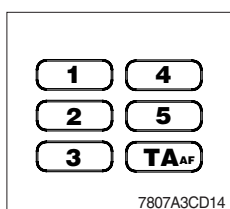

Preset stations

① Manually storing stations in a preset

Five stations per band can be stored and recalled using the preset keys(1 to 5).

Tune in to the desired station.

- Press the desired preset key(1 to 5) for more than 2 seconds to store the current tuned station.

When storing an FM station, the current program station name and the AF mode are stored on the preset(Some stations use alternating program service name).

② Recalling a preset


Press the desired preset key(1 to 5) to recall the stored station.

③ Automatically storing stations(AUTO-STORE)

You can automatically store 5 strongest FM stations on the FM AST band or 5 strongest MW(AM) stations on the MW(AM) AST band. When you use Auto store, the new stations replace any stations previously stored in the FM AST band or the MW(AM) AST band.

- Press AST to activate autostore.
- The set gives a beep and then mutes.
- When it has finished, you hear a beep followed by the station stored on preset 1.
- Sometimes it may not be possible to find 5 stations.

■ RADIO DATA SYSTEM(RDS) ON FM

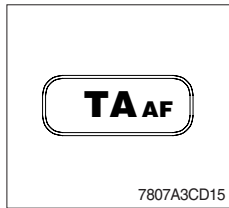

More and more stations broadcasts RDS informations in order to offer you many advantages including:

(1) Program service name(PS)

Allows the radio to display the name of the station instead of its frequency.

(2) Automatic returning(AF)

The set remains tuned to the current station by continually searching the best alternative frequency for best reception.

You can switch AF off.

- Activate/Deactivate AF

This set continuously search for other alternative frequencies for the tuned radio station and automatically selects the best frequency for reception. Long press **TA AF** for more than 2 second to activate/deactivate AF.

(3) Alarm messages(PHY ALARM)

This set automatically receives emergency messages made by the broadcaster.

- During the messages the display shows 'ALARM' and the station-name alternately.

(4) Traffic announcements(TA)

You can activate the TA modes to give priority so as to hear traffic announcements related to these subjects(even if you play a cassettes/CD or mute the set).

- Activate/Deactivate TA

- Short press BAND to select an FM band.
- Press **TA AF** to activate/deactivate TA.

- If you activate TA mode

- You will hear the traffic announcements when broadcast by station(even if you play a cassette/CD or mute the set).
- If the tuned station does not enable the reception of traffic announcements, the display shows 'NO TA'. The radio automatically searches and appropriate station.

- Interrupting traffic announcement mode

If you do not wish to continue listening to a particular traffic announcement


- Short press **TA AF** key to interrupt traffic announcement without switching off the mode
- The set will return to the previous operating mode.

※ You can switch off RDS features if not required.

- Long press RDS key to switch off RDS.
- All RDS related features e.g., TA, etc...will be deactivated when RDS is switch off.

■ CASSETTE PLAYER

(1) Winding/Rewinding button

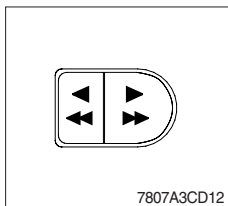

- ※ Only use good quality cassettes.
- ※ To avoid possible tape damage always take out the cassette after use. Protect your cassettes. Put them back in their boxes immediately after use.
- ※ Never expose cassettes to heat or direct sunlight.

① Play back

Slide the cassette, with the open side to the right into the cassette opening. Playback starts.

The direction of playback is shown by indicator ► .

② Stopping playback(▲)

- To stop playback, Press the ▲ button fully home.
- The unit will switch over to radio reception.
- The cassette is partially ejected.

③ Reverse(before the end of the tape)

Press the ◀◀ and ▶▶ buttons at the same time halfway in.

④ Fast rewind / Fast forward(◀◀ or ▶▶)

The direction of fast winding depends on the direction of play indicated on the display.

Display during playback	Action	Key to press
►	Fast forward	▶▶
►	Fast rewind	◀◀
◀	Fast forward	◀◀
◀	Fast rewind	▶▶

During fast forward or rewind the radio resumes. If you continue fast winding until the end of the tape, play back restarts automatically.

⑤ To stop fast winding

To stop fast winding before the end of the tape, press the key which is not pressed(◀◀ or ▶▶). Playback is then resumed.

⑥ End of the tape


At the end of the tape, playback continues in the revers direction.

⑦ Maintenance


After extended use of the cassette player, dust, contamination or grime can accumulate on the playback head.

This results in diminishing high-note reproduction. This can be remedied using a cleaning cassette(one or twice a month) and playing it through like an ordinary cassette.


■ RADIO SETTING

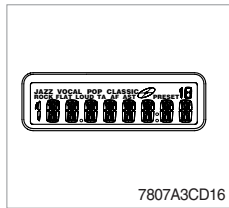


(1) AMERICA

Press  , No. 1 and No. 4 buttons at the same time. Set up completes displaying " AMERICA".

(2) SOUTH AMERICA

Press  , No. 2 and No. 5 buttons at the same time. Set up completes displaying " SOUTH".

(3) ASIA

Press  , No. 1 and No. 5 buttons at the same time. Set up completes displaying " ASIA".

(4) EUROPE

Press power, No. 2 and No. 4 buttons at the same time. Set up completes displaying " EUROPE".

RADIO AND USB / MP3 PLAYER (machine serial No. : #0257 - #0592)




75793CD62

■ FRONT PANEL PRESENTATION

- | | | | | | |
|---|--|--|----|--|---|
| 1 | | Sound function selection button
(audio selection) | 10 | | Preset memory button 6
D+ Directory up |
| 2 | | Power and volume button | 11 | | Aux function |
| 3 | | Mode button
(select RADIO / USB / AUX) | 12 | | Preset scan (PS)
Best station memory (BSM) |
| 4 | | UP / DOWN tuning button | 13 | | Audio mute button |
| 5 | | Preset memory button 1
DISP ID3 v2 display | 14 | | AM / FM button (radio) |
| 6 | | Preset memory button 2
SCN File scan | | | |
| 7 | | Preset memory button 3
RPT Repeat play selector | | | |
| 8 | | Preset memory button 4
RDM Random play selector | | | |
| 9 | | Preset memory button 5
D- Directory down | | | |

■ GENERAL

(1) Power and volume button

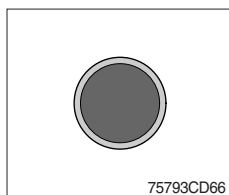

① Power ON/OFF button


Press power button to turn the unit ON or OFF shortly.

When the power is ON, the previous mode (last memory) will appear.

② Volume up / down control

Turn volume up / down button right to increase the volume level. The level will be shown in VOLUME xx on the LCD display. Turn it left to decrease the volume level. After 5 seconds of volume indication, display will return to the previous mode.

(2) Sound function selection button (audio selection)

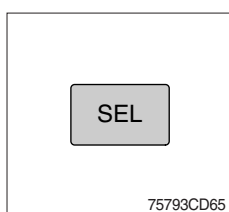


- ① This button is to adjust the sound. Each time you press power button shortly, LCD displays each mode as follows :

BASS → TREBLE → BAL → BEEP → LOUD → VOLUME



※ When this button is pressed, LCD display shows selected function for 5 seconds and then returns back to the previous mode. On selected function, level can be controlled by turning this button. The display will automatically return to normal indication in 5 seconds after the last adjustment is made or when another function is activated.

 
② Bass control

To adjust the bass level, first select the bass mode by pressing the select button  until BASS indication appears on the LCD display. Within 5 seconds of choosing the bass mode, turn power button right / left to adjust the bass level as desired.

The bass level will be shown on the LCD display from a minimum of BASS -10 to a maximum of BASS +10.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.


③ Treble control

To adjust the treble level, first select the treble mode by pressing the select button  until TREBLE indication appears on the LCD display. Within 5 seconds of choosing the treble mode, turn power button right / left to adjust the treble level as desired.

The treble level will be shown on the LCD display from a minimum of TREBLE -10 to a maximum of TREBLE +10.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.

④ Balance control

To adjust the left-right speaker balance, first select the balance mode by pressing the select button  until the BAL indication appears on the LCD display.


Within 5 seconds of choosing the balance mode, turn power button right / left to adjust the balance as desired.

The balance position will be shown on the LCD display from BAL 10L (full left) to BAL 10R (full right).

When the volume level between the left and right speakers is equal, BAL L=R will be shown on the LCD display panel.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.

⑤ Beep control

To adjust the beep mode, first select the beep mode by pressing the select button  until BEEP indication appears on the LCD display.

The beep mode will be shown on the LCD display from BEEP 2ND, BEEP OFF and BEEP ON by turning power button right / left.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.


Select BEEP ON when you wish to hear the BEEP sound whenever any function button is pressed.

Select BEEP 2ND when you wish to hear the BEEP sound whenever any tuner pre-set button and/or tune seek buttons are pressed for more than 3 seconds.


⑥ Loud control

When listening to music at low volume levels, this feature will boost the bass and treble response.

This action will compensate for the reduction in bass and treble performance experienced at low volume.


To select the loudness feature, press select button  until LOUD ON or LOUD OFF is displayed, then turn power button left or right to activate or deactivate loudness.

(3) Mode button

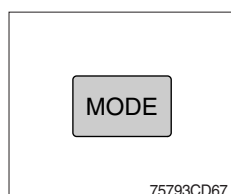

- ① Press mode button to select RADIO / USB / AUX.


(4) Audio mute button

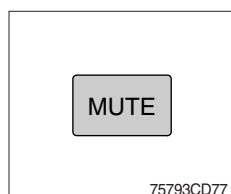

- ① Press mute button momentarily to mute volume and MUTE mark will blink on the LCD display.
Press the button again to return to the mode in use before the mute mode was activated.

■ RADIO

(1) AM / FM / LW band selector

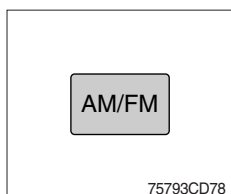


- ① Each time this button is pressed, the radio button is changed. Each time this button is pressed, LCD displays each band as follows :

FM1 → FM2 → FM3 → AM → LW

※ LW band is only available for Europe.

(2) Up / down tuning

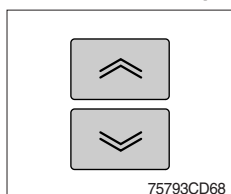


- ① To automatically select a radio station, momentarily press the up tune seek button ⤴ or down tune seek button ⤵ for less than 3 seconds to search for the closest radio station.

To manually select a radio station, press the up tuning & down tuning button for longer than 3 seconds.

The radio frequency will move up or down step by step each time you press button.

(3) Station pre-set button

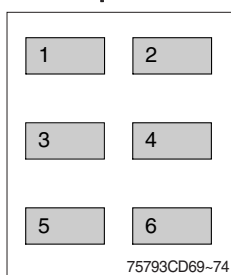


- ① Pressing these buttons shortly will recall your favorite pre-set radio stations.

To store your favorite stations into any of the 6 pre-set memories in each band (AM/FM/LW), use the following procedure :

- Turn the radio ON and select the desired band.
- Select the first station to be pre-set using the manual up/down or automatic seek tuning control button.
- Press the chosen pre-set button to store your selected station into and continue to hold it in. The beep sound will be momentarily heard and the pre-set number will appear on the LCD display indicating that the station is now set into that pre-set memory position and can be recalled at any time, by pressing that pre-set button.

(4) Pre-set scan (PS) / Best station memory (BSM) button

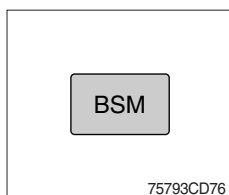

① Pre-set scan (PS)

Press BSM button shortly to scan the 6 pre-set station stored the memories on each band (AM/FM/LW).

The unit will stop at each pre-set station (the pre-set number on the LCD display will flash during pre-set scan operation) and remain on the selected frequency. Press the button momentarily again to remain on the station currently being heard.

② Best station memory (BSM)

Pressing BSM button for longer than 2 seconds will activate the BSM tuning feature which will automatically scan and enter each station into memory.

If you have already set the pre-set memories to your favorite stations, activating the BSM tuning feature will erase those stations and enter the new ones.

This BSM feature is most useful when traveling in a new area where you are not familiar with the local stations.

■ USB PLAYER

(1) USB function

There are two ways to play mp3 files in a USB device : using USB socket in the cab and the USB / AUX cable connected to the front side of the player.

· Use of USB socket

- ① Connect a USB device, which saves mp3 files, to USB socket in the cabin.
- ② If a USB device has not been connected, MP3 files are automatically played when you insert it into the USB port.
- ③ If a USB device has connected, MP3 files are played when you press mode for USB.


· Use of USB/AUX cable (option)



75793CD81

- ① Connect the USB/AUX cable to the player in order to play MP3 files in a USB device.
- ② If a USB device has not been connected, MP3 files are automatically played when you insert it into the cable.
- ③ If a USB device has connected, MP3 files are played when you press mode for USB.

(2) File selection & cue / review button

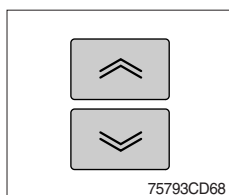

① File selection function

This button is used to select file up / down. Each time the forward file select ≧ is pressed, file number is increased.

Each time the backward file select ≦ is pressed, file number is decreased.

② Cue / review functions

High-speed audible search of file on a USB can be made by this button (the cue and review functions).

Press and hold the cue button ≧ to advance rapidly in the forward direction or the review button ≦ to advance rapidly in the backward direction.

(3) MP3 directory / file searching

① The power button is used to select a particular directory and file.

Press and hold for more than 3 seconds while playing MP3 file.

Turn right / left the power button to search the directory. Press the button when you find the wanted directory.


For example, the directory search generally changes in two methods depending on the order of writing as follows.

- Method 1 : ROOT → Dir01 → Dir02 → Dir03 → Dir04 → Dir05 → Dir06 → Dir07
- Method 2 : ROOT → Dir01 → Dir02 → Dir05 → Dir03 → Dir06 → Dir04 → Dir07


If you want to search the file in the located directory, turn right / left the power button consecutively. Press the button when you find the wanted file. The unit will then play the selected file. For instance, the file search changes in Dir01 as follows.

File01 → File02 → File03 → File04
↑


※ MP3 direction / file configuration

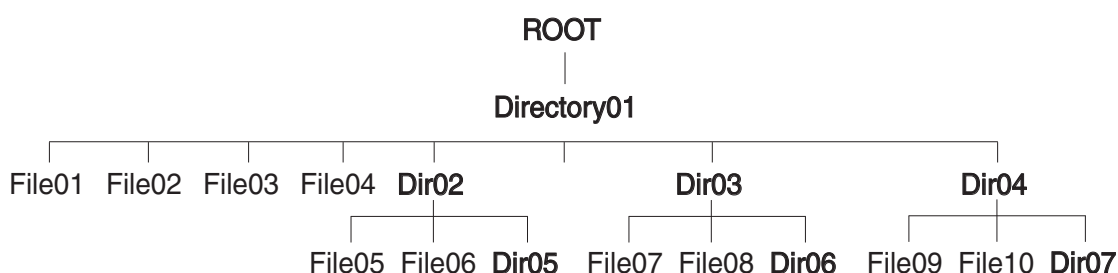


(4) ID3 v2 display

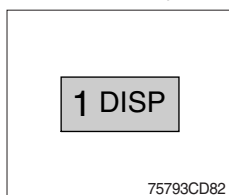

- ① Disp button is used to change the display information.
While playing an MP3 file, you can change the file information shown on the LCD display.
Each time you press DISP (display), the display changes to show the following.
- ※ If the MP3 disc does not have any ID3 information, the display will show NO ID3 on LCD display.

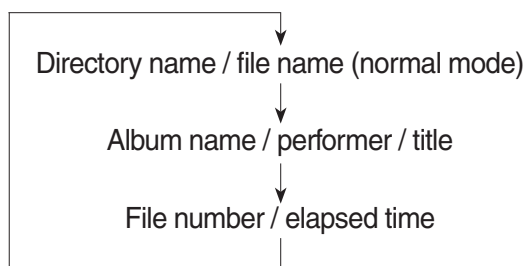


(5) File scan (SCN)

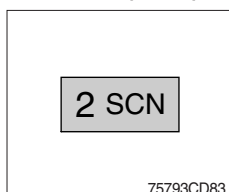


- ① During USB play, press SCN button to play the first 10 seconds of each file on the whole file on the USB (SCN mark will appear on the LCD display).
When a desired file is reached, press the SCN button again to cancel the function.
The unit will then play the selected file.
- ※ In case of playing MP3 file, when the SCN (scan) button is pressed and held for longer than 2 seconds, the SCN mark will blink on the LCD display and all files in the selected directory will be introduced until the file scan mode is cancelled by pressing the SCN button again or by activating the random or repeat functions.

(6) Repeat play selector (RPT)

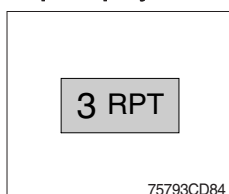

- ① During USB play, press RPT button to play the selected file repeatedly (RPT will appear on the LCD display).
Play of the file will continue to repeat until this button is pressed again and the RPT disappears from the LCD display.
- ※ In case of playing MP3 file, when the RPT button is pressed and held longer than 2 seconds, the RPT mark will blink on the LCD display and play all files in the selected directory and will be repeated until the directory repeat mode is cancelled by pressing the repeat button again or by activating the scan or random functions (RPT mark will disappear from LCD display).

(7) Random play selector (RDM)

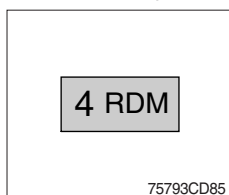


- ① During USB play, press RDM button to play the files on the USB in a random shuffled order (RDM will appear on the LCD display). The file select function will also select file in the random order instead of the normal process.

The random play mode can be cancelled by this button again.


- ※ In case of MP3 file, when the random button is pressed and held longer than 2 seconds, the RDM mark will blink on the LCD display and play all files in directory randomly until the directory random mode is cancelled by pressing the random button again or by activating the scan or repeat functions (RDM mark will disappear from LCD display).

(8) Directory down

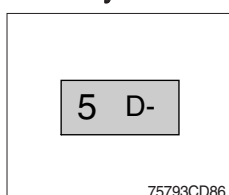

- ① Press D- button briefly while playing MP3. The previous directory is located each time you press this button.

(9) Directory up

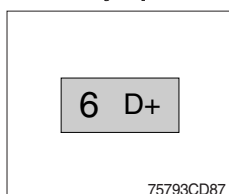


- ① Press D+ button briefly while playing MP3 . The next directory is located each time you press this button.
- ※ If the MP3 file does not have a directory, the unit play MP3 at 10-file intervals.
- ※ If any MP3 file does not exist in USB, this button can not operate.

■ AUX PLAYER


(1) Aux function

· Use of USB socket

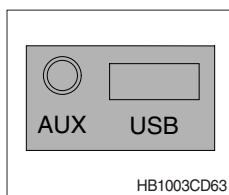


- ① If you want to listen to music of a external audio device, connect a external audio device into the USB port.
- ② Press mode button to change a current mode for AUX. If audio file of audio device is playing, you can listen to music through speaker.

· Use of USB/AUX cable (option)

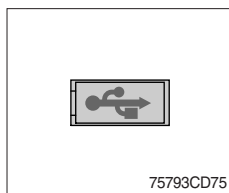

- ① If you want to listen to music of a external audio device, connect a external audio device through USB/AUX cable.
- ② Press mode button to change a current mode for AUX. If audio file of audio device is playing, you can listen to music through speaker.

RADIO AND USB PLAYER (machine serial No. : #0593-)

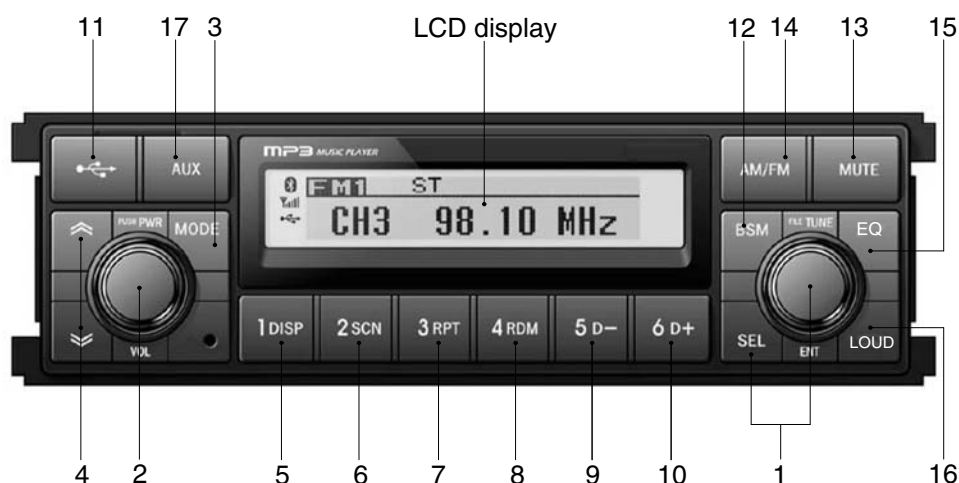


R25Z9A3CD38

■ FRONT PANEL PRESENTATION

- | | | | | | |
|---|--|--|----|--|---|
| 1 | | Audio selection button | 10 | | Preset memory button 6
D+ Directory up |
| | | Audio selection knob | 11 | | Aux function |
| 2 | | Power and volume button | 12 | | Preset scan (PS)
Best station memory (BSM) |
| 3 | | Mode button
(select RADIO / USB / AUX) | 13 | | Audio mute button |
| 4 | | UP / DOWN tuning button | 14 | | AM / FM button (radio) |
| 5 | | Preset memory button 1
DISP ID3 v2 display | 15 | | Equalizer |
| 6 | | Preset memory button 2
SCN File scan | 16 | | Loud |
| 7 | | Preset memory button 3
RPT Repeat play selector | 17 | | Aux connector |
| 8 | | Preset memory button 4
RDM Random play selector | | | |
| 9 | | Preset memory button 5
D- Directory down | | | |

■ GENERAL

(1) Power and volume button

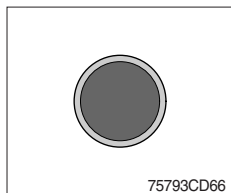

① Power ON/OFF button


Press power button to turn the unit ON or OFF shortly.

When the power is ON, the previous mode (last memory) will appear.

② Volume up / down control

Turn volume up / down button right to increase the volume level. The level will be shown in VOLUME xx on the LCD display. Turn it left to decrease the volume level. After 5 seconds of volume indication, display will return to the previous mode.


(2) Sound function selection button/knob (audio selection)

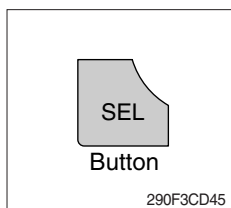

① This button is to adjust the sound. Each time you press SEL button shortly, LCD displays each mode as follows :

BASS → TREBLE → BAL → LOUD → EQ → BASS

※ When this button is pressed, LCD display shows selected function for 5 seconds and then returns back to the previous mode. On selected function, level can be controlled by turning this button. The display will automatically return to normal indication in 5 seconds after the last adjustment is made or when another function is activated.

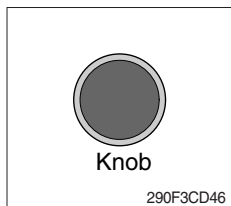

② Bass control

To adjust the bass level, first select the bass mode by pressing the SEL button until BASS indication appears on the LCD display. Within 5 seconds of choosing the bass mode, turn selection knob right / left to adjust the bass level as desired.

The bass level will be shown on the LCD display from a minimum of BASS -10 to a maximum of BASS +10.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.

③ Treble control

To adjust the treble level, first select the treble mode by pressing the SEL button until TREBLE indication appears on the LCD display. Within 5 seconds of choosing the treble mode, turn selection knob right / left to adjust the treble level as desired.

The treble level will be shown on the LCD display from a minimum of TREBLE -10 to a maximum of TREBLE +10.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.

④ Balance control

To adjust the left-right speaker balance, first select the balance mode by pressing the SEL button until the BAL indication appears on the LCD display.

Within 5 seconds of choosing the balance mode, turn selection knob right / left to adjust the balance as desired.

The balance position will be shown on the LCD display from BAL 10L (full left) to BAL 10R (full right).

When the volume level between the left and right speakers is equal, BAL L=R will be shown on the LCD display panel.

The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated.

⑤ Loud control

When listening to music at low volume levels, this feature will boost the bass and treble response.

This action will compensate for the reduction in bass and treble performance experienced at low volume.


To select the loudness feature, press SEL button until LOUD ON or LOUD OFF is displayed, then turn selection knob left or right to activate or deactivate loudness.

⑥ Equalizer (EQ)

You can select an equalizer curve designed for 4 music types (POP, ROCK, CLASSIC, JAZZ).


To select the desired curve, first select the EQ mode by pressing SEL button until the "EQ OFF" indication appears on the display panel. Within 5 seconds of choosing the EQ mode, turn selection knob to select an equalizer curve as desired.

(3) Mode button

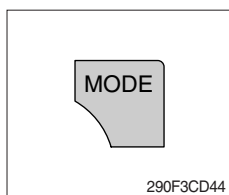

- ① Press mode button to select RADIO / USB / AUX audio.

(4) Audio mute button

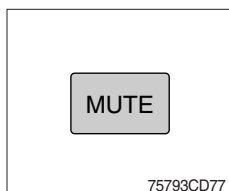


- ① Press mute button momentarily to mute volume and MUTE mark will blink on the LCD display.

Press the button again to return to the mode in use before the mute mode was activated.

■ RADIO

(1) AM / FM / LW band selector

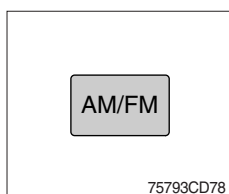




- ① Each time this button is pressed, the radio button is changed. Each time this button is pressed, LCD displays each band as follows :

FM1 → FM2 → FM3 → AM → LW → FM1

※ LW band is only available for Europe.

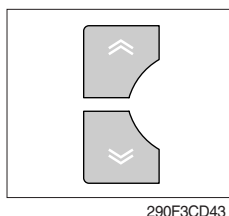(2) Up / down tuning




- ① To automatically select a radio station, momentarily press the up tune seek button  or down tune seek button  for less than 3 seconds to search for the closest radio station.

To manually select a radio station, press the up tuning & down tuning button for longer than 3 seconds.

The radio frequency will move up or down step by step each time you press button.

(3) Station pre-set button

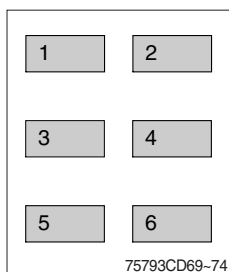


- ① Pressing these buttons shortly will recall your favorite pre-set radio stations.

To store your favorite stations into any of the 6 pre-set memories in each band (AM/FM/LW), use the following procedure :

- Turn the radio ON and select the desired band.
- Select the first station to be pre-set using the manual up/down or automatic seek tuning control button.
- Press the chosen pre-set button to store your selected station into and continue to hold it in. The beep sound will be momentarily heard and the pre-set number will appear on the LCD display indicating that the station is now set into that pre-set memory position and can be recalled at any time, by pressing that pre-set button.

(4) Pre-set scan (PS) / Best station memory (BSM) button

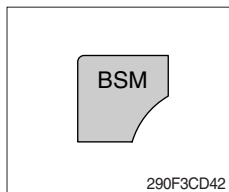

① Pre-set scan (PS)

Press BSM button shortly to scan the 6 pre-set station stored the memories on each band (AM/FM/LW).

The unit will stop at each pre-set station (the pre-set number on the LCD display will flash during pre-set scan operation) and remain on the selected frequency. Press the button momentarily again to remain on the station currently being heard.

② Best station memory (BSM)

Pressing BSM button for longer than 2 seconds will activate the BSM tuning feature which will automatically scan and enter each station into memory.

If you have already set the pre-set memories to your favorite stations, activating the BSM tuning feature will erase those stations and enter the new ones.

This BSM feature is most useful when traveling in a new area where you are not familiar with the local stations.

■ USB PLAYER



R25Z9A3CD39

(1) USB function

① Connect a USB device if you want to listen to MP3 file in a USB device.

② It will automatically play MP3 file in the USB device and the LCD display will show "READING USB".

※ If there are no files on USB device, playback will revert back to the previous mode after displaying "NO FILE".


(2) AUX function

① If you want to listen to music of a external audio device, connect a external audio device through AUX cable.

② Change AUX mode by pressing MODE button.

If audio file of Audio device is playing, you can listen to music through speaker.

(3) File selection & cue / review button

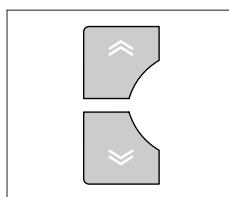

290F3CD43

① File selection function

This button is used to select file up / down.

Each time the forward file select ⏮ is pressed, file number is increased.

Each time the backward file select ⏭ is pressed, file number is decreased.

② Cue / review functions

High-speed audible search of file on a USB can be made by this button (the cue and review functions).

Press and hold the cue button ⏮ to advance rapidly in the forward direction or the review button ⏭ to advance rapidly in the backward direction.

(4) MP3 directory / file searching

① The D-, D+ button is used to select a particular directory and file.

Press and hold for more than 3 seconds while playing MP3 file.

Turn right / left the selection knob to search the directory. Press the button when you find the wanted directory.

For example, the directory search generally changes in two methods depending on the order of writing as follows.

· Method 1 : ROOT → Dir01 → Dir02 → Dir03 → Dir04 → Dir05 → Dir06 → Dir07 → ROOT


· Method 2 : ROOT → Dir01 → Dir02 → Dir05 → Dir03 → Dir06 → Dir04 → Dir07 → ROOT

If you want to search the file in the located directory, turn right / left the selection knob consecutively. Press the button when you find the wanted file. The unit will then play the selected file.


For instance, the file search changes in Dir01 as follows.

File01 → File02 → File03 → File04 → File01

※ MP3 directory / file configuration

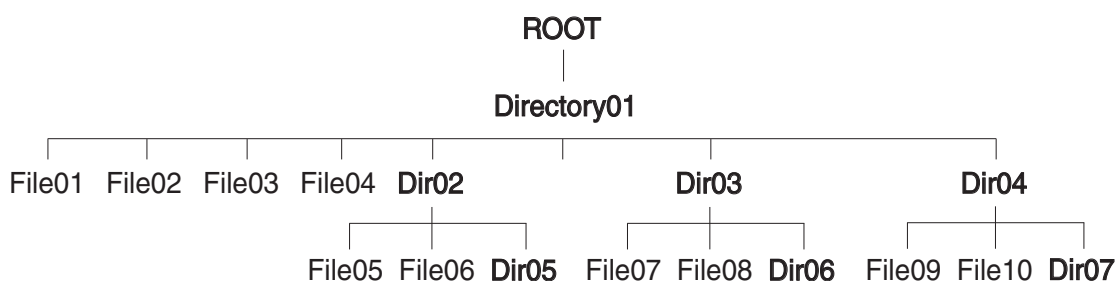

(5) ID3 v2 display

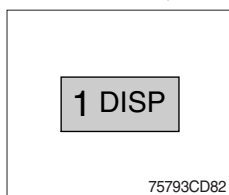

- ① Disp button is used to change the display information.
While playing an MP3 file, you can change the file information shown on the LCD display.
Each time you press DISP (display), the display changes to show the following.
- ※ If the MP3 disc does not have any ID3 information, the display will show NO ID3 on LCD display.

Directory name / file name (normal mode)



Album name / performer / title




File number / elapsed time




Directory name / file name (normal mode)

(6) File scan (SCN)

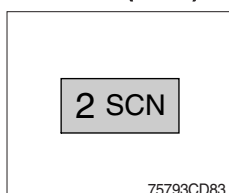


- ① During USB play, press SCN button to play the first 10 seconds of each file on the whole file on the USB (SCN mark will appear on the LCD display).
When a desired file is reached, press the SCN button again to cancel the function.
The unit will then play the selected file.
- ※ In case of playing MP3 file, when the SCN (scan) button is pressed and held for longer than 2 seconds, the SCN mark will blink on the LCD display and all files in the selected directory will be introduced until the file scan mode is cancelled by pressing the SCN button again or by activating the random or repeat functions.

(7) Repeat play selector (RPT)

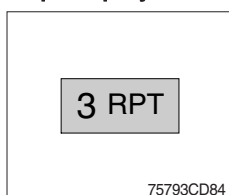

- ① During USB play, press RPT button to play the selected file repeatedly (RPT will appear on the LCD display).
Play of the file will continue to repeat until this button is pressed again and the RPT disappears from the LCD display.
- ※ In case of playing MP3 file, when the RPT button is pressed and held longer than 2 seconds, the RPT mark will blink on the LCD display and play all files in the selected directory and will be repeated until the directory repeat mode is cancelled by pressing the repeat button again or by activating the scan or random functions (RPT mark will disappear from LCD display).

(8) Random play selector (RDM)

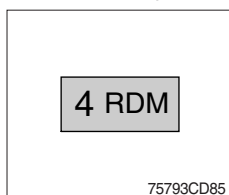


- ① During USB play, press RDM button to play the files on the USB in a random shuffled order (RDM will appear on the LCD display). The file select function will also select file in the random order instead of the normal process.

The random play mode can be cancelled by this button again.


- ※ In case of MP3 file, when the random button is pressed and held longer than 2 seconds, the RDM mark will blink on the LCD display and play all files in directory randomly until the directory random mode is cancelled by pressing the random button again or by activating the scan or repeat functions (RDM mark will disappear from LCD display).

(9) Directory down

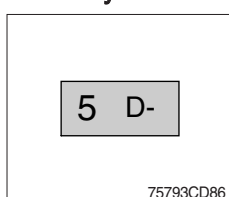

- ① Press D- button briefly while playing MP3. The previous directory is located each time you press this button.

(10) Directory up

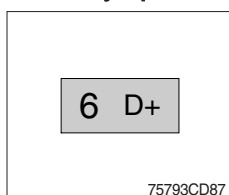

- ① Press D+ button briefly while playing MP3 . The next directory is located each time you press this button.
- ※ If the MP3 file does not have a directory, the unit play MP3 at 10-file intervals.
- ※ If any MP3 file does not exist in USB, this button can not operate.