


# SAFETY LABELS

## 1. LOCATION

Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

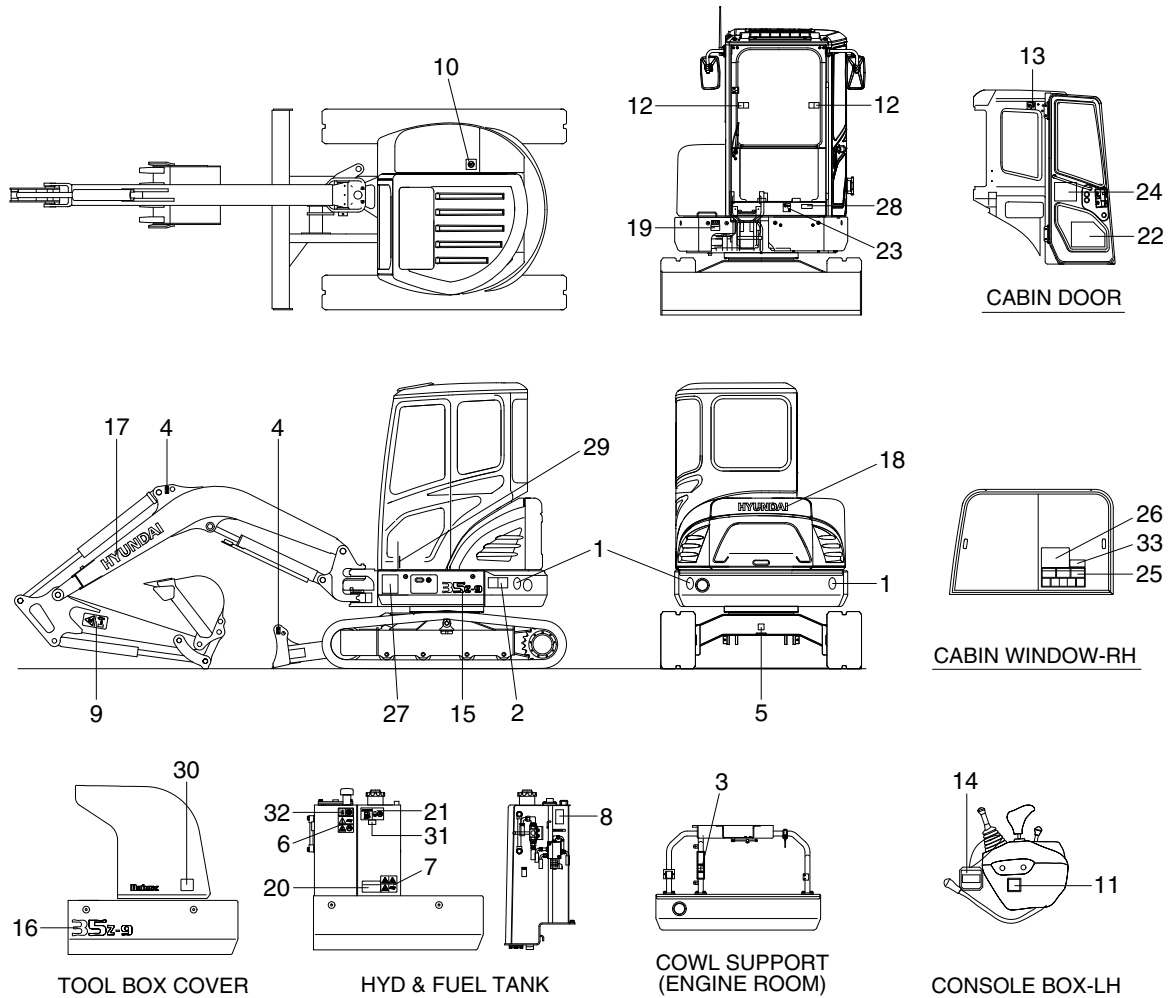

R35Z90SL01

1 Reflecting	12 Safety - front window	23 Noise level
2 Keep clear-rear	13 Alternate exit	24 Lifting chart
3 Caution - engine room	14 Under repair	25 Cabin RH window
4 Lifting point	15 Model name - LH	26 Control ideogram
5 Tie	16 Model name - RH	27 Control pattern
6 Hydraulic oil lubrication	17 Hyundai logo - boom	28 Name plate
7 Battery accident	18 Hyundai logo - engine hood	29 ROPS plate
8 Change way	19 Grease	30 Battery position
9 Keep clear - boom/arm	20 ECM connector	31 Low sulfur fuel
10 No step	21 Fueling	32 Fuel shut off
11 Console tilting	22 Service instruction	33 Water separator

## 2. DESCRIPTION


There are several specific warning labels on this machine please become familiarized with all warning labels.

Replace any safety label that is damaged, or missing.

### 1) FUELING (item 21)

This warning label is positioned on the right side of fuel filler neck.

- ⚠ **Stop the engine when refueling. All lights or flames shall be kept at a safe distance while refueling.**

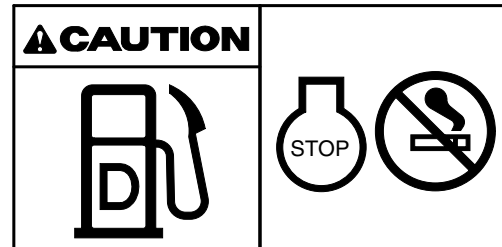


R35Z70FW04

### 2) BATTERY ACCIDENT (item 7)

This warning label is positioned on the battery cover.

- ⚠ **Electrolyte containing sulfuric acid cause severe burns. Avoid being in contact with skin, eyes or clothes. In the event of accident flush with sufficient water, call a physician immediately.**
- ✳ **Maintain the electrolyte at the recommended level. Add distilled water to the battery only when starting up, never when shutting down.**
- With electrolyte at proper level, less space may cause the gases to be accumulated in the battery.**
- ⚠ **Extinguish all smoking materials and open flames before checking the battery.**
- ⚠ **Do not use matches, lighters or torches as a light source near the battery for the probable presence of explosive gas.**
- ⚠ **Do not allow unauthorized personnel to change the battery or to use booster cables.**
- ⚠ **For safety from electric shock, do not battery terminals with a wet hand.**

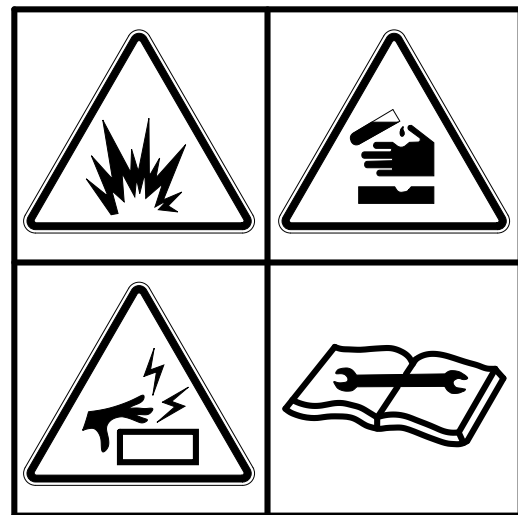

36070FW05

### 3) KEEP CLEAR-BOOM/ARM (item 9)

This warning label is positioned on both side of the arm.

- ⚠ **Serious injury or death can result from falling of the attachment.**
- ⚠ **To prevent serious injury or death, keep clear the underneath of attachment.**




R5570FW31

### 4) KEEP CLEAR-REAR (item 2)

This warning label is positioned on the both side of the counterweight.

- ⚠ **To prevent serious personal injury or death keep clear of machine swing radius.**
- ⚠ **Do not deface or remove this label from the machine.**

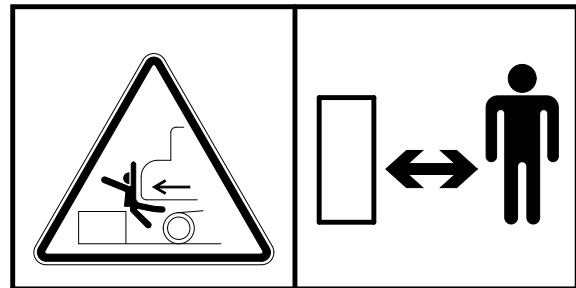


R35Z70FW09

### 5) SAFETY FRONT WINDOW (item 12)

This warning label is positioned on the both side front window of the cab.

- ⚠ **Be careful that the front window may be promptly closed.**

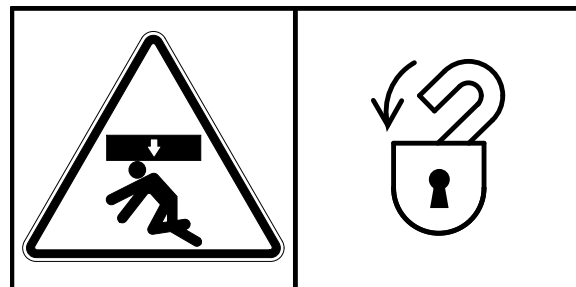


21070FW24

### 6) ALTERNATE EXIT (item 13)

This warning label is positioned on the left inside of the cab.

- ⚠ **The right side window serves us an alternate exit.**
- ⚠ **At case of emergency, use the hammer for braking the right side window of the cab.**



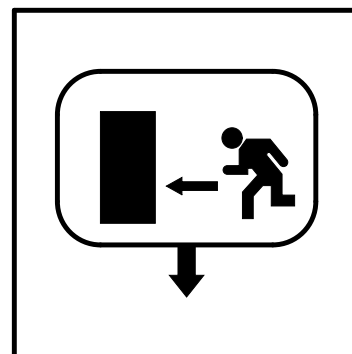


21070FW25

## 7) CAUTION-ENGINE ROOM (item 3)

This warning label is positioned on the side of radiator.

- ▲ Do not open the engine hood during the engine's running.
- ▲ Escaping fluid under pressure can penetrate the skin causing serious injury.
- ※ Study the service manual before service job.
- ▲ Never open the filler cap while engine running or at high coolant oil temperature.
- ▲ Study the operator's manual before starting and operating machine.
- ▲ Do not touch exhaust pipe or it may cause severe burn.

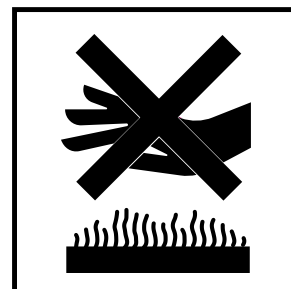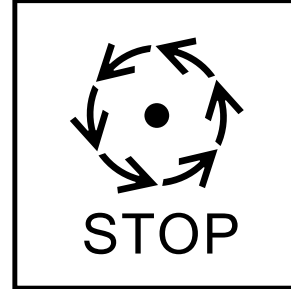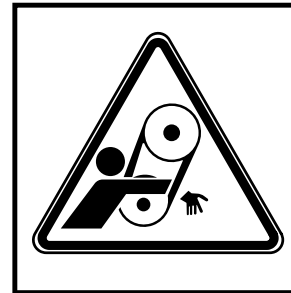


R5570FW14

#### 8) SWIVEL CONTROL (item 26)

This warning label is positioned on the right side window of the cab.

- ⚠ **Check the machine control pattern for conformance to pattern on this label. If not, change label to match pattern before operating machine.**
- ⚠ **Failure to do so could result in injury or death.**
- ※ See page 4-7 for details.
- ※ Guidelines for using the general dozer blade.
  - Be careful not to apply an excessive load when using a blade.
  - Avoid impacts and loads on the bottom due to machine modification or excessive working conditions.
  - Check the BLADE UP status before traveling the machine.
  - Avoid any collision with the upper working device and the blade.
  - Do not move machine in the blade jack up state.
  - When using blade jack up, use it in an environment where the ground is not rough and the machine and ground are same level.

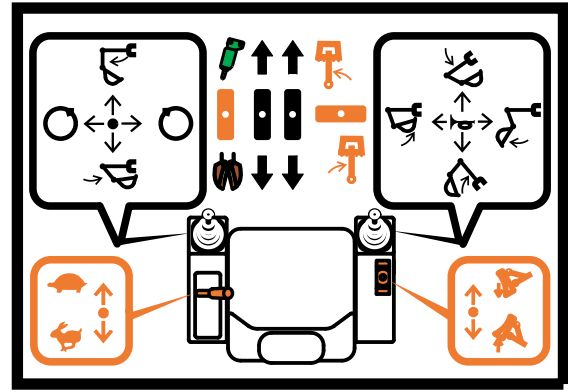

### 9) CABIN RH WINDOW (item 25)

This warning label is positioned on the right side window of the cab.

- ⚠ **Serious injury or death can result from contact with electric lines.**

An electric shock being received by merely coming into the vicinity of an electric lines, the minimum distance should be kept considering the supply voltage as page 1-7.

- ⚠ **Serious injury or death can result from dropping bucket.**
- ⚠ **Operating the machine with quick clamp switch unlocked or without safety pin of moving hook can cause the bucket to drop off.**
- ⚠ **Be careful to operate machine equipped with quick clamp or extensions.**
- ⚠ **Bucket may hit cab, canopy, boom and boom cylinders when it reached vicinity of them.**


- ⚠ **Study the operator's manual before transporting the machine, if provided and tie down arm and track to the carrier with lashing wire.**

See page 5-6 for details.


- ⚠ **Make sure wire rope is proper size and keep correct hoisting method.**

See page 5-7 for details.

- ⚠ **Place the bucket on the ground whenever servicing the hydraulic system. Check oil level on the level gauge. Refill the recommended hydraulic oil up to specified level if necessary.**

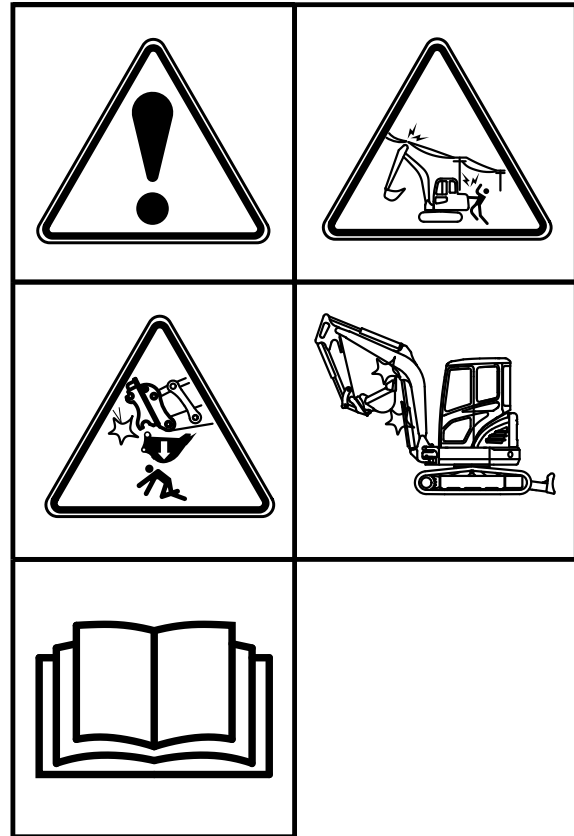

R35Z70FW11

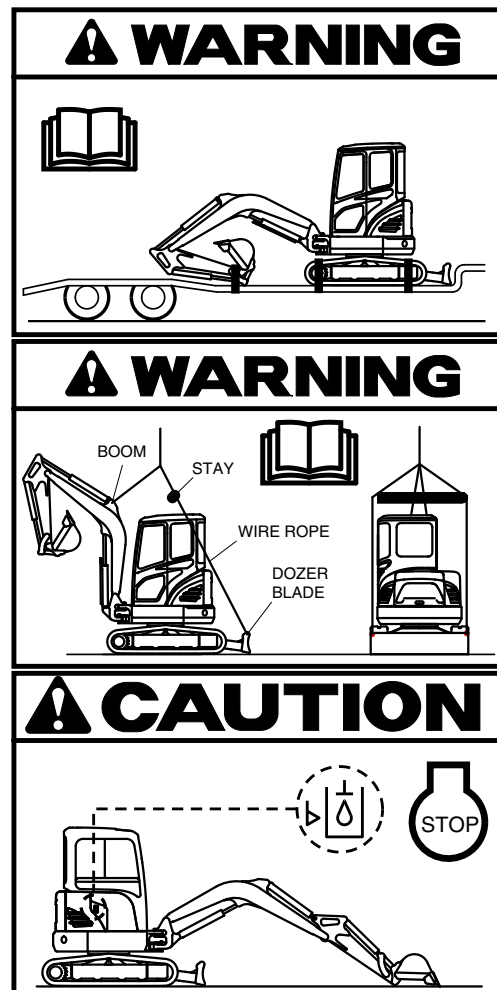


R35Z70FW10

#### 10) CONSOLE TILTING (item 11)

This warning label is positioned on the LH console box.

- ※ Before you get off the machine be sure to tilt the LH console box.

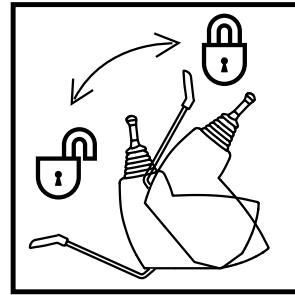

R5570FW17

#### 11) HYDRAULIC OIL LUBRICATION (item 6)

This warning label is positioned on the right side of air breather.

- ※ Do not mix with different brand oils.
- ▲ Never open the filler cap while engine running or at high hydraulic oil temperature.
- ▲ Loosen the cap slowly and release internal pressure completely.




21070FW08

#### 12) NO STEP (item 10)

This warning label is positioned on the tool box cover.

- ▲ Do not step on the tool box cover.

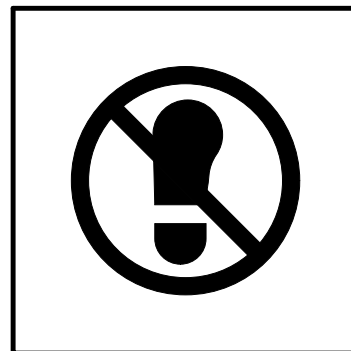


21070FW16

#### 13) TIE (item 5)

This warning label is positioned on the lower frame.


- ※ Never tow the machine using tie hole, because this may break.
- ※ See page 4-10 for detail.

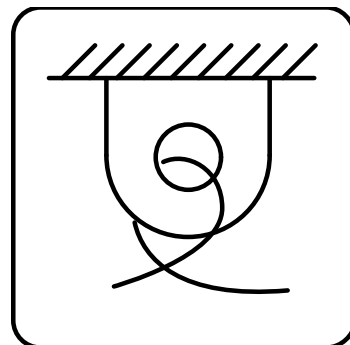

4507A0FW02

#### 14) BATTERY POSITION (item 30)

This warning label is positioned on the right side of tool box.

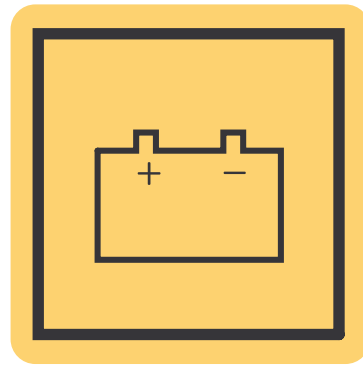


38090FW03

#### 15) LOW SULFUR FUEL (item 31)

This warning label is positioned on the right side of fuel filler neck.

**▲ EPA Regulation use low sulfur fuel or ultra low sulfur fuel only.**

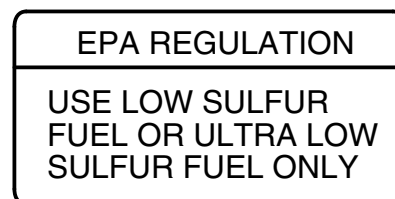


5591FW09

#### 16) FUEL SHUT OFF (item 32)

This warning label is positioned on the right side of the hydraulic tank.

- ※ Fill only the hydraulic oil.
- ※ Do not fill the diesel fuel.

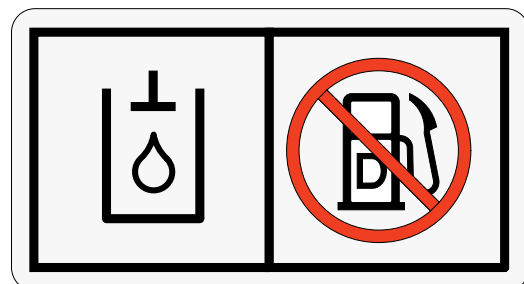


140WH90FW51

#### 17) WATER SEPARATOR (item 33)

This warning label is positioned on the right side window of the cap.

**▲ In order to protect high pressure fuel system, please drain water in water separator before starting the engine.**

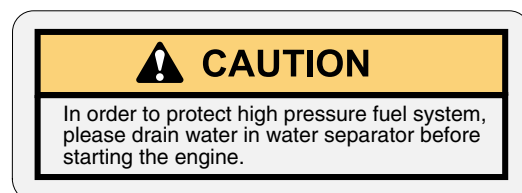

210N90FW50