

A

Accel dial switch	3-10
After engine start	4-4
Air breather element	6-35
Air cleaner filter	6-29
Air conditioner & heater	3-17
Air conditioner filter	6-42
Alternate exit	0-12
Attachment lowering	4-24

B

Battery	6-43
Before starting engine	4-2
Boom lowering	4-24
Bucket clearance adjustment	6-41
Bucket replacement	6-39
Bucket selection guide	2-8
Bucket tooth replacement	6-39

C

Cab air filter	6-46
Cab device	3-1
Cassette & radio	3-20
Changing machine control pattern	4-27
Charge air cooler	6-25
Cigar lighter	3-24
Coolant	6-21
Cooling fan	6-25
CPU controller	3-25

D

Drain filter	6-31
--------------	------

E

Emergency engine speed control	3-25
Emergency engine starting connector	3-25
Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-44
Engine stop	4-6

F

Fan belt	6-26
Fan belt tensioner	6-27

Fuel filter	6-30
Fuel leakage	6-32
Fuel system bleeding	6-31
Fuel tank	6-29
Fuse box	3-24

H

Hydraulic breaker	8-1
Hydraulic oil changing	6-33
Hydraulic oil filling	6-33
Hydraulic oil level	6-33

L

Levers & pedals	3-14
Lifting capacities	2-5
Lubricant specification	2-16

M

Maintenance check list	6-11
Major component	2-1
Mode selection system	4-7
Monitor display	4-11
Monitor panel	3-2
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------	-----

O

Oil cooler	6-25
Operating pattern	4-27

P

Pedals	3-14
Periodical replacement parts	3-14
Pilot line filter	6-35
Pin & bushing adjustment	6-42
Prolix resistor	3-25

R

Radiator flushing	6-20
Radio	3-20
RCV lever lubricate	6-38
Recommended oils	2-16, 6-9
Relieving pressure	6-3
Return filter	6-34

S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
Seat	3-24
Seat belt	3-24
Service meter	3-26
Speciation for major component	2-12
Specification	2-2
Start switch	3-9
Storage	4-25
Suction strainer	6-34
Swing bearing grease	6-36
Swing gear & pinion grease	6-37
Swing reduction gear oil	6-36
Switch panel	3-7
Switches	3-9

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-16
Track adjustment	6-38
Track shoe selection	2-10
Transportation	5-1
Travel reduction gear oil	6-37
Travelling machine	4-14
Troubleshooting guide	7-1

U

Undercarriage	2-10
---------------	------

W

Warming up operation	4-5
Warning lamps	3-3
Water filter	6-20
Water separator	6-30
Weight	2-4
Working device operation	4-13
Working method	4-17
Working range	2-3