


5. MAINTENANCE CHART

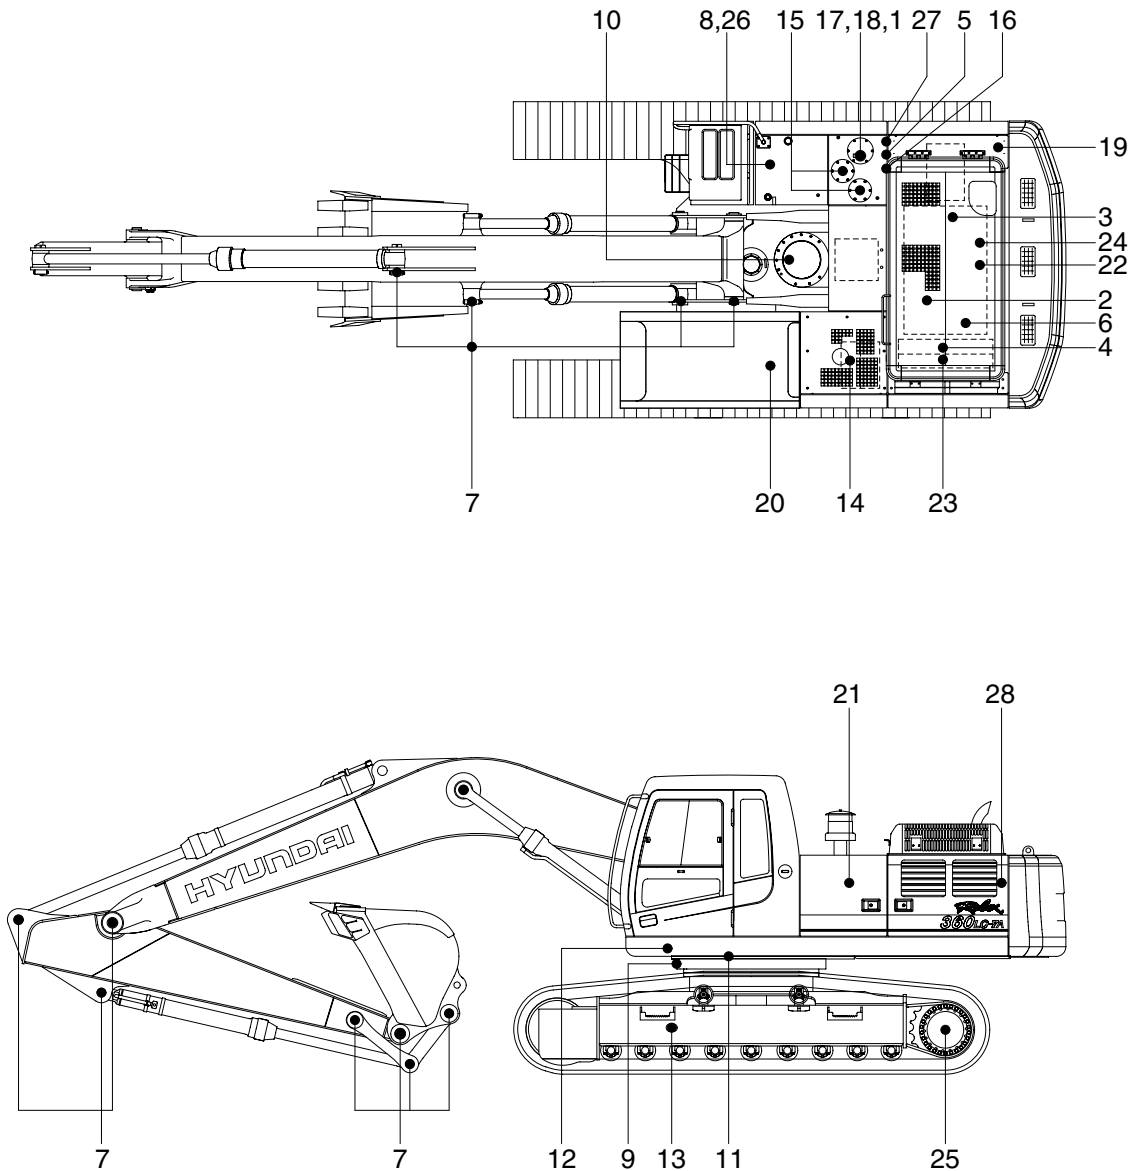

3607A6MI05

Caution

1. Service intervals are based on the hour meter reading.
2. The number of each item shows the lubrication point on the machine.
3. Stop engine while filling oil, and use no open flames.
4. For other details, refer to the service manual.

Service interval	No.	Description	Service action	Oil symbol	Capacity l (U.S.gal)	Service points No.
10 Hours or daily	1	Hydraulic oil level	Check, Add	HO	230(61)	1
	2	Engine oil level	Check, Add	EO	31.7(8.4)	1
	4	Radiator coolant	Check, Add	C	45(12)	1
	5	Prefilter(Water, element)	Check, Clean	-	-	1
	6	Fan belt tension & damage	Check, Clean	-	-	1
	26	Fuel tank	Check, Refill	DF	520(137)	1
50 Hours or weekly	7	Attachment pins & chamber	Check, Add	PGL	-	17
	8	Fuel tank(Water, element)	Check, Clean	-	-	1
	9	Swing bearing grease	Check, Add	PGL	-	3
	10	Swing reduction gear case	Check, Add	GO	8.0(2.1)	1
	13	Track tension	Check, Adjust	PGL	-	2
250 Hours	14	Battery(Electrolyte)	Check, Add	-	-	2
	15	Hydraulic oil return filter(-#0077)	Replace	-	-	2
	16	Drain filter cartridge(-#0077)	Replace	-	-	1
	17	Air breather element	Replace	-	-	1
	19	Line filter element(-#0077)	Replace	-	-	1
	20	Aircon & heater recirculation filter	Check, Clean	-	-	1
500 Hours	2	Engine oil	Change	EO	31.7(8.4)	1
	3	Engine oil filter	Replace	-	-	1
	5	Prefilter(Water, element)	Replace	-	-	1
	21	Air cleaner element(Primary)	Clean	-	-	1
	22	Fuel filter element	Replace	-	-	2
	23	Radiator, oil cooler, charger air cooler	Clean	-	-	3
	24	Corrosion resistor	Replace	-	-	1
1000 Hours	10	Swing reduction gear case	Change	GO	8.0(2.1)	1
	12	Swing gear and pinion	Change	PGL	11.5kg(25.4lb)	1
	15	Hydraulic oil return filter(#0078-)	Replace	-	-	2
	16	Drain filter cartridge(#0078-)	Replace	-	-	1
	19	Line filter element(#0078-)	Replace	-	-	1
	25	Travel reduction gear case	Change	GO	5.5(1.5)	2
2000 Hours	18	Hydraulic oil suction strainer	Check, Clean	-	-	1
	27	Hydraulic oil	Change	HO	230(61)	1
	28	Radiator coolant	Change	C	45(12)	1
As required	20	Aircon & heater recirculation filter	Clean, Replace	-	-	1
	20	Aircon & heater fresh filter	Clean, Replace	-	-	1
	21	Air cleaner element(Safety)	Replace	-	-	1
	21	Air cleaner element(Primary)	Replace	-	-	1

※ **Oil symbol**

Please refer to the recommended lubricants for specification.

DF : Diesel fuel GO : Gear oil HO : Hydraulic oil C : Coolant PGL : Grease EO : Engine oil