


12. RCV LEVER OPERATING PATTERN

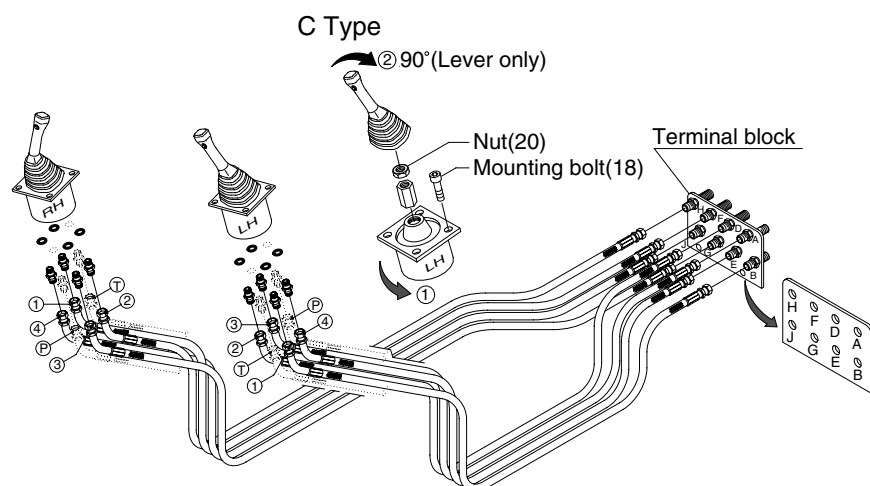

※ Whenever a change is made to the machine control pattern also exchange the pattern label in the cab to match the new pattern.

370740P28

Pattern	Operation		Control function	Hose connection(Port)		
	Left	Right		RCV lever	Change of MCV port	
					From	To
ISO Type Hyundai		Left	Arm out	②	D	-
			Arm in	④	E	-
			Swing right	③	A	-
			Swing left	①	B	-
		Right	Boom lower	④	J	-
			Boom raise	②	H	-
			Bucket out	①	F	-
			Bucket in	③	G	-
A Type		Left	Boom lower	②	D	J
			Boom raise	④	E	H
			Swing right	③	A	-
			Swing left	①	B	-
		Right	Arm out	④	J	D
			Arm in	②	H	E
			Bucket out	①	F	-
			Bucket in	③	G	-
B Type		Left	Boom lower	②	D	J
			Boom raise	④	E	H
			Bucket in	③	A	G
			Bucket out	①	B	F
		Right	Arm out	④	J	D
			Arm in	②	H	E
			Swing right	①	F	A
			Swing left	③	G	B
C Type		Left	① Loosen the RCV lever mounting bolt(21) and rotates lever assy 90° counterclockwise; then install. ② To put lever in correct position, disassemble nut(20) and rotates only lever 90° clockwise.			
		Right	Same as ISO type			