


5. MAINTENANCE CHART

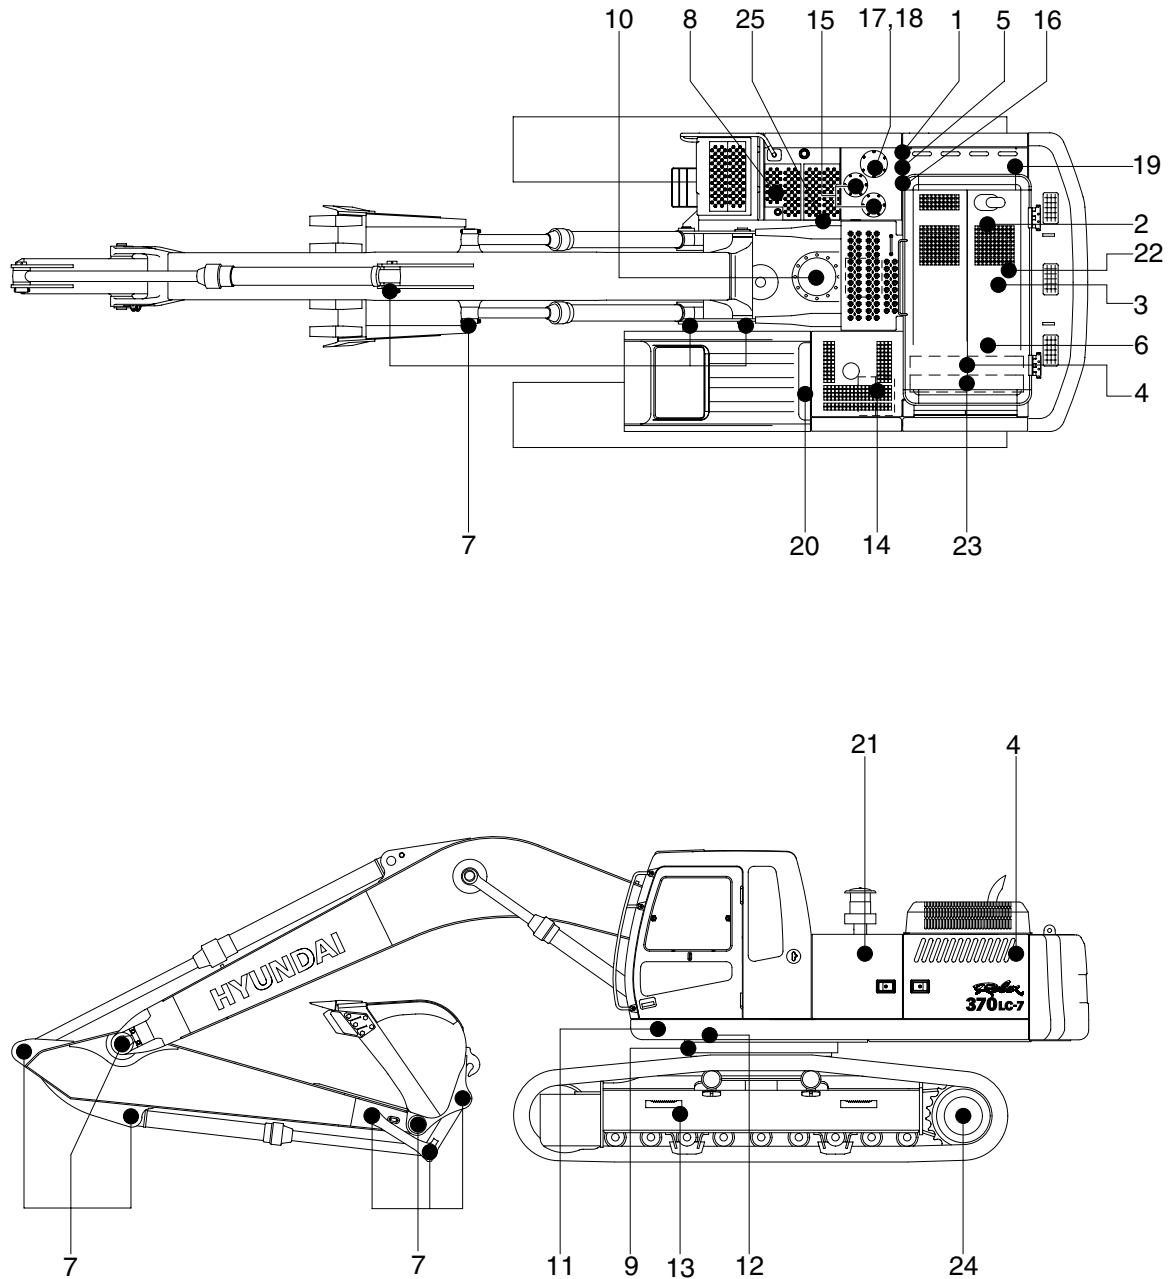

37076MI01

Caution

1. Service intervals are based on the hour meter reading.
2. The number of each item shows the lubrication point on the machine.
3. Stop engine while filling oil, and use no open flames.
4. For other details, refer to the service manual.

Service interval	No.	Description	Service action	Oil symbol	Capacity l (U.S.gal)	Service points No.
10 Hours or daily	1	Hydraulic oil level	Check, Add	HO	230(61)	1
	2	Engine oil level	Check, Add	EO	27.3(7.2)	1
	4	Radiator coolant	Check, Add	C	50(13.2)	1
	5	Prefilter(Water, element)	Check, Clean	-	-	1
	6	Fan belt tension & damage	Check, Clean	-	-	1
	25	Fuel tank	Check, Refill	DF	520(137)	1
50 Hours or weekly	7	Attachment pins & chamber	Check, Add	PGL	-	17
	8	Fuel tank(Water, element)	Check, Clean	-	-	1
	9	Swing bearing grease	Check, Add	PGL	-	3
	10	Swing reduction gear case	Check, Add	GO	8.0(2.1)	1
	11	Swing reduction gear grease	Check, Add	PGL	1.6kg(0.4lb)	1
	13	Track tension	Check, Adjust	PGL	-	2
250 Hours	2	Engine oil	Change	EO	27.3(7.2)	1
	3	Engine oil filter	Replace	-	-	1
	14	Battery(Electrolyte)	Check, Add	-	-	2
	17	Air breather element	Replace	-	-	1
	20	Aircon & heater recirculation filter	Check, Clean	-	-	1
500 Hours	5	Prefilter(Water, element)	Replace	-	-	1
	21	Air cleaner element(Primary)	Clean	-	-	1
	22	Fuel filter element	Replace	-	-	2
	23	Radiator, oil cooler, charger air cooler	Clean	-	-	3
1000 Hours	10	Swing reduction gear case	Change	GO	8.0(2.1)	1
	12	Swing gear and pinion	Change	PGL	11.5kg(25.4lb)	1
	15	Hydraulic oil return filter	Replace	-	-	2
	16	Drain filter cartridge	Replace	-	-	1
	19	Line filter element	Replace	-	-	1
	24	Travel reduction gear case	Change	GO	5.5(1.5)	2
2000 Hours	1	Hydraulic oil	Change	HO	230(61)	1
	4	Radiator coolant	Change	C	50(13.2)	1
	18	Hydraulic oil suction strainer	Check, Clean	-	-	1
As required	20	Aircon & heater recirculation filter	Clean, Replace	-	-	1
	20	Aircon & heater fresh filter	Clean, Replace	-	-	1
	21	Air cleaner element(Safety)	Replace	-	-	1
	21	Air cleaner element(Primary)	Replace	-	-	1

※ **Oil symbol**

Please refer to the recommended lubricants for specification.

DF : Diesel fuel GO : Gear oil HO : Hydraulic oil C : Coolant PGL : Grease EO : Engine oil