

A

Accel dial switch	3-14
After engine start	4-4
Air breather element	6-30
Air cleaner filter	6-23
Air conditioner & heater	3-20
Air conditioner filter	6-41
Alternate exit	0-11
Attachment lowering	4-23

B

Battery	6-38
Before starting engine	4-2
Boom lowering	4-23
Bucket clearance adjustment	6-36
Bucket replacement	6-34
Bucket selection guide	2-13
Bucket tooth replacement	6-35

C

Cab air filter	6-41
Cab device	3-1
Cassette & radio	3-32
Changing machine control pattern	4-26
Cigar lighter	3-27
Coolant	6-19
Cooling fan	6-24
MCU controller	3-29

D

Drain filter	6-30
--------------------	------

E

Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-38
Engine stop	4-6

F

Fan belt	6-23
Fuel filter	6-26
Fuel leakage	6-27

Fuel system bleeding	6-26
Fuel tank	6-24
Fuse box	3-29

H

Hydraulic breaker	8-1
Hydraulic oil changing	6-28
Hydraulic oil filling	6-27
Hydraulic oil level	6-27

L

Levers & pedals	3-18
Lifting capacities	2-9
Lubricant specification	2-21

M

Maintenance check list	6-11
Major component	2-1
Mode selection system	4-7
Monitor panel	3-2
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-22
Operating pattern	4-26

P

Pedals	3-19
Periodical replacement parts	3-18
Pilot filter	6-30
Pin & bushing adjustment	6-34
Prefilter	6-25

R

Radiator flushing	6-20
Radio	3-32
RCV lever lubricate	6-33
Recommended oils	2-21, 6-10
Relieving pressure	6-3
Resistor	3-30
Return filter	6-29

S

Safety hints	1-1
Safety labels	0-4
Safety parts	6-5
Seat	3-28
Seat belt	3-28
Service meter	3-30
Speciation for major component	2-17
Specification	2-2
Start switch	3-13
Storage	4-24
Suction strainer	6-29
Swing bearing grease	6-31
Swing gear & pinion grease	6-31
Swing reduction gear oil	6-31
Switch panel	3-11
Switches	3-13

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-15
Track adjustment	6-33
Track shoe selection	2-13
Transportation	5-1
Travel reduction gear oil	6-32
Travelling machine	4-14
Troubleshooting guide	7-1

U

Undercarriage	2-15
---------------------	------

W

Warming up operation	4-5
Warning lamps	3-2
Weight	2-8
Working device operation	4-12
Working method	4-16
Working range	2-4