

A

Accel dial switch	3-24
After engine start	4-4
Air breather element	6-32
Air cleaner filter	6-29
Air conditioner & heater	3-29
Air conditioner filter	6-43
Alternate exit	0-11
Attachment lowering	4-22

B

Battery	6-40
Before starting engine	4-2
Boom lowering	4-22
Bucket clearance adjustment	6-38
Bucket replacement	6-36
Bucket selection guide	2-22
Bucket tooth replacement	6-37

C

Cab air filter	6-43
Cab device	3-1
Changing machine control pattern	4-25
Cigar lighter	3-36
Cluster	3-2
Coolant	6-21
Cooling fan	6-26
Corrosion resister	6-20

D

Drain filter	6-32
--------------------	------

E

Emergency engine starting connector	3-48
Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-41
Engine stop	4-5

F

Fan belt	6-26
Fuel filter	6-30
Fuel leakage	6-31
Fuel system bleeding	6-30
Fuel tank	6-29-3
Fuse & relay box	3-47

G

Gauge	3-3
-------------	-----

H

Handsfree	3-37
Hydraulic breaker	8-1
Hydraulic oil changing	6-30
Hydraulic oil filling	6-30
Hydraulic oil level	6-30

L

LCD	3-2
Levers & pedals	3-27
Lifting capacities	2-9
Lubricant specification	2-30

M

Maintenance check list	6-11
Major component	2-1
MCU (Machine Control Unit)	3-47
Mode selection system	4-6
Monitor panel	3-2
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-25
Operating pattern	4-25

P

Pattern change valve	4-26
Pedals	3-28
Periodical replacement parts	6-5
Pilot filter	6-32
Pin & bushing lubrication	6-39
Prefilter	6-31
Pilot lamps	3-7

Q

Quick clamp	8-6
-------------------	-----

R

Radiator flushing	6-22
Radio & CD/MP3 player	3-41
RCV lever lubricate	6-35
Recommended oils	2-30, 6-10

Relieving pressure	6-3
Remote controller	3-39
Return filter	6-31
RCV lever operating pattern	4-25

S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
Seat	3-46
Seat belt	3-46
Service meter	3-48
Service socket	3-38, 3-48
Specification for major component	2-26
Specification	2-2
Start switch	3-23
Storage	4-24
Suction strainer	6-31
Swing bearing grease	6-33
Swing gear & pinion grease	6-34
Swing reduction gear oil	6-33
Switch panel	3-23
Switches	3-9, 3-23

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-14
Track adjustment	6-35
Track shoe selection	2-25
Transportation	5-1
Travel reduction gear oil	6-34
Traveling machine	4-12
Troubleshooting guide	7-1

U

Undercarriage	2-24
USB socket	3-37

W

Warming up operation	4-5
Warning lamps	3-4
Water filter	6-20
Weight	2-7
Windshield	3-49
Working device operation	4-11
Working method	4-15
Working range	2-5