

CONTENTS

Foreword	0-1	3. Starting and stop the engine	4-3
Before servicing this machine	0-2	4. Mode selection system	4-6
EC regulation approved	0-3	5. Operation of the working device	4-11
Table to enter S/No and distribution	0-4	6. Traveling of the machine	4-12
Safety labels	0-5	7. Efficient working method	4-15
Machine data plate	0-18	8. Operation in the special work sites	4-19
Guide (direction, S/No, symbol)	0-19	9. Normal operation of excavator	4-21
		10. Attachment lowering	4-22
		11. Storage	4-23
SAFETY HINTS			
1. Before operating the machine	1-1	TRANSPORTATION	
2. During operating the machine	1-16	1. Preparation for transportation	5-1
3. During maintenance	1-24	2. Dimension and weight	5-2
4. Parking	1-27	3. Loading the machine	5-5
		4. Fixing the machine	5-7
SPECIFICATIONS		5. Loading and unloading by crane	5-8
1. Major components	2-1	6. Disassembling for transportation	5-9
2. Specifications	2-2		
3. Working range	2-3	MAINTENANCE	
4. Weight	2-4	1. Instruction	6-1
5. Crusher	2-5	2. Tightening torque	6-6
6. Undercarriage	2-6	3. Fuel, coolant and lubricants	6-9
7. Specification for major components	2-7	4. Maintenance check list	6-11
8. Recommended oils	2-10	5. Maintenance chart	6-16
		6. Service instruction	6-18
CONTROL DEVICES		7. Electrical system	6-41
1. Cab devices	3-1	8. Air conditioner and heater	6-44
2. Cluster	3-2		
3. Switches	3-23	TROUBLESHOOTING GUIDE	
4. Levers and pedals	3-28	1. Engine	7-1
5. Air conditioner and heater	3-30	2. Electrical system	7-2
6. Others	3-34	3. Others	7-3
OPERATION		INDEX	8-1
1. Suggestion for new machine	4-1		
2. Check before starting the engine	4-2		