

CONTENTS

Foreword	0-1
Before servicing this machine	0-2
EC regulation approved	0-3
Table to enter S/No and distribution	0-4
Safety labels	0-5
Machine data plate	0-18
Guide (direction, S/No, symbol)	0-19

SAFETY HINTS

1. Before operating the machine	1-1
2. During operating the machine	1-6
3. During maintenance	1-14
4. Parking	1-17

SPECIFICATIONS

1. Major components	2-1
2. Specifications	2-5
3. Working range	2-9
4. Weight	2-11
5. Lifting capacities	2-12
6. Bucket selection guide	2-14
7. Undercarriage	2-15
8. Specification for major components	2-16
9. Recommended oils	2-19

CONTROL DEVICES

1. Cab devices	3-1
2. Cluster	3-2
3. Switches	3-23
4. Levers and pedals	3-28
5. Air conditioner and heater	3-30
6. Others	3-34

OPERATION

1. Suggestion for new machine	4-1
2. Check before starting the engine	4-2

3. Starting and stop the engine	4-3
4. Mode selection system	4-6
5. Operation of the working device	4-11
6. Operation of the can (option)	4-12
7. Traveling of the machine	4-14
8. Efficient working method	4-17
9. Operation in the special work sites	4-19
10. Normal operation of excavator	4-21
11. Attachment lowering	4-22
12. Storage	4-23

TRANSPORTATION

1. Preparation for transportation	5-1
2. Dimension and weight	5-2
3. Loading the machine	5-6
4. Fixing the machine	5-8
5. Loading and unloading by crane	5-9
6. Tilt the cab riser	5-10

MAINTENANCE

1. Instruction	6-1
2. Tightening torque	6-6
3. Fuel, coolant and lubricants	6-9
4. Maintenance check list	6-11
5. Maintenance chart	6-16
6. Service instruction	6-18
7. Electrical system	6-41
8. Air conditioner and heater	6-44

TROUBLESHOOTING GUIDE

1. Engine	7-1
2. Electrical system	7-2
3. Others	7-3

INDEX	8-1
-------------	-----