

A

Accel dial switch	3-24
After engine start	4-4
Air breather element	6-34
Air cleaner filter	6-29
Air conditioner & heater	3-30
Air conditioner filter	6-45
Alternate exit	0-11
Attachment lowering	4-22

B

Battery	6-42
Before starting engine	4-2
Boom lowering	4-22
Bucket clearance adjustment	6-40
Bucket replacement	6-38
Bucket selection guide	2-26
Bucket tooth replacement	6-39

C

Cab air filter	6-45
Cab device	3-1
Changing machine control pattern	4-25
Cigar lighter	3-34
Cluster	3-2
Coolant	6-21
Cooling fan	6-26
Corrosion resister	6-20

D

Drain filter	6-34
--------------------	------

E

Emergency engine speed control connector ..	3-54
Engine oil filter	6-18
Engine oil level	6-18
Engine starting & stop	4-3
Engine starting by booster	6-43
Engine stop	4-5

F

Fan belt	6-26
Fuel filter	6-30
Fuel leakage	6-31
Fuel system bleeding	6-30
Fuel tank	6-29-3
Fuse & relay box	3-53

G

Gauge	3-3
-------------	-----

H

Handsfree	3-37
Hydraulic breaker	8-1
Hydraulic oil changing	6-32
Hydraulic oil filling	6-32
Hydraulic oil level	6-32

L

LCD	3-2
Levers & pedals	3-28
Lifting capacities	2-5
Lubricant specification	2-12

M

Maintenance check list	6-11
Major component	2-1
MCU (Machine Control Unit)	3-53
Mode selection system	4-6
Monitor panel	3-2
Mounting and dismounting	1-12

N

New machine operation	4-1
-----------------------------	-----

O

Oil cooler	6-25
Operating pattern	4-25

P

Pattern change valve	4-26
Pedals	3-29
Periodical replacement parts	6-5
Pilot filter	6-34
Pin & bushing lubrication	6-41
Prefilter	6-31
Pilot lamps	3-7

Q

Quick clamp	8-6
-------------------	-----

R

Radiator flushing	6-22
Radio & USB player	3-39
RCV lever lubricate	6-37
Recommended oils	2-12, 6-10

Relieving pressure	6-3
Remote controller	3-37
Return filter	6-33
RCV lever operating pattern	4-25

S

Safety hints	1-1
Safety labels	0-5
Safety parts	6-5
Seat	3-52
Seat belt	3-52
Service meter	3-54
Service socket	3-35, 3-54
Specification for major component	2-9
Specification	2-2
Start switch	3-23
Storage	4-24
Suction strainer	6-33
Swing bearing grease	6-35
Swing gear & pinion grease	6-36
Swing reduction gear oil	6-35
Switch panel	3-23
Switches	3-9, 3-23

T

Torques-major component	6-8
Torques-fastener	6-6
Towing machine	4-14
Track adjustment	6-37
Track shoe selection	2-7
Transportation	5-1
Travel reduction gear oil	6-36
Traveling machine	4-12
Troubleshooting guide	7-1

U

Undercarriage	2-7
USB socket	3-35

W

Warming up operation	4-4
Warning lamps	3-4
Water filter	6-20
Weight	2-4
Windshield	3-55
Working device operation	4-11
Working method	4-15
Working range	2-3