

## A

Accel dial switch .....	3-10
After engine start .....	4-4
Air breather element .....	6-29
Air cleaner filter .....	6-25
Air conditioner & heater .....	3-15
Air conditioner filter .....	6-40
Alternate exit .....	0-12
Attachment lowering .....	4-23

## B

Battery .....	6-37
Before starting engine .....	4-2
Boom lowering .....	4-23
Bucket clearance adjustment .....	6-37
Bucket replacement .....	6-35
Bucket selection guide .....	2-10
Bucket tooth replacement .....	6-36

## C

Cab air filter .....	6-42
Cab device .....	3-1
Cassette & radio .....	3-18
Changing machine control pattern .....	4-26
Cigar lighter .....	3-22
Coolant .....	6-20
Coolant filter .....	6-27
Cooling fan .....	6-25
CPU controller .....	3-23

## D

Drain filter .....	6-30
--------------------	------

## E

Emergency engine speed control .....	3-24
Emergency engine starting connector .....	3-24
Engine oil filter .....	6-18
Engine oil level .....	6-18
Engine starting & stop .....	4-3
Engine starting by booster .....	6-40
Engine stop .....	4-5

## F

Fan belt .....	6-24
Fuel filter .....	6-26
Fuel leakage .....	6-28

Fuel tank .....	6-26
Fuse box .....	3-23

## H

Hydraulic breaker .....	8-1
Hydraulic oil changing .....	6-29
Hydraulic oil filling .....	6-28
Hydraulic oil level .....	6-28

## L

Levers & pedals .....	3-13
Lifting capacities .....	2-6
Lubricant specification .....	2-18

## M

Maintenance check list .....	6-12
Major component .....	2-14
Mode selection system .....	4-6
Monitor display .....	4-10
Monitor panel .....	3-2
Mounting and dismounting .....	1-12

## N

New machine operation .....	4-1
-----------------------------	-----

## O

Oil cooler .....	6-23
Operating pattern .....	4-26

## P

Pedals .....	3-14
Periodical replacement parts .....	3-13
Pilot filter .....	6-31
Pin & bushing adjustment .....	6-38
Prolix resistor .....	3-24

## R

Radiator flushing .....	6-20
Radio .....	3-18
RCV lever lubricate .....	6-33
Recommended oils .....	2-18, 6-10
Relieving pressure .....	6-3
Return filter .....	6-29

## S

Safety hints .....	1-1
Safety labels .....	0-5
Safety parts .....	6-5
Seat .....	3-22
Seat belt .....	3-22
Service meter .....	3-24
Speciation for major component .....	2-14
Specification .....	2-2
Start switch .....	3-9
Storage .....	4-25
Suction strainer .....	6-29
Swing bearing grease .....	6-32
Swing gear & pinion grease .....	6-32
Swing reduction gear oil .....	6-31
Switch panel .....	3-7
Switches .....	3-9

## T

Torques-major component .....	6-8
Torques-fastener .....	6-6
Towing machine .....	4-15
Track adjustment .....	6-34
Track shoe selection .....	2-12
Transportation .....	5-1
Travel reduction gear oil .....	6-33
Travelling machine .....	4-14
Troubleshooting guide .....	7-1

## U

Undercarriage .....	2-12
---------------------	------

## W

Warming up operation .....	4-5
Warning lamps .....	3-3
Water separator .....	6-26
Weight .....	2-5
Working device operation .....	4-12
Working method .....	4-16
Working range .....	2-3