

INTRODUCTION

1. EC Declaration of Conformity.....	0-1
2. Disclaimer.....	0-2
3. Foreword.....	0-3
4. Before servicing this machine.....	0-4
5. EC regulation approved.....	0-5
6. Table to enter serial no. and distribu- tor.....	0-6
7. Safety labels.....	0-7
8. Machine data plate.....	0-19

GUIDE

SAFETY HINTS

1. Before operating the machine.....	1-1
2. During the operation.....	1-6
3. During the maintenance.....	1-14
4. Parking.....	1-17

SPECIFICATIONS

1. Major components.....	2-1
2. Specifications.....	2-3
3. Working range.....	2-10
4. Weight.....	2-18
5. Lifting capacities.....	2-21
6. Bucket selection guide.....	2-26
7. Undercarriage.....	2-29
8. Specifications for major components	2-32
9. Recommended oils.....	2-35

CONTROL DEVICES

1. Cab devices.....	3-1
2. Cluster.....	3-2
3. Switches.....	3-25
4. Levers and pedals.....	3-31
5. Full auto air conditioner and heater (Standard).....	3-34
6. Semi auto air conditioner and heater (Option).....	3-38
7. Others.....	3-41

OPERATION

1. Suggestions for new machines.....	4-1
2. Check before starting the engine.....	4-2
3. Starting and stopping the engine.....	4-3
4. Mode selection system.....	4-8
5. Operation of working device.....	4-13
6. Traveling of the machine.....	4-14

7. Efficient working method (R480LC-9, R480-9 and R520LC-9 only).....	4-17
8. Efficient working method (R520LC-9 DM only).....	4-21
9. Operation in special work sites.....	4-22
10. Normal operation of excavator.....	4-24
11. Normal operation of excavator (R520LC-9 DM only).....	4-25
12. Attachment lowering (When engine is stopped).....	4-26
13. Storage.....	4-27
14. RCV lever operating pattern.....	4-29
15. Switching hydraulic attachment cir- cuit.....	4-32
16. Installation and removal of the dem- olition front (for R520LC-9 DM only)....	4-33
17. Installation/Removal of standard backhoe front.....	4-35

TRANSPORTATION

1. Preparation for transportation.....	5-1
2. Dimension and weight.....	5-2
3. Loading the machine.....	5-10
4. Fixing the machine.....	5-12
5. Loading and unloading by crane.....	5-13
6. Disassembling for transportation (R520LC-9 only).....	5-14
7. Adjustable track gauge (R520LC-9 only).....	5-16

MAINTENANCE

1. Instruction.....	6-1
2. Tightening torque.....	6-5
3. Fuel, coolant and lubricants.....	6-8
4. Maintenance checklist.....	6-10
5. Maintenance chart.....	6-14
6. Service instruction.....	6-17
7. Electrical system.....	6-40
8. Air conditioner and heater.....	6-43

TROUBLESHOOTING GUIDE

1. Engine.....	7-1
2. Electrical system.....	7-2
3. Others.....	7-3

HYDRAULIC BREAKER AND QUICK CLAMP

1. Selecting the hydraulic breaker.....	8-1
2. Circuit configuration.....	8-2
3. Maintenance.....	8-3