

A

Accel dial switch.....	3-26
Adjustable track gauge.....	5-16
After engine start.....	4-5
Air breather element.....	6-31
Air cleaner filter.....	0-8, 6-24
Air conditioner & heater, full auto.....	3-34
Air conditioner & heater, semi auto.....	3-38
Air conditioner filter.....	6-43
Alternate exit.....	0-14
Attachment lowering.....	4-26

B

Battery.....	6-40
Before starting the engine.....	4-2
Boom lowering.....	4-26
Bucket clearance adjustment.....	6-37
Bucket replacement.....	6-35
Bucket selection guide.....	2-26
Bucket tooth replacement.....	6-36

C

Cab device.....	3-1
Changing machine control pattern.....	4-29
Charge air cooler.....	6-23
Cigar lighter.....	3-41
Cluster.....	3-2
Coolant.....	6-19
Coolant filter.....	6-27
Cooling fan.....	6-24

D

Disassembling for transportation.....	5-14
Drain filter.....	6-31

E

Emergency engine starting connector.....	3-59
Emergency exit.....	0-14
Engine oil filter.....	6-17
Engine oil level.....	6-17
Engine starting & stopping.....	4-3
Engine starting with booster cable.....	6-41
Engine stop.....	4-7

F

Fan belt.....	6-23
Fuel filter.....	6-25
Fuel leakage.....	6-28
Fuel tank.....	6-25
Fuel/water separator.....	6-26
Fuse & relay box.....	3-58

G

Gauges.....	3-3
-------------	-----

H

Handsfree.....	3-42
Hydraulic breaker.....	8-1
Hydraulic oil changing.....	6-29
Hydraulic oil filling.....	6-29
Hydraulic oil level.....	6-28

I

Installation of high-reach demolition boom....	4-33
--	------

Installation of standard backhoe front.....	4-35
---	------

L

LCD.....	3-2
Levers and pedals.....	3-31
Lifting capacities.....	2-21
Lubricant specifications.....	6-8
Lubrication specifications.....	6-15

M

Machine dimensions.....	5-2
Maintenance checklist.....	6-10
Major components.....	2-1
MCU (Machine control unit).....	3-58
Mode selection system.....	4-8
Monitor panel.....	3-2
Mounting and dismounting.....	1-13

N

New machine operation.....	4-1
----------------------------	-----

O

Oil cooler.....	6-22
Operating pattern.....	4-29

P

Pedals.....	3-31
Periodical replacement of parts.....	6-3
Pilot lamps.....	3-6
Pilot line filter.....	6-31
Pin & bushing adjustment.....	6-38, 6-39
Prefilter.....	6-26

Q

Quick clamp.....	8-6
------------------	-----

R

Radiator flushing.....	6-20
Radio & MP3 USB player.....	3-46
RCV lever lubrication.....	6-34
RCV lever operating pattern.....	4-29
Recommended oils.....	2-35, 6-9
Relieving pressure.....	6-2
Remote controller.....	3-44
Removal of standard backhoe front.....	4-35
Removal of the high-reach demolition boom....	4-33
Return filter.....	6-30

S

Safety hints.....	1-1
Safety labels.....	0-7
Safety parts.....	6-3
Seat.....	3-57
Seat belt.....	3-57
Service meter.....	3-59
Service socket.....	3-43, 3-59
Specifications.....	2-3
Specifications for major components.....	2-32
Starting switch.....	3-25
Storage.....	4-27

Suction strainer.....	6-30
Swing bearing grease.....	6-33
Swing gear & pinion grease.....	6-33
Swing reduction gear oil.....	6-32
Switch panel.....	3-25
Switches.....	3-9, 3-25

T

Torques, fastener.....	6-5
Torques, major components.....	6-6
Towing the machine.....	4-16
Track adjustment.....	6-34
Track shoe selection.....	2-29, 2-30
Transportation.....	5-1
Travel reduction gear oil.....	6-33
Traveling machine.....	4-14

U

Undercarriage.....	2-29
USB socket.....	3-42

W

Warming up operation.....	4-6
Warning lamps.....	3-4
Weight.....	2-18, 5-2
Windshield.....	3-60
Working device operation.....	4-13
Working method.....	4-17
Working range.....	2-10